



NETWORK AUDIO PLAYER

DN-700H

Owner's Manual



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION:

USE OF CONTROLS OR ADJUSTMENTS OR REFORMATION OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

IMPORTANT TO SAFETY

WARNING:

To reduce the risk of fire and electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION

1. Handle the power supply cord carefully

Do not damage or deform the power supply cord. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord.

2. Do not open the rear cover

In order to prevent electric shock, do not open the top cover.
If problems occur, contact your DENON DEALER.

3. Do not place anything inside

Do not place metal objects or spill liquid inside the system.
Electric shock or malfunction may result.

Please, record and retain the Model name and serial number of your set shown on the rating label.

Model No. DN-700H

Serial No. _____

FCC INFORMATION (For US customers)

1. COMPLIANCE INFORMATION

Product Name: Network Audio Player

Model Number: DN-700H

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

Denon Professional div. D&M Professional

1100 Maplewood Drive Itasca, IL 60143

Tel. 630-741-0330

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the product.

3. IMPORTANT

When connecting this product to network hub or router, use only a shielded STP or ScTP LAN cable which is available at retailer.

Follow all installation instructions. Failure to follow instructions could void your authority, granted by the FCC, to use the product.

4. NOTE

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

For Canadian customers:

This Class B apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IMPORTANT SAFETY INSTRUCTIONS

READ BEFORE OPERATING EQUIPMENT

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



Additional Safety Information!

16. This product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin.
This plug will only fit into a grounding-type power outlet.
If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

CAUTION:

(English)

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.
The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.
Do not expose batteries to excessive heat such as sunshine, fire or the like.

VORSICHT:

(Deutsch)

Um dieses Gerät vollständig von der Stromversorgung abzutrennen, trennen Sie bitte den Netzstecker von der Wandsteckdose ab.
Die Hauptstecker werden verwendet, um die Stromversorgung zum Gerät völlig zu unterbrechen; er muss für den Benutzer gut und einfach zu erreichen sein.
Setzen Sie Batterien nicht übermäßiger Wärme aus, z. B. Sonnenstrahlung, Feuer oder dergleichen.

PRECAUTION:

(Français)

Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale.
La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.
N'exposez pas les batteries à une chaleur excessive telle que le soleil, le feu ou autre.

ATTENZIONE:

(Italiano)

Per scollegare definitivamente questo prodotto dalla rete di alimentazione elettrica, togliere la spina dalla relativa presa.
La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'unità e deve essere facilmente accessibile all'utente.
Non esporre le batterie a un calore eccessivo, per esempio al sole, al fuoco o altre fonti.

PRECAUCIÓN:

(Español)

Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared.
El enchufe de la alimentación se utiliza para interrumpir por completo el suministro de alimentación a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso.
No exponga las pilas a calor excesivo, como a la luz solar, el fuego, etc.

VOORZICHTIGHEID:

(Nederlands)

Om de voeding van dit product volledig te onderbreken moet de stekker uit het stopcontact worden getrokken.
De netstekker wordt gebruikt om de stroomtoevoer naar het toestel volledig te onderbreken en moet voor de gebruiker gemakkelijk bereikbaar zijn.
Stel de batterijen niet bloot aan felle zonneschijn, brand, enzovoorts.

FÖRSIKTIHETSMÅTT:

(Svenska)

Koppla loss stickproppen från eluttaget för att helt skilja produkten från nätet.
Stickproppen används för att helt bryta strömförsörjningen till apparaten, och den måste vara lättillgänglig för användaren.
Utsätt inte batterierna för stark hetta såsom solsken, eld eller liknande.

ATENÇÃO:

(Português)

Para desligar completamente este produto da corrente, desligue a ficha da tomada elétrica.
A ficha elétrica é utilizada para interromper completamente a alimentação da unidade e deve estar num local onde o utilizador lhe possa aceder facilmente.
Não exponha as pilhas a fontes de calor excessivo, como luz solar, fogo ou semelhantes.

☐ NOTE ON USE / HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION / NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA / NOTA SOBRE UTILIZAÇÃO

WARNINGS	WARNHINWEISE	AVERTISSEMENTS	AVVERTENZE	ADVERTENCIAS	WAARSCHUWINGEN	VARNINGAR	AVISOS
<ul style="list-style-type: none"> • Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack. • Handle the power cord carefully. Hold the plug when unplugging the cord. • Keep the unit free from moisture, water, and dust. • Unplug the power cord when not using the unit for long periods of time. • Do not obstruct the ventilation holes. • Do not let foreign objects into the unit. • Do not let insecticides, benzene, and thinner come in contact with the unit. • Never disassemble or modify the unit in any way. • Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths or curtains. • Naked flame sources such as lighted candles should not be placed on the unit. • Observe and follow local regulations regarding battery disposal. • Do not expose the unit to dripping or splashing fluids. • Do not place objects filled with liquids, such as vases, on the unit. • Do not handle the mains cord with wet hands. • When the switch is in the OFF (STANDBY) position, the equipment is not completely switched off from MAINS. • The equipment shall be installed near the power supply so that the power supply is easily accessible. 	<ul style="list-style-type: none"> • Vermeiden Sie hohe Temperaturen. Beachten Sie, dass eine ausreichende Belüftung gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird. • Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen. • Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern. • Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker. • Decken Sie den Lüftungsbereich nicht ab. • Lassen Sie keine fremden Gegenstände in das Gerät kommen. • Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen. • Versuchen Sie niemals das Gerät auseinander zu nehmen oder zu verändern. • Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o. Ä. behindert werden. • Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden. • Bitte beachten Sie bei der Entsorgung der Batterien die örtlich geltenden Umweltbestimmungen. • Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden. • Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden. • Das Netzkabel nicht mit feuchten oder nassen Händen anfassen. • Wenn der Schalter ausgeschaltet ist (OFF (STANDBY)-Position), ist das Gerät nicht vollständig vom Stromnetz (MAINS) abgetrennt. • Das Gerät sollte in der Nähe einer Netzsteckdose aufgestellt werden, damit es leicht an das Stromnetz angeschlossen werden kann. 	<ul style="list-style-type: none"> • Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère. • Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. • Protéger l'appareil contre l'humidité, l'eau et la poussière. • Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. • Ne pas obstruer les trous d'aération. • Ne pas laisser des objets étrangers dans l'appareil. • Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. • Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre. • Ne pas recouvrir les orifices de ventilation avec des objets tels que des journaux, nappes ou rideaux. Cela entraverait la ventilation. • Ne jamais placer de flamme nue sur l'appareil, notamment des bougies allumées. • Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées. • L'appareil ne doit pas être exposé à l'eau ou à l'humidité. • Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil. • Ne pas manipuler le cordon d'alimentation avec les mains mouillées. • Lorsque l'interrupteur est sur la position OFF (STANDBY), l'appareil n'est pas complètement déconnecté du SECTEUR (MAINS). • L'appareil sera installé près de la source d'alimentation, de sorte que cette dernière soit facilement accessible. 	<ul style="list-style-type: none"> • Evitate di esporre l'unità a temperature elevate. Assicuratevi che vi sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio. • Maneggiate il cavo di alimentazione con attenzione. Tenete ferma la spina quando scollegate il cavo dalla presa. • Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere. • Scollegate il cavo di alimentazione quando prevedete di non utilizzare l'unità per un lungo periodo di tempo. • Non coprite i fori di ventilazione. • Non inserite corpi estranei all'interno dell'unità. • Assicuratevi che l'unità non entri in contatto con insetticidi, benzolo o solventi. • Non smontate né modificate l'unità in alcun modo. • Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via. • Non posizionate sull'unità fiamme libere, come ad esempio candele accese. • Prestate attenzione agli aspetti legati alla tutela dell'ambiente nello smaltimento delle batterie. • L'apparecchiatura non deve essere esposta a gocciolii o spruzzi. • Non posizionate sull'unità alcun oggetto contenente liquidi, come ad esempio i vasi. • Non toccare il cavo di alimentazione con le mani bagnate. • Quando l'interruttore è nella posizione OFF (STANDBY), l'apparecchiatura non è completamente scollegata da MAINS. • L'apparecchio va installato in prossimità della fonte di alimentazione, in modo che quest'ultima sia facilmente accessibile. 	<ul style="list-style-type: none"> • Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola. • Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía. • Mantenga el equipo libre de humedad, agua y polvo. • Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo. • No obstruya los orificios de ventilación. • No deje objetos extraños dentro del equipo. • No permita el contacto de insecticidas, gasolina y diluyentes con el equipo. • Nunca desarme o modifique el equipo de ninguna manera. • La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles o cortinas. • No deberán colocarse sobre el aparato fuentes inflamables sin protección, como velas encendidas. • A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente. • No exponer el aparato al goteo o salpicaduras cuando se utilice. • No colocar sobre el aparato objetos llenos de líquido, como jarros. • No maneje el cable de alimentación con las manos mojadas. • Cuando el interruptor está en la posición OFF (STANDBY), el equipo no está completamente desconectado de la alimentación MAINS. • El equipo se instalará cerca de la fuente de alimentación de manera que resulte fácil acceder a ella. 	<ul style="list-style-type: none"> • Vermijd hoge temperaturen. Zorg er bij installatie in een audiorack voor, dat de door het toestel geproduceerde warmte goed kan worden afgevoerd. • Hanteer het netsnoer voorzichtig. Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld. • Laat geen vochtigheid, water of stof in het apparaat binnendringen. • Neem altijd het netsnoer uit het stopcontact wanneer het apparaat gedurende een lange periode niet wordt gebruikt. • De ventilatieopeningen mogen niet worden geblokkeerd. • Laat geen vreemde voorwerpen in dit apparaat vallen. • Voorkom dat insecticiden, benzeen of verfverdunder met dit toestel in contact komen. • Dit toestel mag niet gedemonteerd of aangepast worden. • De ventilatie mag niet worden belemmerd door de ventilatieopeningen af te dekken met bijvoorbeeld kranten, een tafelkleed of gordijnen. • Plaats geen open vlammen, bijvoorbeeld een brandende kaars, op het apparaat. • Houd u steeds aan de milieuvorschriften wanneer u gebruikte batterijen wegdoet. • Stel het apparaat niet bloot aan druppels of spatten. • Plaats geen voorwerpen gevuld met water, bijvoorbeeld een vaas, op het apparaat. • Raak het netsnoer niet met natte handen aan. • Als de schakelaar op OFF (STANDBY) staat, is het apparaat niet volledig losgekoppeld van de netspanning (MAINS). • De apparatuur wordt in de buurt van het stopcontact geïnstalleerd, zodat dit altijd gemakkelijk toegankelijk is. 	<ul style="list-style-type: none"> • Undvik höga temperaturer. Se till att det finns möjlighet till god värmeavledning vid montering i ett rack. • Hantera nätkabeln varsamt. Håll i kabeln när den kopplas från el-uttaget. • Utsätt inte apparaten för fukt, vatten och damm. • Koppla loss nätkabeln om apparaten inte kommer att användas i lång tid. • Täpp inte till ventilationsöppningarna. • Se till att främmande föremål inte tränger in i apparaten. • Se till att inte insektsmedel på spraybruk, bensen och thinner kommer i kontakt med apparatens hölje. • Ta inte isär apparaten och försök inte bygga om den. • Ventilationen bör inte förhindras genom att täcka för ventilationsöppningarna med föremål såsom tidningar, bordsdukar eller gardiner. • Placera inte öppen eld, t.ex. tända ljus, på apparaten. • Tänk på miljöaspekterna när du bortskaffar batterier. • Apparaten får inte utsättas för vätska. • Placera inte föremål fyllda med vätska, t.ex. vaser, på apparaten. • Hantera inte nätsladden med våta händer. • Även om strömbrytaren står i det avstängda läget OFF (STANDBY), så är utrustningen inte helt bortkopplad från det elektriska nätet (MAINS). • Utrustningen ska vara installerad nära strömuttaget så att strömförsörjningen är lätt att tillgå. 	<ul style="list-style-type: none"> • Evite temperaturas altas. Assegure uma suficiente dispersão do calor quando a unidade for instalada numa prateleira. • Manuseie o cabo de alimentação com cuidado. Puxe pela ficha quando desligar o cabo de alimentação. • Mantenha a unidade afastada da humidade, da água e do pó. • Desligue o cabo de alimentação quando não estiver a utilizar a unidade por longos períodos de tempo. • Não obstrua os orifícios de ventilação. • Não deixe objectos estranhos dentro da unidade. • Não permita que insecticidas, benzina e diluente entrem em contacto com a unidade. • Nunca desmonte ou modifique de alguma forma a unidade. • A ventilação não deve ser obstruída, tapando as aberturas de ventilação com objectos, como jornais, toalhas ou cortinas. • Não devem ser colocadas junto à unidade fontes de chama aberta, como velas acesas. • Respeite as regulamentações locais relativas à eliminação de pilhas. • Não exponha a unidade a gotejamento ou salpicos de líquidos. • Não coloque objectos com líquidos, como jarros, em cima da unidade. • Não manuseie o cabo de alimentação com as mãos molhadas. • Quando o interruptor se encontra na posição OFF (STANDBY), o equipamento não está completamente desligado da REDE ELÉCTRICA. • O equipamento deve ser instalado junto da fonte de alimentação, para que a fonte de alimentação esteja facilmente acessível.

•DECLARATION OF CONFORMITY**(English)**

We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards:

EN60065, EN55013, EN55020, EN61000-3-2 and EN61000-3-3.

Following the provisions of Low Voltage Directive 2006/95/EC and EMC Directive 2004/108/EC, the EC regulation 1275/2008 and its frame work Directive 2009/125/EC for Energy-related Products (ErP).

•ÜBEREINSTIMMUNGSERKLÄRUNG**(Deutsch)**

Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht:

EN60065, EN55013, EN55020, EN61000-3-2 und EN61000-3-3.

Gemäß den Bestimmungen der Niederspannungsrichtlinie 2006/95/EG und EMV Richtlinie 2004/108/EG, der Verordnung (EG) Nr. 1275/2008 der Kommission und deren Rahmenrichtlinie 2009/125/EG zu energieverbrauchsrelevanten Produkten (ErP).

•DECLARATION DE CONFORMITE**(Français)**

Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants:

EN60065, EN55013, EN55020, EN61000-3-2 et EN61000-3-3.

Selon la directive 2006/95/EC concernant la basse tension et la directive CEM 2004/108/EC, la réglementation européenne 1275/2008 et la directive 2009/125/EC établissant un cadre de travail applicable aux produits liés à l'énergie (ErP).

•DICHIAZIONE DI CONFORMITÀ**(Italiano)**

Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative:

EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3.

Facendo seguito alle disposizioni della direttiva sul basso voltaggio 2006/95/EC alla direttiva EMC 2004/108/EC, alla norma EC 1275/2008 e alla relativa legge quadro 2009/125/EC in materia di prodotti alimentati ad energia (ErP).

QUESTO PRODOTTO E' CONFORME

AL D.M. 28/08/95 N. 548

•DECLARACIÓN DE CONFORMIDAD**(Español)**

Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares:

EN60065, EN55013, EN55020, EN61000-3-2 y EN61000-3-3.

De acuerdo con la directiva sobre baja tensión 2006/95/CE y la directiva sobre CEM 2004/108/CE, la normativa CE 1275/2008 y su directiva marco 2009/125/EC para productos relacionados con la energía (ErP).

•EENVORMIGHEIDSVKLAARING**(Nederlands)**

Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit produkt, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen:

EN60065, EN55013, EN55020, EN61000-3-2 en EN61000-3-3.

Volgens de voorzieningen van lage spanningsrichtlijn 2006/95/EC en EMC-richtlijn 2004/108/EC, de EU-richtlijn 1275/2008 en de kaderrichtlijn 2009/125/EC voor energieverbruikende producten (ErP).

•ÖVERENSSTÄMMELSEINTYG**(Svenska)**

Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder:

EN60065, EN55013, EN55020, EN61000-3-2 och EN61000-3-3.

Uppfyller reglerna i lågspänningsdirektivet 2006/95/EC och EMC-direktivet 2004/108/EC, EU-förordningen 1275/2008 och ramverksdirektivet 2009/125/EC för energirelaterade produkter (ErP).

•DECLARAÇÃO DE CONFORMIDADE**(Português)**

Declaramos sob nossa exclusiva responsabilidade que este produto, ao qual se refere esta declaração, se encontra em conformidade com as seguintes normas:

EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3.

De acordo com as provisões da Directiva de Baixa Tensão 2006/95/CE e a Directiva CEM 2004/108/CE, o Regulamento (CE) 1275/2008 e a respectiva Directiva-Quadro 2009/125/CE para produtos relacionados com o consumo de energia (ErP).

D&M Professional Europe
A division of D&M Europe B.V.
Beemdstraat 11
5653 MA Eindhoven
The Netherlands

A NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal. This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.

HINWEIS ZUM RECYCLING:

Das Verpackungsmaterial dieses Produktes ist zum Recyceln geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling-Vorschriften.

Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen.

Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden; bitte entsorgen Sie die Batterien gemäß der örtlichen Vorschriften.

Dieses Produkt und das im Lieferumfang enthaltene Zubehör (mit Ausnahme der Batterien!) entsprechen der WEEE-Direktive.

UNE REMARQUE CONCERNANT LE RECYCLAGE:

Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer des matériaux conformément aux lois sur le recyclage en vigueur.

Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations en vigueur.

Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles.

Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE.

NOTA RELATIVA AL RICICLAGGIO:

I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smettere i materiali conformemente alle normative locali sul riciclaggio.

Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore.

Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici.

Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

ACERCA DEL RECICLAJE:

Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad.

Quando se deshaga de la unidad, cumpla con las reglas o reglamentos locales.

Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos.

Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas.

EEN AANTEKENING MET BETREKKING TOT DE RECYCLING:

Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden. Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften.

Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op.

Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd.

Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing.

OBSERVERA ANGÅENDE ÅTERVINNING:

Produktens emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser. När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.

Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall.

Denna apparat och de tillbehör som levereras med den uppfyller gällande WEEE-direktiv, med undantag av batterierna.

UMA NOTA SOBRE A RECICLAGEM:

Os materiais de embalagem deste produto são recicláveis e podem ser reutilizados. Elimine quaisquer materiais de acordo com as normas de reciclagem locais.

Quando eliminar a unidade, obedeça às regras ou normas locais.

As pilhas nunca devem ser deitadas fora ou incineradas, mas sim eliminadas de acordo com as normas locais relativas aos resíduos químicos.

Este produto e os respectivos acessórios embalados em conjunto constituem o produto aplicável de acordo com a directiva WEEE, excepto as pilhas.



Pb

CAUTIONS ON INSTALLATION

VORSICHTSHINWEISE ZUR AUFSTELLUNG

PRÉCAUTIONS D'INSTALLATION


 
PRECAUZIONI SULL'INSTALLAZIONE

EMPLAZAMIENTO DE LA INSTALACIÓN

VOORZORGSMAATREGELEN BIJ DE INSTALLATIE

FÖRSIKTIGHET VID INSTALLATIONEN

PRECAUÇÕES DE INSTALAÇÃO

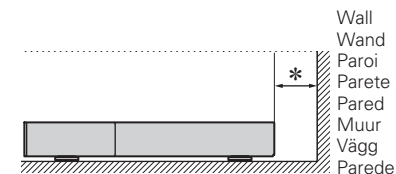

- * **For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.**
 - More than 0.1 m (4 in.) is recommended.
 - Do not place any other equipment on this unit.
- * **Stellen Sie das Gerät nicht an einem geschlossenen Ort, wie in einem Bücherregal oder einer ähnlichen Einrichtung auf, da dies eine ausreichende Belüftung des Geräts behindern könnte.**
 - Empfohlen wird über 0,1 m.
 - Keine anderen Gegenstände auf das Gerät stellen.
- * **Pour permettre la dissipation de chaleur requise, n'installez pas cette unité dans un espace confiné tel qu'une bibliothèque ou un endroit similaire.**
 - Une distance de plus de 0,1 m (4 po.) est recommandée.
 - Ne placez aucun matériel sur cet appareil.
- * **Per una dispersione adeguata del calore, non installare questa apparecchiatura in uno spazio ristretto, come ad esempio una libreria o simili.**
 - Si raccomanda una distanza superiore ai 0,1 m.
 - Non posizionare alcun altro oggetto o dispositivo su questo dispositivo.
- * **Para la dispersión del calor adecuadamente, no instale este equipo en un lugar confinado tal como una librería o unidad similar.**
 - Se recomienda dejar más de 0,1 m (4 pulg.) alrededor.
 - No coloque ningún otro equipo sobre la unidad.
- * **Plaats dit toestel niet in een kleine afgesloten ruimte, zoals een boekenkast e.d., omdat anders de warmte niet op gepaste wijze kan worden afgevoerd.**
 - Meer dan 0,1 m is aanbevolen.
 - Plaats geen andere apparatuur op het toestel.
- * **För att tillförsäkra god värmeavledning får utrustningen inte installeras i instängda utrymmen, som t.ex. en bokhylla eller liknande.**
 - Mer än 0,1 m rekommenderas.
 - Placera ingen annan utrustning ovanpå den här enheten.
- * **Para uma correcta dispersão do calor, não instale esta unidade num espaço confinado, como uma estante de livros ou uma estrutura semelhante.**
 - São recomendados mais de 0,1 m.
 - Não coloque qualquer outro equipamento sobre esta unidade.

Getting started

Thank you for purchasing this DENON Professional product. To ensure proper operation, please read these owner's manual carefully before using the product. After reading them, be sure to keep them for future reference.

Contents

Getting started	1
Accessories	2
Main features	2
Caution	2
Cautions on handling	3
About this manual	3
Remote operation	3
About the remote control unit	3
Connections	4
Audio connections	4
Analog connections	4
Digital connections	5
Connecting headphones	5
Connecting an External control device	5
Connecting an antenna	6
Connecting to a network (LAN)	7
Required system	7
Connecting the power cord	8
Basic operations	8
Preparations	8
Turning the power on	8
Turning the power to standby mode	8
Operations possible during playback	9
Selecting the input source	9
Switching the display's brightness	9
Network First Setup	10
① Preparation (connection)	10
② Connecting to the access point	10
③ Setting the network standby	11
To perform "Network First Setup" again	11
Network audio playback	12
Listening to internet radio	12
Registering and receiving private radio stations	14
Music Server	16
Listening to Pandora® internet radio (U.S.A. and Canada models only)	17
Listening to Rhapsody (U.S.A. and Canada models only)	19

Tuning in radio stations	20
Listening to FM/AM broadcasts	20
Automatically presetting FM stations (Auto Preset)	20
Presetting FM/AM stations manually	21
Listening to preset stations	21
Calling stations registered in Preset List	21
Deleting stations registered in Preset List	21
Favorite function	22
Registering stations or files to the favorites list	22
Calling stations or files from the favorites list	22
Calling the most recently played station or file from the favorites list	22
Deleting stations or files from the favorite list	22
iPod® playback	23
Playing an iPod	23
Disconnecting the iPod	25
USB memory device playback	25
Playing files stored on USB memory devices	25
Removing the USB memory device	25
Playing repeatedly (Repeat playback)	26
Playing random order (Random playback)	26
AirPlay function	27
Streaming music stored in iPhone or iPod touch directly to the unit	27
Playing iTunes music on this unit	27
Remote operations	27

Advanced operations	28
Menu map	28
Network Setup [Network]	29
Connecting wired LAN	29
Other network settings	30
Update Notification	31
Upgrade Notification	31
Other Setup [Other]	32
Auto Standby	32
Power on Play	32
IR Remote	33
Key Lock	33
Screen Saver	33
Firmware Update	34
Add New Feature	34
Language	35

Tuning in radio stations (Europe model only)	36
RDS (Radio Data System)	36
PTY (Program Type)	36
TP (Traffic Program)	37
RT (Radio Text)	37
Other functions	38
Inputting characters	38
Last function memory	39
Locking operation buttons on the unit	39
Cancelling the operation button lock on the unit	39
Restart	39
Resetting the microprocessor	39
Serial remote control function	40
RS-232C control	40
IP Control (Ethernet)	40
Communication protocol	40

Information	46
Part names and functions	46
Front panel	46
Rear panel	46
Remote control	47
iPod®	49
USB memory device	49
Important information	49
Network audio	50
Important information	50

Glossary of terms	51
--------------------------------	----

Troubleshooting	52
------------------------------	----


Specifications	55
-----------------------------	----

Index	56
--------------------	----

Accessories

Check that the following parts are supplied with the product.

- | | |
|--|---|
| ① Owner's manual (This manual)..... | 1 |
| ② CD-ROM (Owner's manual) | 1 |
| ③ Warranty (for North America model only)..... | 1 |
| ④ Power cord | 1 |
| ⑤ Remote control unit (RC-1159)..... | 1 |
| ⑥ R03/AAA batteries..... | 2 |
| ⑦ Audio cable..... | 1 |
| ⑧ AM loop antenna..... | 1 |
| ⑨ FM indoor antenna | 1 |

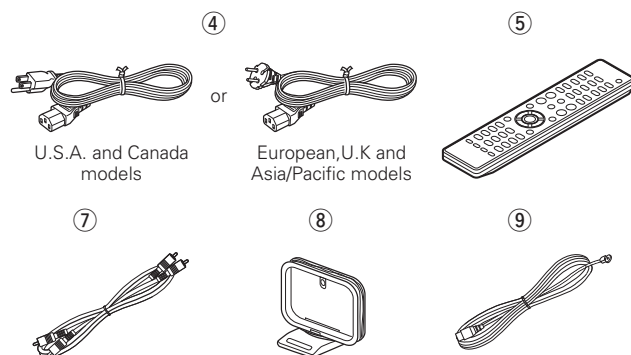

Main features

Equipped with the AirPlay® function in addition to network functions such as Internet Radio
(👉 page 27)

Equipped with a USB port that is compatible with playback from iPhone® and iPod®
(👉 page 23)

Equipped with an Audio output switch that switches off audio output to a connected external device whenever required, such as when setting the Tuner frequency etc.

Equipped with built-in speakers in the front panel for audio monitoring

Equipped with an LED navigation function that indicates the next operation with the button LEDs

**3 lines OLED (organic LED display)
Large, easy-to-read OLED display**

Caution

This DN-700H incorporates the ability to play digitally streamed audio signals from all sources using internet radio formats, and is intended for use with your own internet radio stations and with third party public domain and authorized signal sources.

Certain audio streams, such as Online Music Services (Rhapsody, Pandora) may only be used if licensed and subject to restrictions preventing commercial retransmission or public performance of streamed signals.

You are required to ensure your compliance with any applicable terms or restrictions before using restricted third party signals of any type.

You are also responsible for complying with any rules or laws governing your use of Internet Radio, including copyright laws.

Information about registering and connecting to Private Radio Stations via this device is included on "Registering and receiving private radio stations" (👉 page 14) of this owner's manual.

Cautions on handling

• Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When going on vacation or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

• About condensation

If there is a major difference in temperature between the inside of the unit and its surroundings, condensation may form on parts inside the unit, causing it to fail to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

• Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If that occurs, move the mobile phone away from the unit when it is in use.

• Moving the unit

Turn off the power and unplug the power cord from the power outlet. Next, disconnect the cables connected to other system units before moving the unit.

• Operable time for continuous use

This unit can be used continually for up to 24 hours. Continuing to use this unit for longer than 24 hours may result in operations failing to function correctly. To continue use for longer than 24 hours, restart the unit every 24 hours.

• Rack mount cautions (Required rack specifications for mounting the DN-700H on a rack)

- EIA Standard 19 inch rack
- 1U Size installation compatible rack
- Rack that has a guide rail or shelf board that can support this device

About this manual

□ Symbols



This symbol indicates a reference page on which related information is described.



This symbol indicates a supplementary information and tips for operations.

NOTE

This symbol indicates points to remember operations or function limitations.

□ Illustrations


Note that the illustrations in this manual may differ from the actual unit for explanation purposes.

Remote operation

About the remote control unit

□ Inserting the batteries

- ① Remove the rear cover of the remote control unit.
- ② Load the two batteries properly as indicated by the marks in the battery compartment.

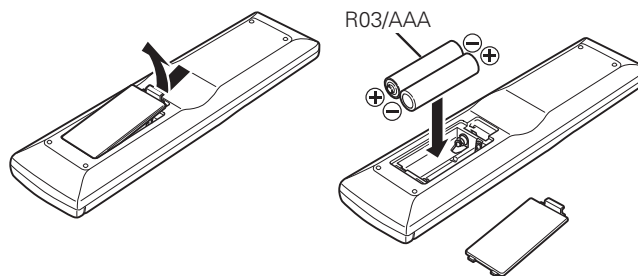


- ③ Put the rear cover back on.

NOTE

- Insert the specified batteries in the remote control unit.
- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit. (The supplied batteries are only for verifying operation.)
- When inserting the batteries, be sure to do so in the proper direction, following the ⊕ and ⊖ marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
- Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- Used batteries should be disposed of in accordance with the local regulations regarding battery disposal.
- The remote control unit may function improperly if rechargeable batteries are used.

□ Operating range of the remote control

Point the remote control unit at the remote sensor when operating it.

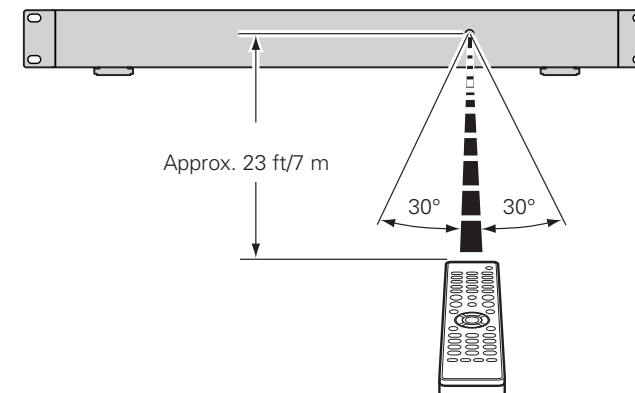

NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Connections

This section explains how to make connections for all of the supported audio signals.

NOTE


 
- Do not plug in the power cord until all connections have been completed.
- When making connections, also refer to the owner’s manual of the other components.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Do not bundle power supply cords together with connection cables. Doing so can result in humming or noise.

Audio connections

Analog connections

Unbalanced connection (RCA)

Cables used for connections

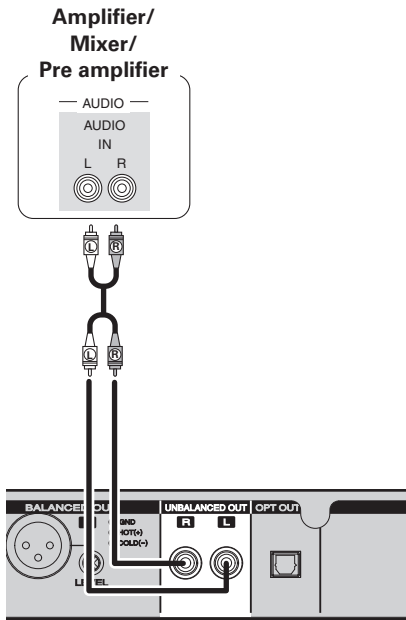



NOTE

To output sound from the front speakers of this unit, turn the speaker output switch on the front panel “ON”. To output sound from an external device connected to this unit, turn the OUTPUT switch on the front panel “ON”. Audio is not output when the Speaker output switch or OUTPUT switch are “OFF”.

Balanced connection (XLR)

 Cables used for connections

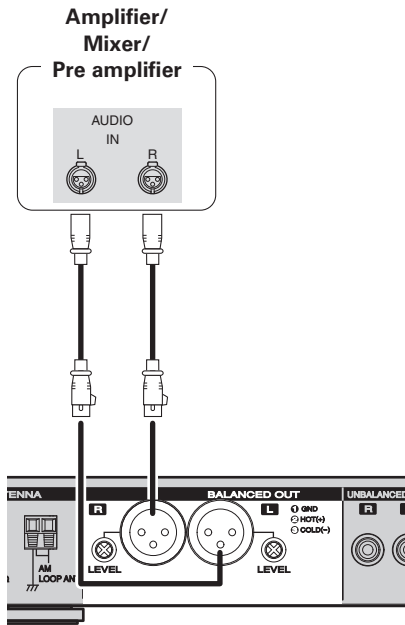

The volume level for balanced connection can be adjusted using the LEVEL knob on the rear panel.

NOTE

To output sound from the front speakers of this unit, turn the speaker output switch on the front panel “ON”. To output sound from an external device connected to this unit, turn the OUTPUT switch on the front panel “ON”. Audio is not output when the Speaker output switch or OUTPUT switch are “OFF”.


Digital connections

You can listen to digital audio output from the unit by connecting a digital device such as AV receivers or D/A converters to the unit. When connecting, use a commercially available optical cable.

Cables used for connections

Audio cable (sold separately)


Optical cable

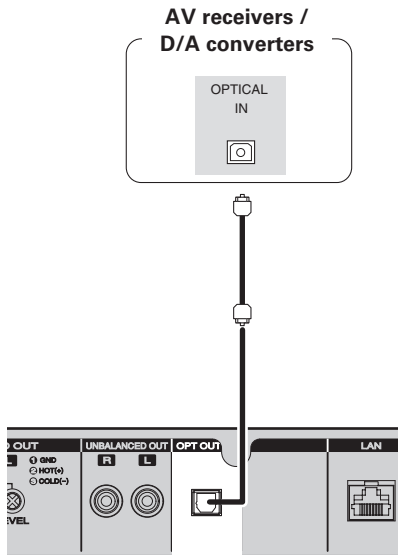

NOTE

When the input source is "FM" or "AM", audio is not output from the digital out connector.


When connecting the optical digital output connector with an optical transmission cable (sold separately)

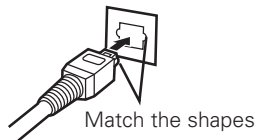

Match the shapes then insert firmly.

Connecting headphones

Connect the headphones to the headphone jack (PHONES).

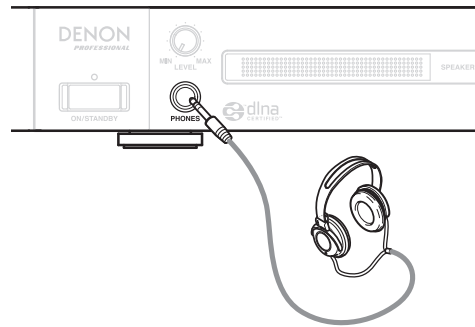

When you press the headphone/front speaker volume adjustment switch (LEVEL), the switch will spring out. After adjusting the volume, press the switch back in again.


NOTE

To prevent hearing loss, do not raise the volume level excessively when using headphones.

Connecting an External control device

Connect an external control device or other device for servicing. (Use a RS-232C straight cable with a 9-pin D-sub connector for the connection.)


RS-232C control allows you to perform external control from the host. For details on RS-232C control, see "RS-232C control" (page 40).

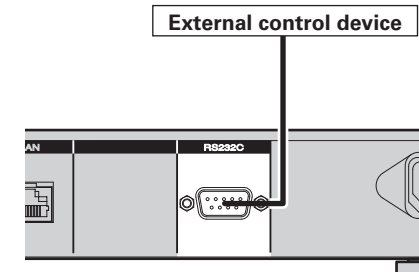

Connecting an antenna

- You can listen to radio broadcasts by connecting the supplied FM antenna or AM loop antenna to the unit.
- After connecting the antenna and receiving a broadcast signal (see page 20 "Listening to FM/AM broadcasts"), fix the antenna with tape in a position where the noise level becomes minimal.
- When listening to radio stations, always make analog connections (see page 4 "Analog connections").


Direction of broadcasting station

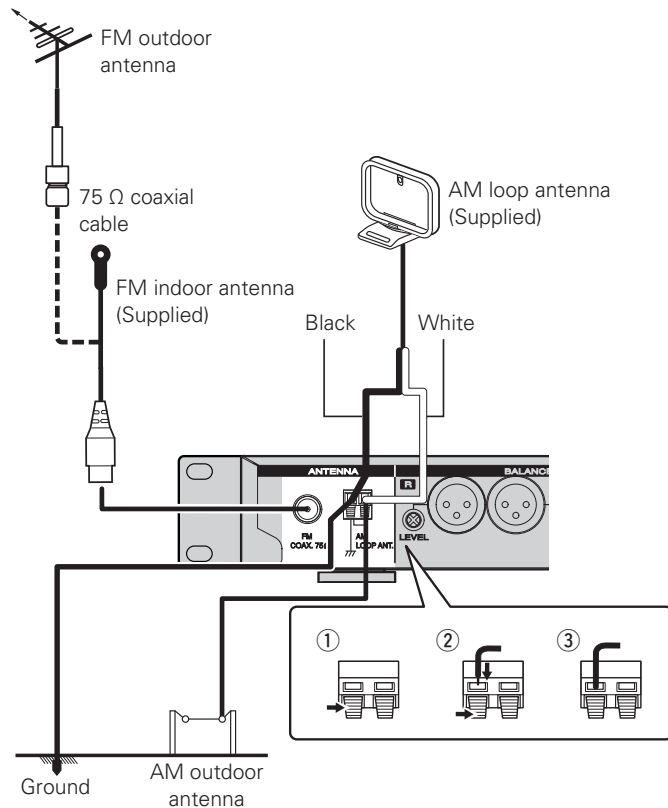

AM loop antenna assembly

1 Put the stand section through the bottom of the loop antenna from the rear and bend it forward.

2 Insert the projecting part into the square hole in the stand.

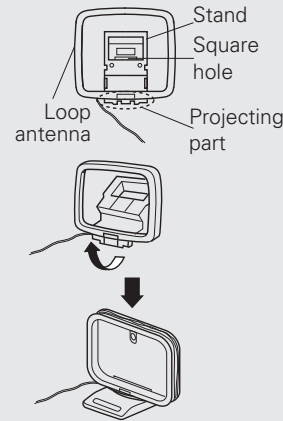

Using the AM loop antenna

Suspending on a wall

Suspend directly on a wall without assembling.



Standing alone

Use the procedure shown above to assemble.


NOTE

- When the input source is "FM" or "AM", audio is not output from the digital out connector.
- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure the AM loop antenna lead terminals do not touch metal parts of the panel.
- If the signal has noise interference, connect the ground terminal (GND) to reduce noise.
- If you are unable to receive a good broadcast signal, we recommend installing an outdoor antenna. For details, inquire at the retail store where you purchased the unit.

Connecting to a network (LAN)

- This unit lets you play via your network (LAN) music files stored on a computer and music content such as that from Internet radio.
- You can update by downloading the latest firmware from the D&M Professional website.
For more information, see “Firmware Update” (page 34).
- See “Network Setup [Network]” (page 29) for more information on network setting.

Cables used for connections

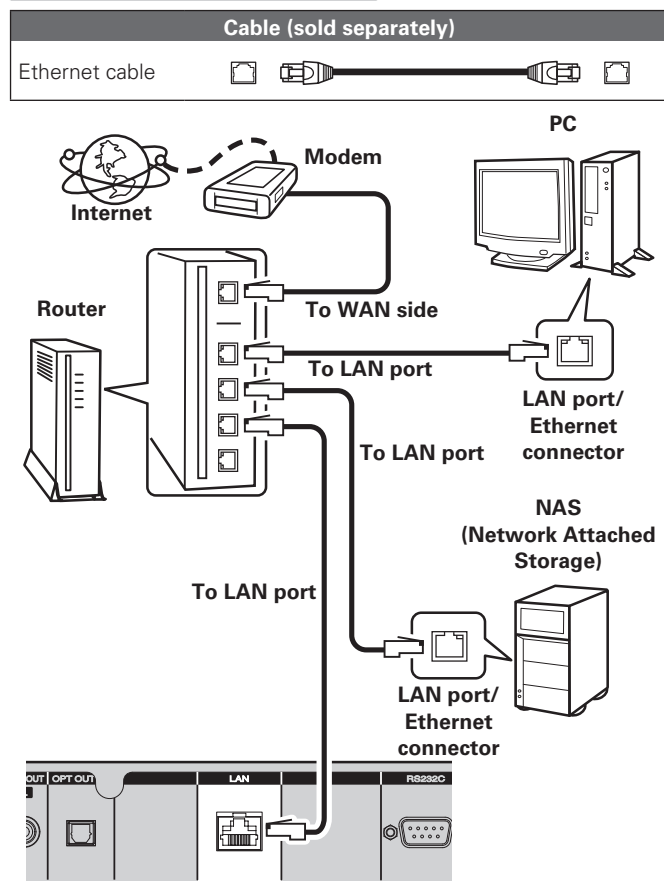

For connections to the Internet, contact an ISP (Internet Service Provider) or a computer shop.

Required system

❑ Broadband internet connection

❑ Modem

Device that connects to the broadband circuit and conducts communications on the Internet.

A type that is integrated with a router is also available.

❑ Router

When using this unit, we recommend you use a router equipped with the following functions:

- Built-in DHCP server

This function automatically assigns IP addresses on the LAN.

- Built-in 100BASE-TX switch

When connecting multiple devices, we recommend a switching hub with a speed of 100 Mbps or greater.

❑ PC

- Windows XP Service Pack2
- Windows Vista
- Windows 7
 - 1 GHz processor or higher (32 bit or 64 bit Intel or AMD processor etc.)
- Mac OS X (10.6 or later)

❑ NAS

- DLNA Server

❑ Ethernet cable (CAT-5 or greater recommended)

- Use only a shielded STP or ScTP LAN cable which is available at retailer.
- Some flat type Ethernet cables are easily affected by noise.
We recommend using a normal type cable.




- If you have an Internet provider contract for a line on which network settings are made manually, make the settings at “Network connecting (when “DHCP” settings are “Off”)” (page 29).
- With this unit, it is possible to use the DHCP and Auto IP functions to make the network settings automatically.
- When using this unit with the broadband router’s DHCP function enabled, this unit automatically performs the IP address setting and other settings.
When using this unit connected to a network with no DHCP function, make the settings for the IP address, etc., at “Network connecting (when “DHCP” settings are “Off”)” (page 29).
- When setting manually, check the setting contents with the network administrator.

NOTE

- A contract with an ISP is required to connect to the Internet.
- No additional contract is needed if you already have a broadband connection to the Internet.
- The types of routers that can be used depend on the ISP. Contact an ISP or a computer shop for details.
- Depending on the condition of your Internet connection, the sound may cut out during playback, or operations may become unstable.
- D&M Professional assumes no responsibility whatsoever for any communication errors or troubles resulting from customer’s network environment or connected devices.
- This unit is not compatible with PPPoE. A PPPoE-compatible router is required if you have a contract for a type of line set by PPPoE.
- Do not connect an LAN connector directly to the LAN port/ Ethernet connector on your computer.
- To listen to audio streaming, use a router that supports audio streaming.
- If you cannot connect to Internet radio or a music server, your Internet connection may have network security restrictions. Contact your network administrator.

Connecting the power cord

When all of the connections are completed, insert the power plug into the power outlet.

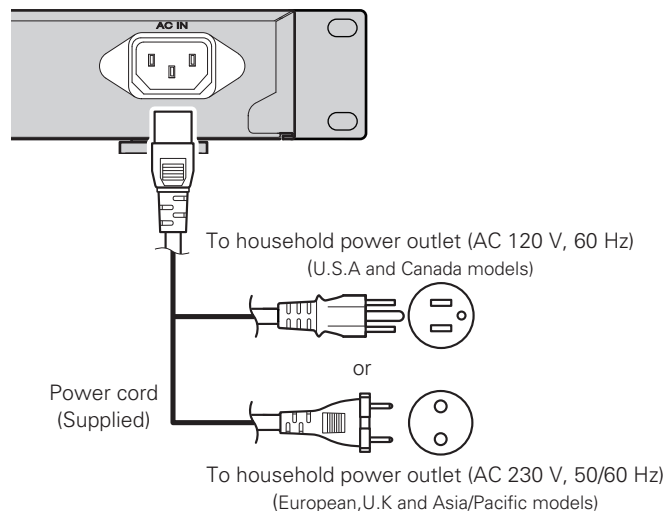

NOTE


- Only use the supplied power cord.
- Be sure the power cord is unplugged from the power outlet before connecting or disconnecting it to the AC inlet.

Basic operations




Symbols used to indicate buttons in this manual

- Button located on both the main unit and the remote control → **BUTTON**
- Button only on the main unit → **<BUTTON>**
- Button only on the remote control → **[BUTTON]**

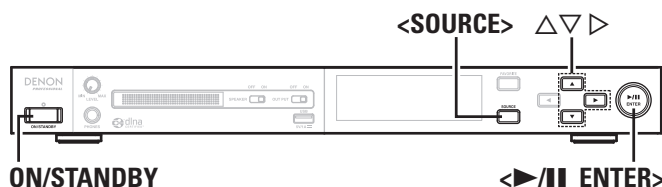

Input source
select buttons

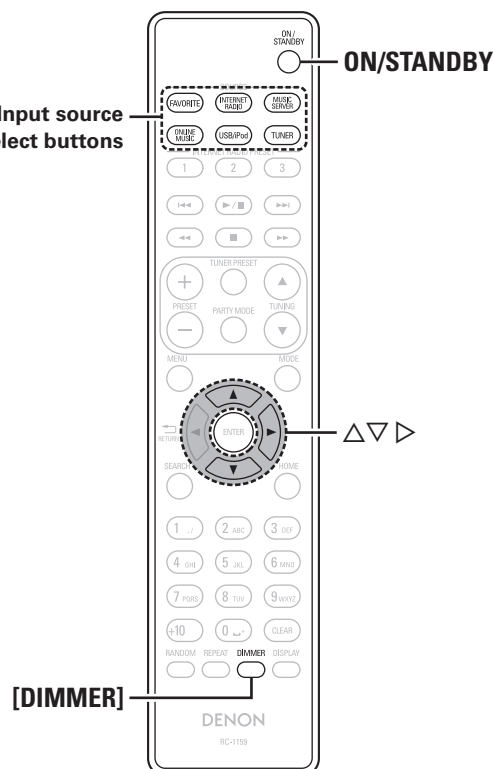

This section provides information on basic operations such as settings and playback procedures.
For other operations, see the sections below.

❏ **Other Setup [Other]** (🔧 page 32)

Preparations

Turning the power on

Press ON/STANDBY.

The DENON PROFESSIONAL logo on the front panel lights blue and the power turns on.



- When you turn on the power of this unit for the first time after purchasing it, the “Network First Setup” menu starts up. For details on “Network First Setup” operations, see 📖 page 10.
- If you cancelled “Network First Setup” menu or changed the network environment, perform “Menu” – “Network” – “Network First Setup”.

Turning the power to standby mode

Press ON/STANDBY.

The unit enters standby mode.

- Power indicator
 - Standby.....Red
 - Network standby.....Orange
 - Auto standby.....Off

NOTE

Power continues to be supplied to some of the circuitry even when the power is in the standby mode. When leaving home for long periods of time, either press **ON/STANDBY** to turn off the power, or unplug the power cord from the power outlet.

❑ Completely turning off the power

Unplug the power cord from the wall outlet.

NOTE

The settings made for the various functions may be cleared if the power cord is left unplugged from a power outlet for an extended period of time.


Operations possible during playback

Selecting the input source

❑ Selecting the input source using unit operations

1 Press <SOURCE>.
The display changes to the input source selection screen.

2 Press Δ / ∇ to select the input source, then press \blacktriangleleft / \blacktriangleright or **ENTER.**
The input source is switched each time the button is pressed.

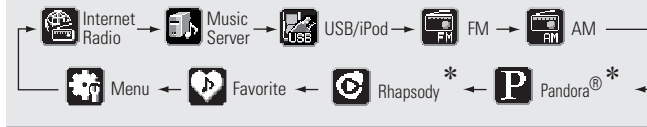

* U.S.A. and Canada models only.



With the unit, you can play back music files stored on your iPhone/iPod touch and music from iTunes (see page 27 "AirPlay function").

❑ Selecting the input source using the remote control

Press the input source select button ([FAVORITE], [INTERNET RADIO], [MUSIC SERVER], [ONLINE MUSIC], [USB/iPod] or [TUNER]).

The desired input source can be selected directly.

Switching the display's brightness

Press **[DIMMER]**.

- The display brightness is adjusted each time **[DIMMER]** is pressed as shown below.



- Each time the display brightness is switched, the brightness of the DENON PROFESSIONAL logo on the front panel and of the operating buttons are also switched. The DENON PROFESSIONAL logo and operating buttons are bright when this setting is 100 % or 75 %, and become darker when it is set to 50 %, 25 % or Off.



If you operate the buttons when the display's brightness is set to "Off", the display temporarily lights at "25%" brightness level.



Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control


➔ **BUTTON**

Button only on the main unit

➔ **<BUTTON>**


Button only on the remote control

➔ **[BUTTON]**

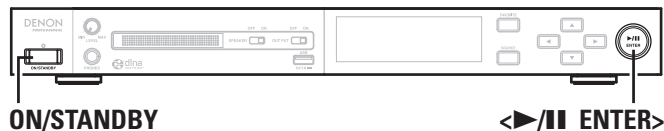

ON/STANDBY

<▶/|| ENTER>

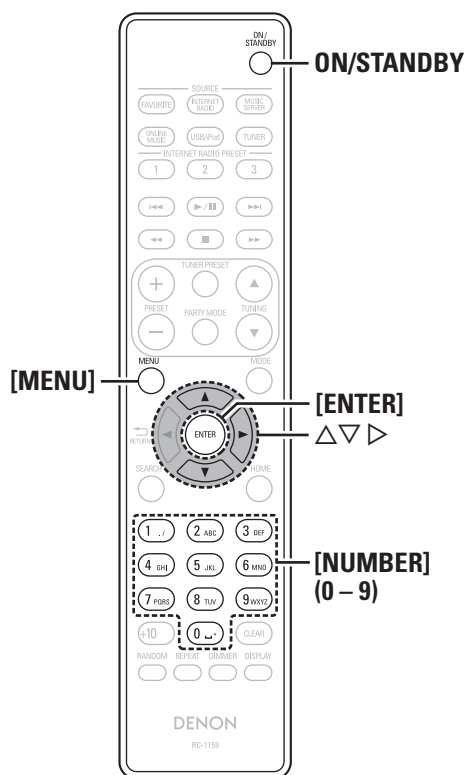

ON/STANDBY

[MENU]

[ENTER]

△△△

[NUMBER]
(0 - 9)

Network First Setup

When you turn on the power of this unit for the first time after purchasing it, the "Network First Setup" menu starts up.

① Preparation (connection)

② Connecting to the access point

③ Setting the network standby

① Preparation (connection)

1 Connecting the audio device.

 
2 Connecting to a network (LAN).

3 Connecting the power cord.

② Connecting to the access point


1 Press ON/STANDBY to turn the power on.

2 Select the menu language.




Network First Setup

3 Check the connection to the network device, and press [ENTER] or <▶/|| ENTER>.

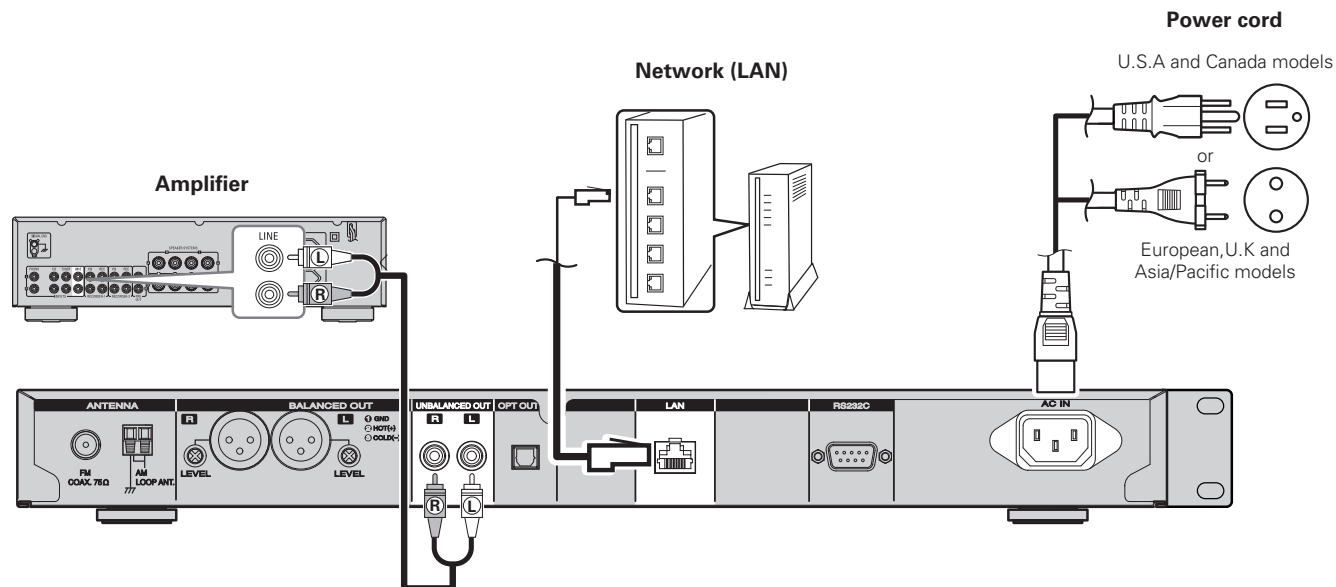

4 Set the DHCP.

 

When setting DHCP to "On"

Press \triangleright to select "On", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER>.

When setting DHCP to "Off"


- ① Press $\triangle\triangledown$ to select "Off", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER>.
- ② Use $\triangle\triangledown$ to select "IP Address", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \triangleright .
- ③ Use $\triangle\triangledown$ or [NUMBER] (0 – 9) to input the IP address and press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER>.
- ④ Use $\triangle\triangledown$ or [NUMBER] (0 – 9) to input the address for "Subnet Mask", "Gateway", "Primary DNS", and "Secondary DNS".

5 Set the Proxy.

If you do not connect to the network via a proxy, this setting is not required. In this case, go to step 6.

- ① Press $\triangle\triangledown$ to select "Proxy", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER>.
- ② If "Proxy(On)" appears, go to step ④.
If "Proxy(Off)" appears, press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \triangleright .
"Select Proxy" menu appears.
- ③ Use $\triangle\triangledown$ to select "On", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \triangleright .
"Setup Proxy" menu appears.
- ④ Use $\triangle\triangledown$ to select "Proxy (Address)" or "Proxy (Name)", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \triangleright .
"Select Type" menu appears.
- ⑤ Use $\triangle\triangledown$ to select "Address" or "Name", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \triangleright .
"Setup Proxy" menu appears.
- ⑥ Use $\triangle\triangledown$ to select "Address" or "Name", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \triangleright .
"Input Proxy Address" or "Input Proxy Name" menu appears.
- ⑦ Use $\triangle\triangledown$ or [NUMBER] (0 – 9) to input the address or name, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER>.
"Setup Proxy" menu appears.
- ⑧ Use $\triangle\triangledown$ to select "Port", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \triangleright .
"Input Proxy Port" menu appears.
- ⑨ Use $\triangle\triangledown$ or [NUMBER] (0 – 9) to input the port, then press [ENTER] or $\blacktriangleleft/\blacksquare$ ENTER>.
The Proxy settings are completed.

6 Select "Connection", and press [ENTER] or $\blacktriangleleft/\blacksquare$ ENTER>.

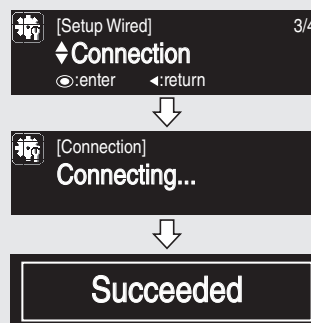

- Connected to the network.

③ Setting the network standby

 
Enabling the network standby

Network is on during standby. Main unit operable with a network compatible controller. Shortens the time before the network connection is completed.

- More power is consumed when in standby (Power consumption: 6.5 W).

Select "On", and press [ENTER] or $\blacktriangleleft/\blacksquare$ ENTER>.

Reduces the amount of time until the network connection is complete.



NOTE

The amount of power consumption during standby mode increases slightly.

 
Disabling the network standby

Suspend network function during standby. It will take slightly longer till the network connection is completed.

- The minimum amount of power is consumed when in standby (Power consumption: 0.5 W).
- This is the default setting.

Select "Off", and press [ENTER] or $\blacktriangleleft/\blacksquare$ ENTER>.

The amount of power consumption during standby mode is as low as possible.



This completes the network connections and settings.

The network settings can also be configured in the "Network" – "Connection" menu. Refer to "Connecting wired LAN" (page 29) for more information.

To perform "Network First Setup" again

 
1 Press [MENU].

The menu screen is displayed.

2 Select "Network", and press [ENTER] or $\blacktriangleleft/\blacksquare$ ENTER>.





3 Select "Network First Setup", and press [ENTER] or $\blacktriangleleft/\blacksquare$ ENTER>.





Symbols used to indicate buttons in this manual

- Button located on both the main unit and the remote control → **BUTTON**
- Button only on the main unit → **<BUTTON>**
- Button only on the remote control → **[BUTTON]**

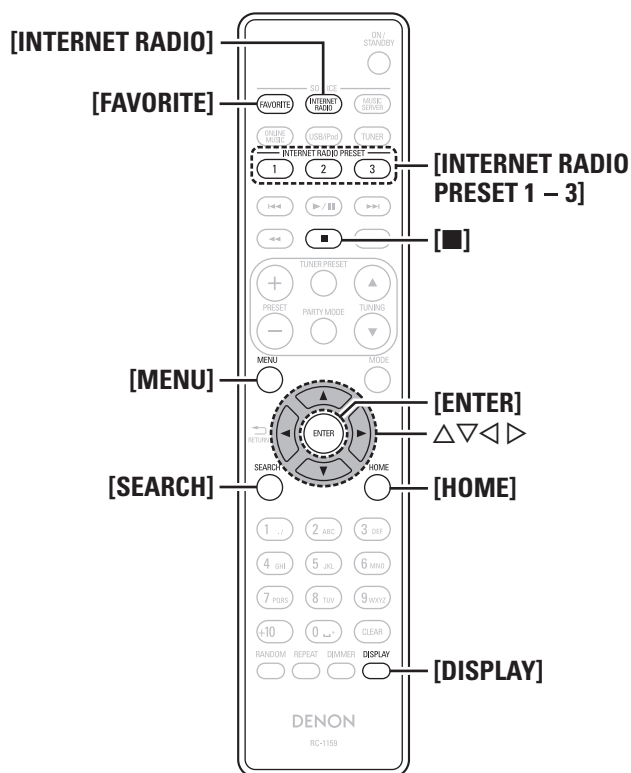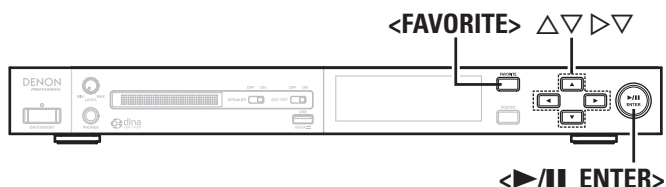

Network audio playback

Follow this procedure to play Internet radio stations or music files stored on a computer.

- ❑ **About the internet radio function** (🔗 page 50)
- ❑ **About the Music server** (🔗 page 50)
- ❑ **About Pandora®** (🔗 page 50)
- ❑ **About Rhapsody** (🔗 page 50)

Listening to internet radio

- 1 Prepare for playback.**
 - ① Check the network environment, then turn on this unit's power (🔗 page 8 "Turning the power on").
 - ② If settings are required, make the "Network Setup [Network]" (🔗 page 29).
- 2 Press [INTERNET RADIO] to switch the input source to "Internet Radio".**
 - For details on selecting the input source using the unit operations, see "Selecting the input source using unit operations" (🔗 page 9).
- 3 Press $\Delta \nabla$ to select the item you want to play, then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**
- 4 Repeat step 3 until the station list is displayed.**

The station list is displayed.

 - Any characters that cannot be displayed are replaced with "." (period) or " " (space).
- 5 Press $\Delta \nabla$ to select the station, then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**

Playback starts once buffering reaches "100%".



- There are many Internet radio stations on the Internet, and the quality of the programs they broadcast as well as the bit rate of the tracks varies widely. Generally, the higher the bit rate, the higher the sound quality, but depending on the communication lines and server traffic, the music or audio signals being streamed may be interrupted. Inversely, lower bit rates mean a lower sound quality but less tendency for the sound to be interrupted.
- "Server Full" or "Connection Down" is displayed if the station is busy or not broadcasting.

- ❑ **Listening to preset internet radio stations**

You can register your favorite radio stations to [INTERNET RADIO PRESET 1 – 3] to call them up easily.

Registering Internet radio stations to INTERNET RADIO PRESET 1 – 3 buttons

While playing back the internet radio station that you want to register, press and hold one of the [INTERNET RADIO PRESET 1 – 3].

The internet radio station is registered to the button that you held down.

NOTE

If the internet radio station is registered to a number that has previously been registered, the previous registration details are deleted.

Listening to an Internet radio station registered to a INTERNET RADIO PRESET 1 – 3 button

Press one of the registered [INTERNET RADIO PRESET 1 – 3].
Playback starts.

❑ Switching the display

Press **[DISPLAY]** during Internet radio reception.

The broadcast station information and signal format bit rate are displayed.

❑ Recently played internet radio stations

Recently played internet radio stations can be selected from “Recently Played”.

Up to 20 stations stored in “Recently Played”.

1 Press $\Delta\nabla$ to select “Recently Played”, then press **[ENTER]**, $\blacktriangleleft/\blacksquare$ **ENTER** or \blacktriangleright .

2 Press $\Delta\nabla$ to select the item you want to play, then press **[ENTER]**, $\blacktriangleleft/\blacksquare$ **ENTER** or \blacktriangleright .

❑ Searching stations by keyword (Alphabetic strings)

1 Press $\Delta\nabla$ to select “Search by Keyword”, then press **[ENTER]**, $\blacktriangleleft/\blacksquare$ **ENTER** or \blacktriangleright .

2 Input the characters, then press **[ENTER]** or $\blacktriangleleft/\blacksquare$ **ENTER**.

• For character input, see page 38.

❑ Registering internet radio stations as your favorites

You can register your favorite broadcast stations in Favorite List (🔍 page 22).

❑ Internet radio operation

Operation buttons	Function
[FAVORITE]	Calls the Favorite function
<FAVORITE> (Press and release)	Plays back the radio station or file at the top of the Favorite List
<FAVORITE> (Press and hold)	Registers the radio station currently being played back to the Favorite List
[■]	Stop
[MENU]	Menu
$\Delta\nabla\blacktriangleleft\blacktriangleright$	Cursor operation (Up/Down/Left/Right)
ENTER	Enter
[SEARCH]	Character search*
[HOME]	Return to top page

* Press **[SEARCH]**, then input station name you want to listen.



If the list is not in alphabetical order, you may not be able to perform a character search.

NOTE

• The internet radio function on this unit uses the vTuner (comprehensive directory site of internet radio stations) public stations.

D&M cannot be responsible for any problems, damages, or losses that occur from the commercial use of these stations.

• If you want to use internet radio for commercial use, register a radio station you have created yourself, or register a radio station that is approved for commercial use.

For details on how to register and receive such radio stations, see “Registering and receiving private radio stations” (🔍 page 14).

Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control



Button only on the main unit

Button only on the remote control

➔ **BUTTON**

➔ **<BUTTON>**

➔ **[BUTTON]**

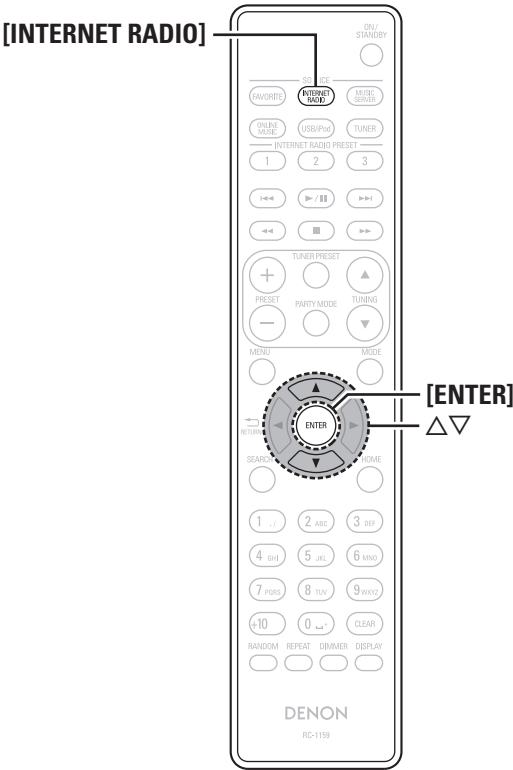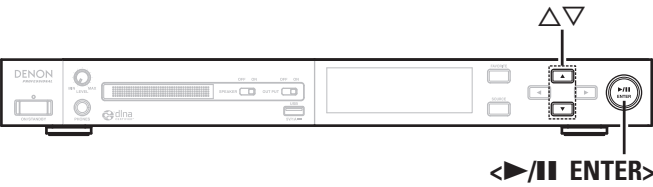

Registering and receiving private radio stations

You can receive radio stations on this unit that are not registered in vTuner or a private radio station that you have established yourself by accessing the DENON internet radio URL from a computer Web browser.

In order to register and receive a private radio station, you need to register your customer ID (MAC address) and E-mail address.
Exclusive URL: <http://www.radiodenon.com>

Check the ID (MAC address) of this unit

- 1 Press [INTERNET RADIO] to switch the input source to “Internet Radio”.
- 2 Press Δ∇ to select “radiodenon.com”, then press [ENTER] or <>/|| ENTER>. A 12-digit ID is displayed.

Preparation

1 Use your computer Web browser to access the exclusive DENON internet radio URL (<http://www.radiodenon.com>).
The following screen is displayed:


2 Enter the ID of this unit, and click **Go**.
The E-mail address and password input screen is displayed.

3 Enter your E-mail address and a password, and click “Register”.
Registration is complete.

Getting started
Connections
Basic operations
Advanced operations
Information
Glossary of terms
Troubleshooting
Specifications
Index

❑ Registering a private radio station

- 1 Use your computer Web browser to access the exclusive DENON internet radio URL (<http://www.radiodenon.com>).
- 2 Enter your E-mail address and a password, and click “Login”.
Private radio stations registered to “My Added Stations” are displayed.
- 3 Click **Go** in the “My Added Stations” screen.
The private radio station registration screen is displayed.

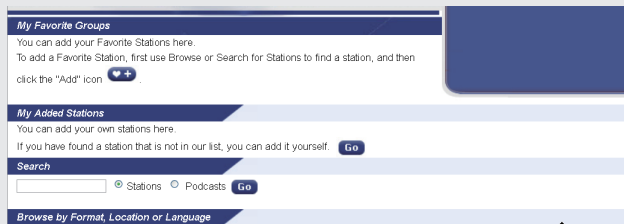

- 4 Enter the “Station Name” (optional), “Station URL” (required), “Location” (country name), “Genre” and “Type” (file compression method), and click **Go**.
Registration is complete.

NOTE

The private radio station is only displayed on registered devices. The registered radio station cannot be found on other devices.

❑ Receiving private radio stations

- 1 Press [INTERNET RADIO] to switch the input source to “Internet Radio”.
- 2 Press $\Delta \nabla$ to select “radiodenon.com”, then press [ENTER] or $\blacktriangleleft / \blacktriangleright$ [ENTER].
“Added stations” is displayed on the display of this unit.
- 3 Press $\Delta \nabla$ to select “Added stations”, then press [ENTER] or $\blacktriangleleft / \blacktriangleright$ [ENTER].
Private radio stations that are registered are displayed in the display of this unit.
- 4 Press $\Delta \nabla$ to select the private radio station that you want to receive, then press [ENTER] or $\blacktriangleleft / \blacktriangleright$ [ENTER].
The selected radio station is received.

NOTE

The private radio station is only displayed on registered devices. The registered radio station cannot be received on other devices.



❑ Deleting stations registered as private radio stations

- 1 Use your computer Web browser to access the exclusive DENON internet radio URL (<http://www.radiodenon.com>).
- 2 Enter your E-mail address and a password, and click “Login”.
Private radio stations registered to “My Added Stations” are displayed.
- 3 Click  at the side of the station name that you want to delete.
The selected radio station is deleted.



Symbols used to indicate buttons in this manual

- Button located on both the main unit and the remote control → **BUTTON**
 Button only on the main unit → **<BUTTON>**
 Button only on the remote control → **[BUTTON]**

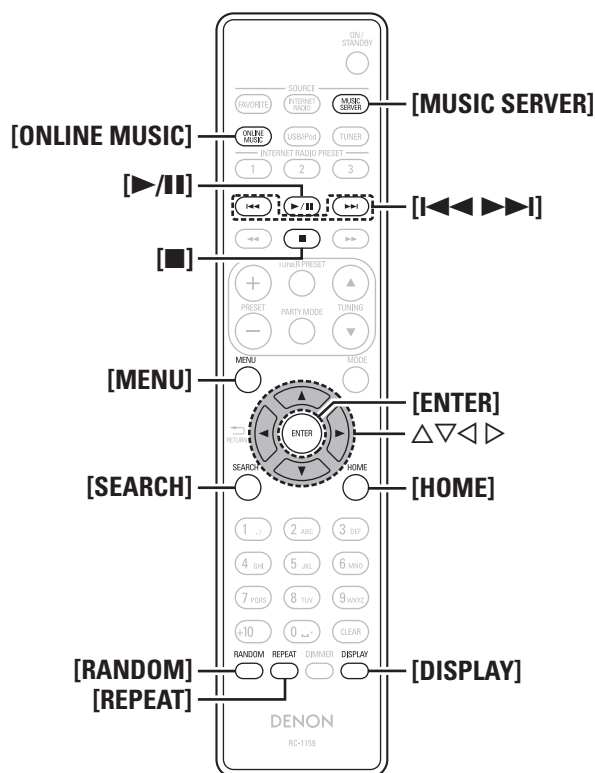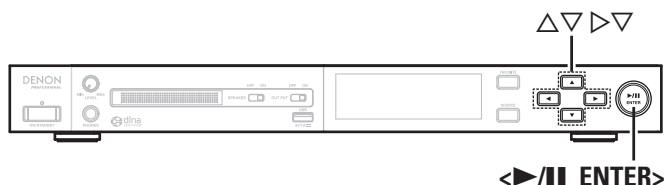

Music Server

Playing files stored on network server or network attached storage (NAS)

Use this procedure to play music files or playlists.

1 Prepare for playback.

- Check the network environment, then turn on this unit's power (page 8 "Turning the power on").
- If settings are required, make the "Network Setup [Network]" (page 29).
- Prepare the computer (page 50 "About the Music server").

2 Press [MUSIC SERVER] to switch the input source to "Music Server".

- For details on selecting the input source using the unit buttons, see "Selecting the input source using unit operations" (page 9).

3 Press Δ ∇ to select the server including the file to be played, then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .

4 Press Δ ∇ to select the search item or folder, then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .

5 Repeat step 4 until the file is displayed.

6 Press Δ ∇ to select the file, then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright . Playback starts once buffering reaches "100%".



- Connections to the required system and specific settings must be made in order to play music files (page 7).
- Before starting, you must launch the computer's server software and set the files as server contents. For details, see the operating instructions of your server software.
- The order in which the tracks/files are displayed depends on the server specifications. If the tracks/files are not displayed in alphabetical order due to the server specifications, searching by the first letter may not work properly.

Network audio playback

Playing files registered in Windows Media Player

Music files registered in Windows Media Player on your computer can be played back on this unit.

For details on the file formats that can be played on Windows Media Player, see "About the Music server" (page 50).

1 Configuring the shared settings between Windows Media Player on the computer and this unit

1 Install Windows Media Player 11 or later on a computer connected to the same network as this unit.

2 Turn this unit ON.

At the bottom right of the desktop screen, a popup message appears indicating that this unit is detected.

- Depending on your computer settings, the popup message may not appear.

3 Start Windows Media Player on the computer, and select "Options-Library-Configure Sharing", or "Stream-More Streaming Options". An icon representing this unit is displayed in the shared list.

4 Click this unit's icon, and approve the shared settings.

Shared settings between this unit and Windows Media Player are enabled, and the music files registered in Windows Media Player can be played back on this unit.

2 Playing files registered in Windows Media Player

1 Prepare for playback.

- Check the network environment, then turn on this unit's power (page 8 "Turning the power on").
- If settings are required, make the "Network Setup [Network]" (page 29).
- Prepare the computer (page 50 "About the Music server").

2 Press [MUSIC SERVER] to switch the input source to "Music Server".

- For details on selecting the input source using the unit buttons, see "Selecting the input source using unit operations" (page 9).

3 Press $\Delta \nabla$ to select the computer to be used, and press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

4 Press $\Delta \nabla$ to select the search item or folder, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .


5 Repeat step 4 until the file that you want to play back is displayed.

6 Press $\Delta \nabla$ to select the file, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .
Playback starts once buffering reaches "100%".

Switching the display

During playback, Press [DISPLAY].

- The display switches each time [DISPLAY] is pressed.

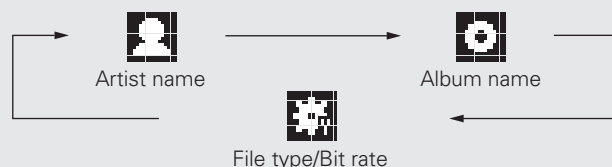

Music server operation

Operation buttons	Function
[I◀▶I]	Auto search (cue)
$\blacktriangleright/\blacksquare$	Playback / Pause
[■]	Stop
[MENU]	Menu
$\Delta \nabla \blacktriangleleft \blacktriangleright$	Cursor operation ($\Delta \nabla \blacktriangleleft \blacktriangleright$) / Auto search (cue, $\Delta \nabla$)
ENTER	Enter
[SEARCH]	Character search*1
[HOME]	Return to top page
[REPEAT]	Repeat playback (page 26)
[RANDOM]	Random playback (page 26)*2

*1 Press [SEARCH], then press [ENTER] to select the first letter you want to search mode.

*2 When playing files stored on a computer using the random play function, when a track has finished playing, the next track is selected at random from all of the tracks on the computer. For this reason, the same track may be played back to back.



If the list is not in alphabetical order, you may not be able to perform a character search.

Listening to Pandora® internet radio

Pandora® is only available in the U.S.

1 Prepare for playback.

- Check the network environment, then turn on this unit's power (page 8 "Turning the power on").
- If settings are required, make the "Network Setup [Network]" (page 29).

2 Press [ONLINE MUSIC] to switch the input source to "Pandora".

- For details on selecting the input source using the unit buttons, see "Selecting the input source using unit operations" (page 9).
- If you do not have a Pandora® account, press ∇ to select "I am new to Pandora", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright . The URL needed to activate Pandora® and the activation code will be displayed. Browse to the Pandora® activation URL from your PC and follow the on-screen instructions for creating a new account.

3 If you have a Pandora® account, press $\Delta \nabla$ to select "I have a Pandora account", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

4 Input "Email address" and "Password".

- For character input, see page 38.

5 After inputting the "Email address" and "Password", select "login", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

If the "Email address" and "Password" match, the top menu for Pandora® is displayed.

NOTE

Press [HOME] to cancel the input.

Creating a Personalized radio station

You can create up to 100 personalized radio stations.

1 Use $\Delta \nabla$ to select "New Station", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

2 Input a "Track Name" or "Artist Name", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

- For character input, see page 38.

3 Use $\Delta \nabla$ to select "Search by artist" or "Search by track", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .
You can search and display a list by track or artist.

4 Press $\Delta \nabla$, select search result (e.g. D&M2) from the list, and press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .
Selected file is played back.
"Radio" is added to the end of a filename, and your original radio station is created (e.g. D&M2 Radio).

Listening to a personalized radio station

Listening to a personalized radio station (e.g. D&M2 Radio)

Press $\Delta \nabla$ and select the radio station ("D&M2 Radio") that you want to listen to, and press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

When you specify your favorite track, artist or comedian, Pandora® will create a personalized radio station that plays your favorite and choices similar to your favorite.

Listening to tracks at random

1 Press $\Delta \nabla$ and select the radio station ("D&M2 Radio") that you want to listen to, and press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .



2 Use $\Delta \nabla \blacktriangleleft \blacktriangleright$ to select "Quick Mix", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .
Created radio stations are selected shuffled, and tracks are streamed.

See the illustration on the previous page for details of the buttons used for the operations on this page.



Symbols used to indicate buttons in this manual

- Button located on both the main unit and the remote control → **BUTTON**
 Button only on the main unit → **<BUTTON>**
 Button only on the remote control → **[BUTTON]**

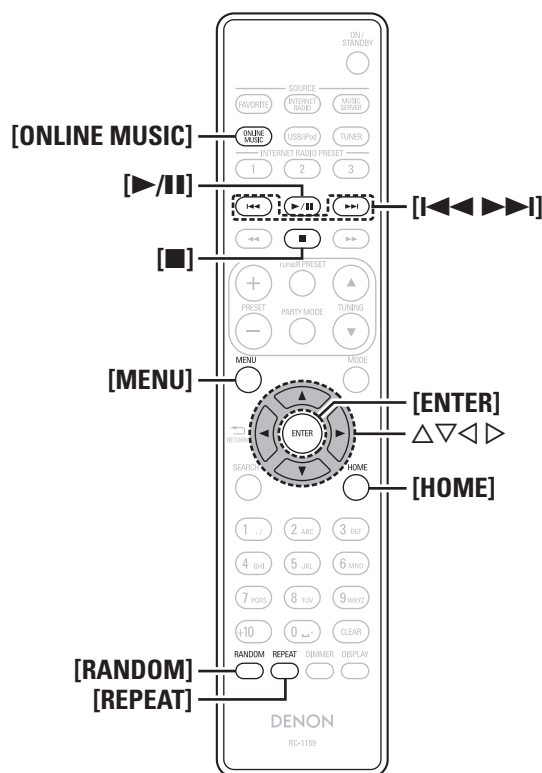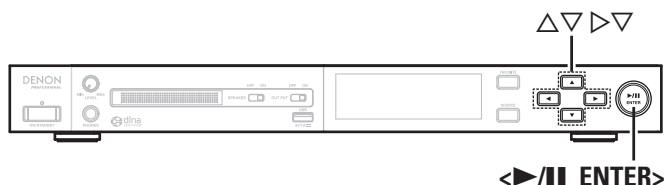

Providing feedback on tracks within radio stations

You can further personalize your radio stations by providing feedback on tracks. To provide feedback, open the Pandora® menu screen while a track is playing.

Press **▷** while a track is playing.

The Pandora® menu is displayed.

I like this track

- Press when you like the track that is being played.
- It will return to the Play Screen. **▷** (Thumbs up) icon is displayed.

I don't like this track

- Press when you don't like the track that is being played.
- It will return to the Play Screen, **◁** (Thumbs down icon) is displayed and Pandora® will skip to the next track.

Create station

- Creates a Station for the Track or Artist being played.

Bookmark this track

- Bookmarks the track currently being played.
- You can check your bookmarks at Pandora.com.
- For details, see the Pandora® FAQ at <http://blog.pandora.com/faq/>.

Delete this station

- Press when you want to delete the station that is being played.

NOTE

- You can Skip up to 6 Tracks per Station, per hour. Even if you run out of Skips, you can give a Track a "thumbs down". The Track will keep playing, but Pandora® will still use the feedback to personalize your radio station.
- You can create up to 100 New Stations (radio stations).

Network audio playback

Sign out

Disassociate this unit from your Pandora® account.

1 While the Pandora® top menu is displayed, press **◁**.

2 When the popup menu appears, press **△▽** to select "Yes".

Switching the display

During playback, press **[DISPLAY]**.

The file type/bit rate, artist name and album name are displayed.

Pandora® operation

Operation buttons	Function
[▶▶]	Auto search (cue)
▶ 	Play / Pause
[■]	Stop
[MENU]	Menu
△▽△▽	Auto search (cue,▽)
ENTER	Enter
[HOME]	Return to Pandora®'s top menu

Listening to Rhapsody (U.S.A. and Canada models only)

Rhapsody is not available in all countries.

1 Prepare for playback.

- ① Check the network environment, then turn on this unit's power (🔌 page 8 "Turning the power on").
- ② If settings are required, make the "Network Setup [Network]" (🔌 page 29).

2 Press [ONLINE MUSIC] to switch the input source to "Rhapsody".

- For details on selecting the input source using the unit buttons, see "Selecting the input source using unit operations" (🔌 page 9).

3 Use $\Delta \nabla$ to select "Sign in to your account", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

4 Input Username and Password.

- For character input, see page 38.

5 After inputting the "Username" and "Password", select "login", then press [ENTER] or $\blacktriangleleft/\blacksquare$ ENTER>. If the "Username" and "Password" match, the top menu for Rhapsody is displayed.

NOTE

- The password should be no longer than 99 characters.
- Press [HOME] to cancel the input.

❑ Select the search mode

① Search from Rhapsody latest information

1 Use $\Delta \nabla$ to select "Rhapsody Music Guide", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

2 Press $\Delta \nabla$ to select the information for track selection, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

3 Repeat step 2 until the track is displayed.

4 Use $\Delta \nabla$ to select the track, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

② Enter a character search for the track you want to listen to

1 Use $\Delta \nabla$ to select "Search", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

2 Use $\Delta \nabla$ to select the search item, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

The search display appears.

- You can search by artist name, album name, track name or keyword.

3 Enter the characters, then press [ENTER] or $\blacktriangleleft/\blacksquare$ ENTER>.

③ Search from the Rhapsody internet radio station

1 Use $\Delta \nabla$ to select "Rhapsody Channels", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

2 Repeat step 1 until the radio station is displayed.

3 Use $\Delta \nabla$ to select radio station, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright . The search display appears.

④ Listening to tracks registered in my library

1 Use $\Delta \nabla$ to select "My Library", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

2 Repeat step 1 until the track is displayed.

3 Use $\Delta \nabla$ to select the information or track, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright . After selecting, the information is displayed.

❑ Track menu

Press \blacktriangleright during playback to display the track menu.

① Search from the similar music

Use $\Delta \nabla$ to select the search item, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

② Registering tracks in my library

Use $\Delta \nabla$ to select "Add to my library", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

The track is entered in the library.

③ Rating function

1 Use $\Delta \nabla$ to select "Rating", then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER> or \blacktriangleright .

2 Use $\blacktriangleleft \blacktriangleright$ to select the rating, then press [ENTER] or $\blacktriangleleft/\blacksquare$ ENTER>.

❑ Switching the display

During playback, press [DISPLAY].



The file type/bit rate, artist name and album name are displayed.

❑ Rhapsody operation

Operation buttons	Function
[I◀▶I]	Auto search (cue)
$\blacktriangleleft/\blacksquare$	Playback / Pause
[■]	Stop
[MENU]	Menu
$\Delta \nabla \blacktriangleleft \blacktriangleright$	Cursor operation / Auto search (cue, $\Delta \nabla$)
ENTER	Enter
[HOME]	Return to top page
[REPEAT]	Repeat playback (🔌 page 26)
[RANDOM]	Random playback (🔌 page 26)

Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control → **BUTTON**
 Button only on the main unit → **<BUTTON>**
 Button only on the remote control → **[BUTTON]**

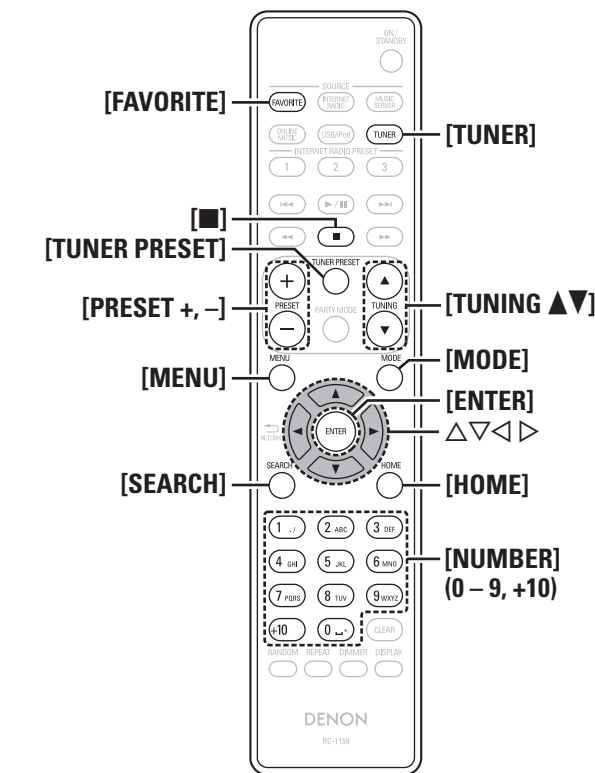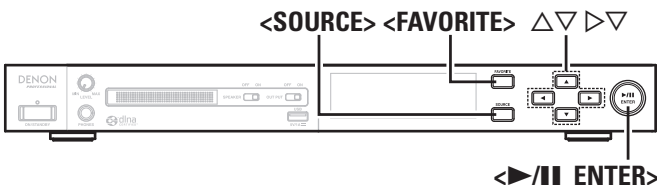

Tuning in radio stations

Connect the antenna beforehand (page 6).

Listening to FM/AM broadcasts

- 1 Press **[TUNER]** to select the reception band.
The reception band is toggled as shown below each time **[TUNER]** is pressed.

FM When listening to an FM broadcast.

AM When listening to an AM broadcast.

- The reception band can also be selected by pressing **<SOURCE>** (page 9).

- 2 Tune in the desired broadcast station.
When a station is received, the will light.

Auto tuning To tune in automatically.

- ① Press **[MODE]**, and “AUTO” lights in the display.
- ② Press **[TUNING ▲]** or **[TUNING ▼]** to select the station you want to hear.

Manual tuning To tune in manually.

- ① Press **[MODE]**, and “AUTO” goes out in the display.
- ② Press **[TUNING ▲]** or **[TUNING ▼]** to select the station you want to hear.



- If the desired station cannot be tuned in with auto tuning, tune it in manually.
- When tuning in stations manually, press and hold **[TUNING ▲]** or **[TUNING ▼]** to change frequencies continuously.
- A humming sound may be heard when using a TV nearby while receiving AM programs. If this happens, move the system as far from the TV as possible.

- ☐ **To stop auto tuning**
Press **[TUNING ▲]** or **[TUNING ▼]**.

Automatically presetting FM stations (Auto Preset)

- This unit can be preset with a total of 99, FM broadcast stations.
- Perform this operation when tuned to an FM broadcast station.

NOTE

Auto preset is not possible with AM broadcast stations.

- 1 Press **[SEARCH]**.
“Auto Preset” menu appears.
- 2 Use **▲▼** to select “Start”, then press **[ENTER]**, **<▶/|| ENTER>** or **▷**.
“Searching” appears in the display, and the unit searches for radio stations. When the search is complete, “Complete!!” appears.

☐ Cancelling auto presetting

Press **[■]**.

NOTE

- Broadcast stations whose antenna signal are weak cannot be preset automatically. If you wish to preset such stations, tune them in manually.
- If number that was already assigned as a preset is selected, the old preset information is overwritten with the new information.

☐ Giving station names to preset channels

Names of up to 8 characters can be input.

- 1 Tune in the preset channel you want to name.
- 2 Press and hold **[TUNER PRESET]**.
The display switches to the station name input display.
- 3 Input the station name.
• For character input, see page 38.
- 4 Press **[ENTER]** or **<▶/|| ENTER>**.
The characters you have input are entered.
• To give names to other stations, repeat steps 1 to 4.

Presetting FM/AM stations manually

This unit can be preset with a total of 99 FM and AM broadcast stations.

- 1** Tune in the station you want to preset.
- 2** Press [TUNER PRESET].
"Preset" menu appears.
- 3** Use $\Delta\nabla$ to select "Add to Preset", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .
- 4** Use $\Delta\nabla$ to select the number to be preset, then press [ENTER] or \blacktriangleleft /|| ENTER.
The reception frequency and reception mode are preset and the display switches to the station name input display.
- 5** Input the station name.
 - For character input, see page 38.
 - If you do not want to input a station name, press [ENTER] or \blacktriangleleft /|| ENTER without inputting anything else.
 - If you make a mistake inputting, re-input the correct station name. Whatever was previously input is overwritten.
- 6** Press [ENTER] or \blacktriangleleft /|| ENTER.
The characters you have input are entered.
 - To give names to other stations, repeat steps 1 to 5.

Listening to preset stations

Use [NUMBER] (0 – 9, +10), [PRESET +, –] or $\Delta\nabla$ to select the preset number.

Calling stations registered in Preset List

- 1** Press [TUNER PRESET].
"Preset" menu appears.
- 2** Use $\Delta\nabla$ to select "Call Preset", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .
The Preset list appears.
- 3** Use $\Delta\nabla$ to select the station, and then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .

Deleting stations registered in Preset List

- 1** Press [TUNER PRESET].
"Preset" menu appears.
- 2** Use $\Delta\nabla$ to select "Delete Preset", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .
The Preset list appears.
- 3** Use $\Delta\nabla$ to select the station, and then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .
- 4** When the prompt "Delete?" appears, press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .
 - To cancel the operation, press \blacktriangleleft .

□ Tuner (FM/AM) operation



Operation buttons	Function
[FAVORITE]	Calls the Favorite function
<FAVORITE> (Press and release)	Plays back the radio station or file at the top of the Favorite List
<FAVORITE> (Press and hold)	Registers the radio station currently being played back to the Favorite List
[PRESET +, –]	Preset channel selection
[TUNER PRESET]	Preset menu
[■]	Stop
[TUNING ▲▼]	Tuning (up/down)
[MENU]	Menu
[MODE]	Switch search modes
$\Delta\nabla\blacktriangleleft\blacktriangleright$	Cursor operation (Up/Down/Left/Right)
ENTER	Enter
[SEARCH]	RDS search*/PTY search*/TP search*/Auto preset
[HOME]	Return to top page
[0 – 9, +10]	Preset channel selection

* Europe model only.



Symbols used to indicate buttons in this manual

- Button located on both the main unit and the remote control → **BUTTON**
 Button only on the main unit → **<BUTTON>**
 Button only on the remote control → **[BUTTON]**

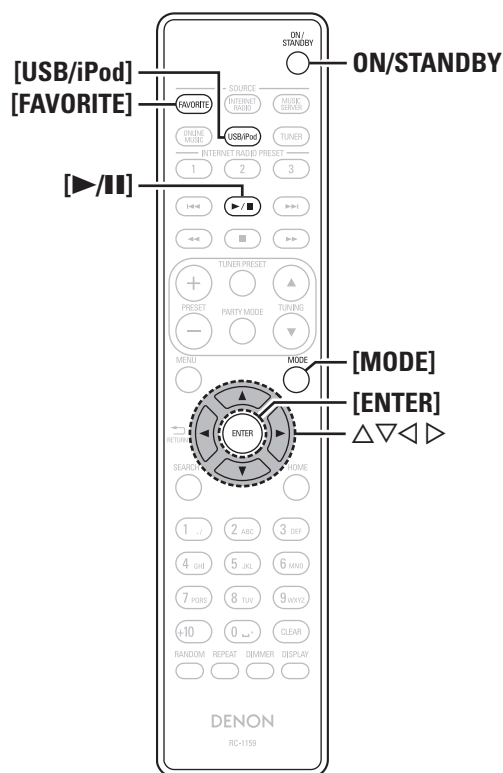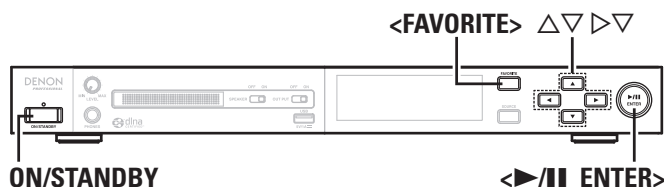

Favorite function

This section provides information on the Favorite function.

- The Favorite function allows you to register your favorite broadcast stations and files in Favorite List in advance so that you can call and listen to the stations or files right away, whenever you want.
- The contents that you can register and call are Internet radio station and tuner.
- You can register up to 50 items in Favorite List.
- When the 51st item is registered, the least frequently accessed radio station is replaced by the new item.
- When you select a station from Favorite List, the top of the list is displayed.

Registering stations or files to the favorites list

□ Registering with the remote control

- 1 Press **[FAVORITE]** while the Internet radio station, tuners or file to register is played back.
“Favorite” menu appears.
- 2 Use $\Delta \nabla$ to select “Add to Favorite”, then press **[ENTER]** or **<▶/|| ENTER>**.
When the station, server, or tuner is registered, “Add to Favorite” appears.

□ Registering with the main unit

Press and hold **<FAVORITE>** for at least 1 seconds while the Internet radio station, tuners or file to register is played back.
When registered, the station or file is displayed at the top of the favorites list.

Calling stations or files from the favorites list

- 1 Press **[FAVORITE]**.
“Favorite” menu appears.
- 2 Use $\Delta \nabla$ to select “Call Favorite”, then press **[ENTER]**, **<▶/|| ENTER>** or **<▶/|| ENTER>**.
The Favorite list appears.
- 3 Press $\Delta \nabla$ to select the station or file that you want to call, and press **[ENTER]**, **<▶/|| ENTER>** or **<▶/|| ENTER>**.
The respective function starts up and playback starts.

Calling the most recently played station or file from the favorites list

Press **<FAVORITE>**.
The respective function starts up and playback starts.

Deleting stations or files from the favorite list

- 1 Press **[FAVORITE]**.
“Favorite” menu appears.
- 2 Use $\Delta \nabla$ to select “Delete Favorite”, then press **[ENTER]**, **<▶/|| ENTER>** or **<▶/|| ENTER>**.
The Favorite list appears.
- 3 Press $\Delta \nabla$ to select the station or file that you want to delete, and press **[ENTER]**, **<▶/|| ENTER>** or **<▶/|| ENTER>**.
- 4 When the prompt “Delete?” appears, press **[ENTER]**, **<▶/|| ENTER>** or **<▶/|| ENTER>**.
• To cancel the operation, press **<◀>**.



iPod® playback


You can listen to music stored on iPod by connecting iPod to the USB port of the unit with the USB cable supplied with iPod.

The unit can play back music stored on iPod/iPod touch/iPod classic/iPod nano (the fifth or later generation only).

□ iPod® (page 49)

Playing an iPod

- 1 Connect the iPod to the USB port using the USB cable that was supplied with the iPod.

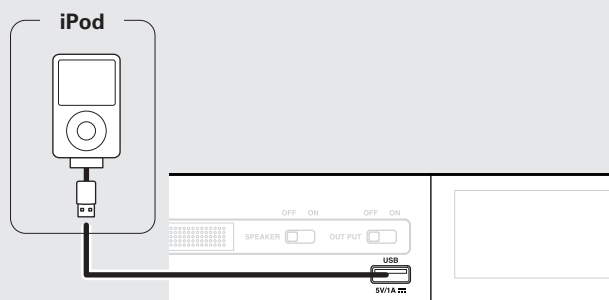

- 2 Press **ON/STANDBY** to turn on power to the main unit.

- 3 Press **[USB/iPod]** to switch the input source to "USB/iPod".

- For details on selecting the input source using the unit buttons, see "Selecting the input source using unit operations" (page 9).

- 4 Press **[MODE]** to select the display mode.

The display mode switches each time **[MODE]** is pressed.

- There are two modes for displaying the contents recorded on the iPod.

Browse mode Display iPod information on the display of this unit.

Remote mode Display iPod information on the iPod screen.

- "Remote iPod" is displayed on the display of this unit.

Display mode		Browse mode	Remote mode
Display location		Main unit display	iPod display
Playable files	Audio file	✓	✓
	Video file		✓*
Active buttons	Remote control and main unit	✓	✓
	iPod		✓

* Only audio is played back.

- The default display mode setting is "Remote mode".

- 5 Use **△▽** to select the item, then press **[ENTER]** or **<▶/|| ENTER>** to select the music file to be played.

- 6 Press **[▶/||]** or **<▶/|| ENTER>**. Playback starts.

NOTE

- 1st generation iPod nano and iPod video do not have remote mode support.
- D&M will accept no responsibility whatsoever for any loss of iPod data.
- Depending on the type of iPod and the software version, some functions may not operate.
- This unit does not support playback on an iPad. Do not connect an iPad to the unit.
- When connecting an iPhone to this unit, keep the iPhone at least 20 cm away from this unit. If the iPhone is kept closer to this unit and a telephone call is received by the iPhone, noise may be output from this device.
- If the iPod is connected using an iPod cable (commercially available) that is longer than 2 m (6.6 ft), sound may not be played correctly. In this case, use a genuine iPod cable, or a cable that is shorter than 1 m (3.3 ft).
- If the size of the image registered to the music file as album artwork is larger than 500 x 500 pixel, the music file cannot be played correctly. In this case, delete the album artwork from iTunes.





Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control

→ **BUTTON**

Button only on the main unit → **<BUTTON>**


Button only on the remote control → **[BUTTON]**

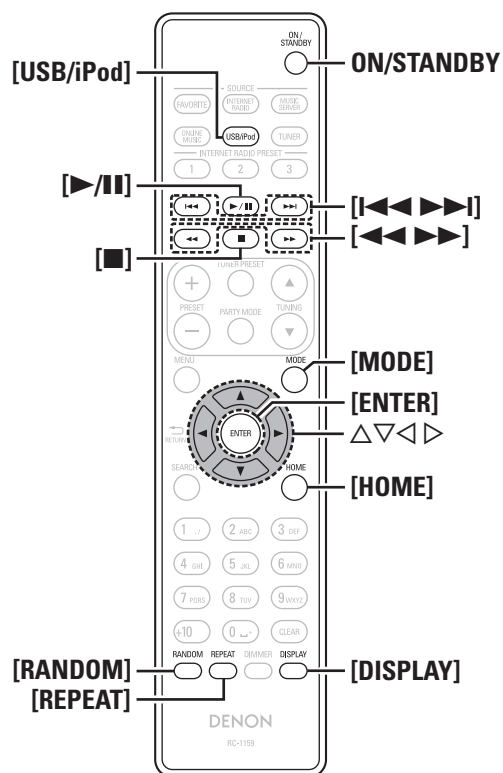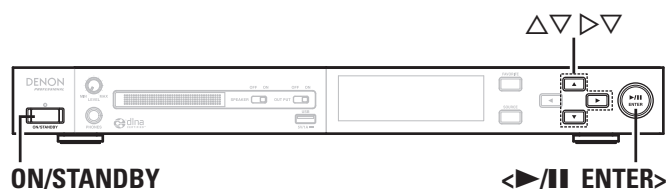

Supported iPod Models

Made for

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 3G
- iPhone 3GS
- iPhone 4

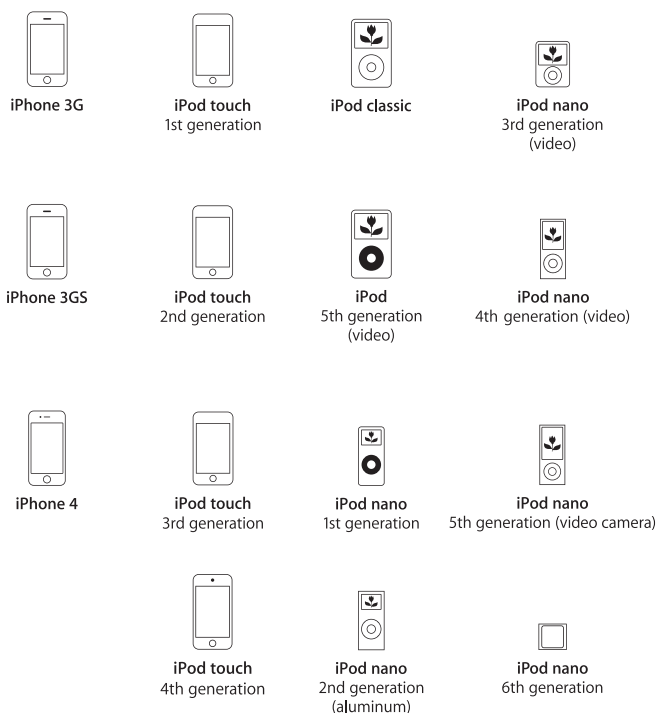

iPod® playback

Remote control and iPod button relations

Remote control buttons	iPod buttons	Operation on this unit
⏮, ⏭	⏮, ⏭	Play the track from the beginning/Play the next track
⏭, ⏮	⏭, ⏮	Play the track / Pause the track
⏮, ⏭ (Press and hold)	⏮, ⏭ (Press and hold)	Fast-reverse the track/Fast-forward the track
■	—	Stop the track
MODE	—	Switch between the browse mode and the remote mode
△▽	Click Wheel	Cursor operation (up / down)
◀	MENU	Display the menu or return to the previous menu
ENTER or ▶	Select	Enter the selection or plays the track
HOME	—	Return to top menu (in Browse mode)
REPEAT	—	Switch the repeat function
RANDOM	—	Switch the shuffle function

Switching the display

During playback, Press **[DISPLAY]**.

- The display switches each time **[DISPLAY]** is pressed (Browse mode only).



Artist name



Album name

Disconnecting the iPod

1 Press **ON/STANDBY** to set the standby mode.

2 Disconnect the iPod from the USB port.




USB memory device playback

You can playback music stored on a USB memory device using this unit.

❑ **USB memory device** (🔗 page 49)

Playing files stored on USB memory devices

1 Connect the USB memory device to the USB port.

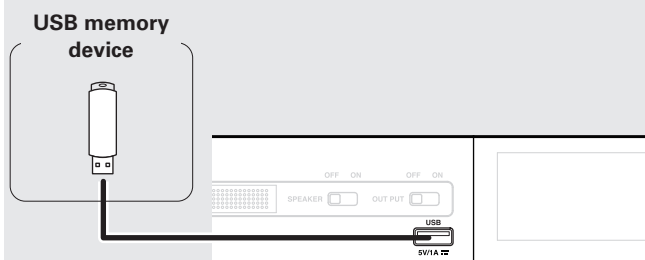

2 Press **ON/STANDBY** to turn on power to the main unit.

3 Press **[USB/iPod]** to switch the input source to “USB/iPod”.

- For details on selecting the input source using the unit buttons, see “Selecting the input source using unit operations” (🔗 page 9).

4 Press **△▽** to select the file or folder, then press **[ENTER]**, **<▶/|| ENTER>** or **▷**.

5 Press **△▽** to select the file, then press **[ENTER]**, **<▶/|| ENTER>**, **▷** or **[▶/||]**.
Playback starts.



- If the USB memory device is divided into multiple partitions, only the top partition can be selected.
- This unit is compatible with MP3 files conforming to “MPEG-1 Audio Layer-3” standards.
- D&M does not guarantee that all USB memory devices will operate or receive power. When using a portable USB connection type HDD of the kind to which an AC adapter can be connected to supply power, use the AC adapter.

NOTE

- USB memory devices will not work via a USB hub.
- It is not possible to connect and use a computer via the USB port of this unit using a USB cable.
- Do not use an extension cable when connecting a USB memory device. This may cause radio interference with other devices.
- Note that D&M will accept no responsibility whatsoever for any problems arising with the data on a USB memory device when using this unit in conjunction with the USB memory device.

Removing the USB memory device

1 Press **ON/STANDBY** to set the standby mode.

2 Check that the communication indicator on the USB memory device is not flashing, then pull out the USB memory device.

NOTE

Do not remove the USB memory device from the unit when the USB memory communication indicator is flashing. Doing so may damage the USB memory device, or may corrupt the files recorded on the USB memory device.




Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control


→ **BUTTON**

Button only on the main unit → **<BUTTON>**

Button only on the remote control → **[BUTTON]**

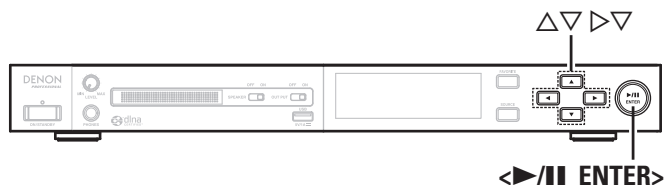

▶/II ENTER▶

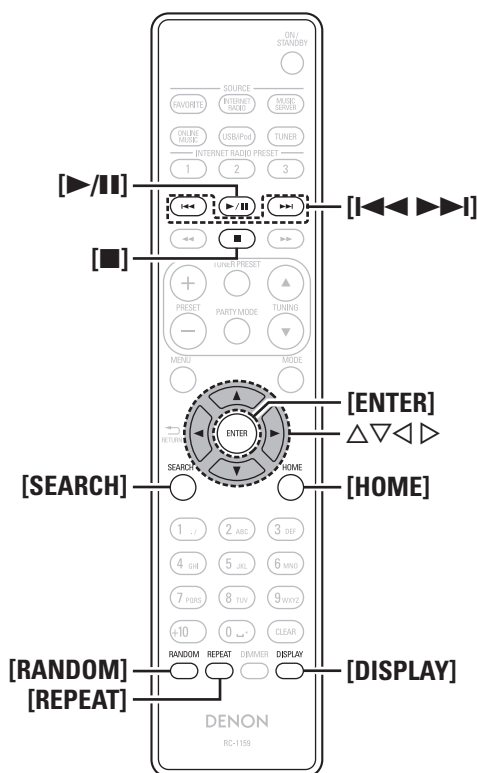


Playing repeatedly (Repeat playback)

Press **[REPEAT]**.


Repeat playback starts.

- Each time you press **[REPEAT]**, the repeat mode is toggled as shown below.

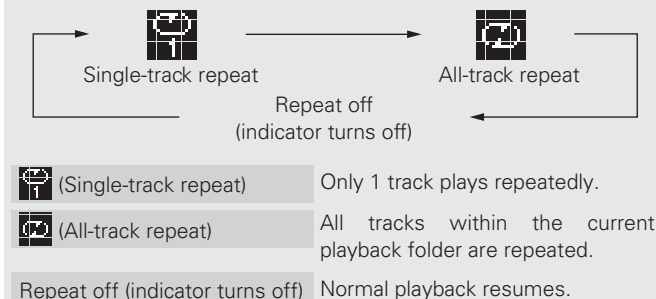

Playing random order (Random playback)

1 Press **[RANDOM]**.

2 Press **<▶/II ENTER>** or **[▶/II]**.
The  indicator lights in the display, and random playback starts.

❑ Cancelling random playback

Press **[RANDOM]**.

The  indicator on the display turns off.

USB memory device playback

❑ USB operation

Operation buttons	Function
[I◀◀▶▶I]	Auto search (cue)
▶/II	Playback / Pause
[■]	Stop
Δ▽	Cursor operation / Auto search (cue, Δ▽)
ENTER or ▶	Enter / Playback
◀	Display the menu or return to the previous menu
[SEARCH]	Character search*1
[HOME]	Return to top page
[REPEAT]	Repeat playback
[RANDOM]	Random playback*2

*1 Press **[SEARCH]**, then press **[ENTER]** to select the first letter you want to search mode.

*2 When playing files stored on a USB memory device using the random play function, when a track has finished playing, the next track is selected at random from all of the tracks on the device. For this reason, the same track may be played back to back.




If the list is not in alphabetical order, you may not be able to perform a character search.

❑ Switching the display

During playback, Press **[DISPLAY]**.

- The display switches each time **[DISPLAY]** is pressed.

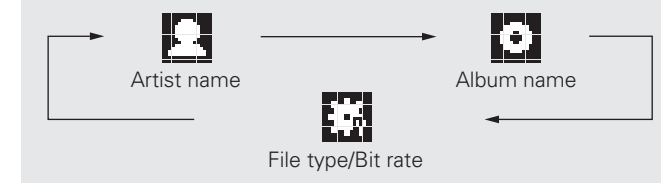



AirPlay function

You can play back your iTunes music library through this unit.

Streaming music stored in iPhone or iPod touch directly to the unit

If you update your "iPhone/iPod touch" to iOS 4.2.1 or later, you can stream music stored in your "iPhone/iPod touch" directly to this unit.


- 1 **Start the music mode on the iPhone or iPod touch.**
 is displayed on the iPhone or iPod touch screen.

- 2 **Tap the AirPlay icon .**
Set "Network Standby" ( page 30) to "Network On" for this unit.

 
NOTE

When "Network Standby" is set to "Network On", the unit consumes more standby power.

- 3 **Select the speaker you want to use.**

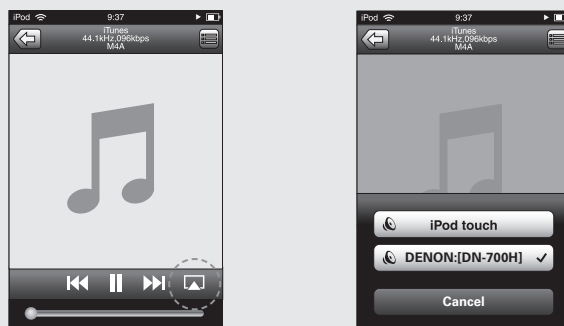


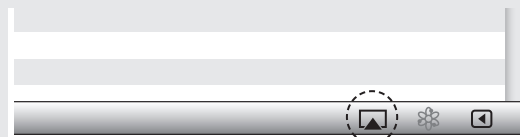
Playing iTunes music on this unit

- 1 **Install iTunes 10, or later, on a Mac or PC that is connected to the same network as this unit.**
- 2 **Turn this unit ON.**
Set "Network Standby" ( page 30) to "Network On" for this unit.

NOTE

When "Network Standby" is set to "Network On", the unit consumes more standby power.

- 3 **Launch iTunes and click the AirPlay icon  displayed in the lower right of the window and select this unit from the list.**




- 4 **Choose a song and click play in iTunes.**
The music will stream to this unit.

☐ Multiple speakers

You can easily stream music from iTunes to multiple speakers in your home.

- 1 **Click the AirPlay icon  and select "Multiple Speakers" from the list.**

- 2 **Check the speakers you want to use.**

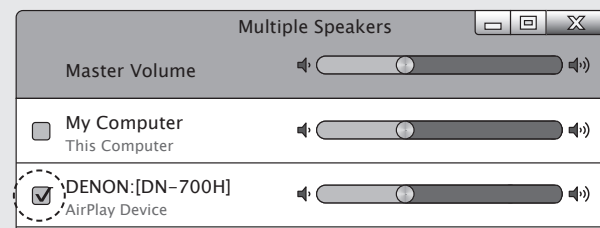

Remote operations

You can use your DENON remote control to play and pause iTunes, as well as skip to next and previous tracks.



- 1 **Open Preferences in iTunes, and click "Devices".**
- 2 **Check "Allow iTunes control from remote speakers".**



- Source input will be switched to "AirPlay" when AirPlay playback is started.
- You can stop AirPlay playback by pressing the <1 or choosing other input source.
- To see artist name or album name together, press the [DISPLAY].
- For information about how to use iTunes, also see the Help for iTunes.
- The screen may differ depending on the OS and software versions.

Advanced operations

Menu map

Setting items	Detailed items		Description	Page		
<div><div><div><div></div><div>[Network]</div><div>1/9</div></div><div>⚡Network First Setup</div><div><div>↵:enter</div><div>⬅:return</div></div></div></div>	Network First Setup		Performs the network settings using a Wizard style window.	10		
	Connection			Performs the wired connection settings.	29	
			DHCP (On) or DHCP (Off)	Performs the DHCP setting.	29	
			IP Address*1	Performs the IP address setting.	29	
			Subnet Mask*1	Performs the subnet mask setting.	29	
			Gateway*1	Performs the gateway setting.	29	
			Primary DNS*1	Performs the primary DNS setting.	29	
			Secondary DNS*1	Performs the secondary DNS setting.	29	
			Proxy	Performs the proxy setting.	30	
			Connection	Performs the wired LAN connection.	29	
	Rhapsody Account*2		Performs the Rhapsody account setting again.	19		
	Other Network			Performs other network settings.	30	
			Network Standby	Performs the ON/OFF settings for the network function when in standby mode.	30	
			PC Language	Selects the language to be used for displaying the Internet sites.	31	
			Friendly Name Edit	Edits a name displayed on the Internet.	31	
			Update Notification	Set the Update notification on/off.	31	
			Set the Upgrade notification on/off.	31		
Network Info		Displays various information about the network.	—			
<div><div><div><div></div><div>[Other]</div><div>1/5</div></div><div>⚡Auto Standby</div><div><div>↵:enter</div><div>⬅:return</div></div></div></div>	Auto Standby		Sets the unit power to standby when the unit is not in use.	32		
	Power on Play		Automatically receives Internet Radio, USB memory device, AM and FM when the primary power is on.	32		
	IR Remote		Disables reception on the IR remote controller.	33		
	Key Lock			Performs key lock settings.	33	
			All	The operation of the front panel is invalidated.	33	
		Manual			Performs key lock of each buttons.	33
				PLAY/PAUSE	The operation of the ► /ENTER button on the unit is invalidated.	33
				Cursor	The operation of the △▽◀▶ buttons on the unit is invalidated.	33
				SOURCE	The operation of the SOURCE button on the unit is invalidated.	33
			FAVORITE	The operation of the FAVORITE button on the unit is invalidated.	33	
	Screen Saver		Activates the screen saver.	33		
	Firmware Update		Updates the firmware.	34		
	Add New Feature		Displays new functions that can be downloaded, and upgrades functions.	34		
	Language		Sets the language.	35		

*1 Displayed when the "DHCP" setting (page 29) is "Off".

*2 U.S.A. and Canada models only.





Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control → **BUTTON**

Button only on the main unit → **<BUTTON>**

Button only on the remote control → **[BUTTON]**

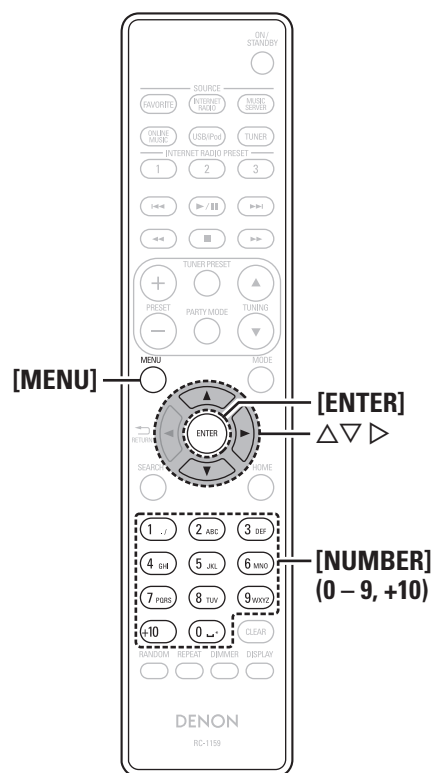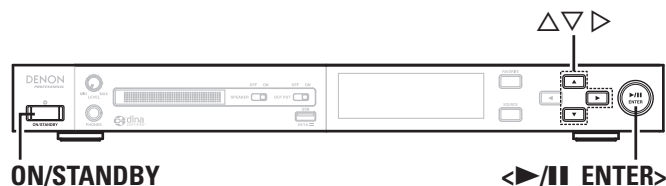

Network Setup [Network]

- For details on “Network First Setup” (page 10).
- If you cancelled “Network First Setup” menu or changed the network environment, perform “Menu” – “Network” – “Network First Setup”.

Connecting wired LAN

Use this procedure to configure the wired LAN settings.

Network connecting (when “DHCP” settings are “On”)

When using this unit with the broadband router’s DHCP function enabled, this unit automatically performs the IP address setting and other settings.

- 1 Connect the **ETHERNET** cable (page 7 “Connecting to a network (LAN)”).
- 2 Press **ON/STANDBY** to turn on power to the main unit.
- 3 Press **[MENU]**.
Turns on the Menu settings mode and the Menu appears on the display (page 28 “Menu map”).
- 4 Use **Δ∇** to select “Network” – “Connection” – “DHCP (On)”, then press **[ENTER]**, **<Δ/II ENTER>** or **▷**.
“Select DHCP” menu appears.
- 5 Use **Δ∇** to select “On”, then press **[ENTER]**, **<Δ/II ENTER>** or **▷**.
“Setup Wired” menu appears.
- 6 Use **Δ∇** to select “Connection”, then press **[ENTER]**, **<Δ/II ENTER>** or **▷**.
“Connecting” is displayed, and the unit starts connecting to the LAN.



You may need to set the network connection manually, depending on the provider you use. To set the connection manually, use the setting procedure of “Network connecting (when “DHCP” settings are “Off”)”.

Network connecting (when “DHCP” settings are “Off”)

This section explains the settings when connecting this unit to a network that does not have a DHCP function.



To configure the settings manually, check the setting details with your network administrator.

- 1 Perform steps 1 – 4 of the “Network connecting (when “DHCP” settings are “On”)” procedure and select “Off” in step 5.
“Select DHCP” menu appears.
- 2 Use **Δ∇** to select “IP Address”, then press **[ENTER]**, **<Δ/II ENTER>** or **▷**.
“Input IP Address” menu appears.
- 3 Use **Δ∇▷** or **[NUMBER] (0 – 9)** to input the IP address and press **[ENTER]** or **<Δ/II ENTER>**.
- 4 Use **Δ∇▷** or **[NUMBER] (0 – 9)** to input the address for “Subnet Mask”, “Gateway”, “Primary DNS”, and “Secondary DNS”.
- 5 Use **Δ∇** to select “Connection”, then press **[ENTER]**, **<Δ/II ENTER>** or **▷**.
“Connecting” is displayed, and the unit starts connecting to the LAN.

- When the connection is made successfully, “Succeeded” appears.
- If the connection cannot be established, “Connection Failed” is displayed. Perform steps 1 – 4 again.





Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control → **BUTTON**

Button only on the main unit → **<BUTTON>**

Button only on the remote control → **[BUTTON]**

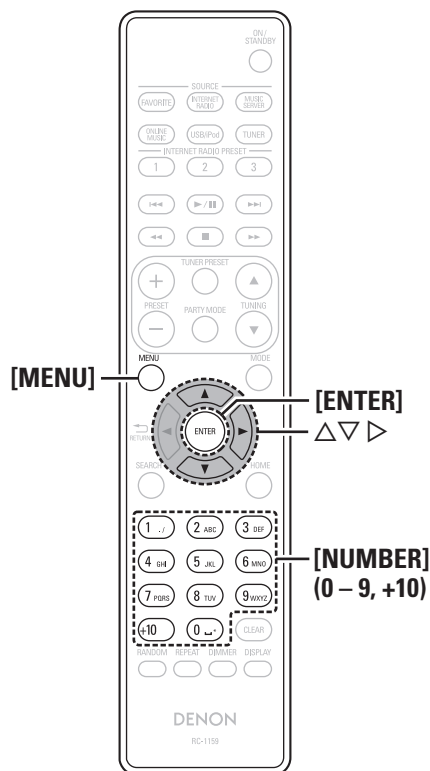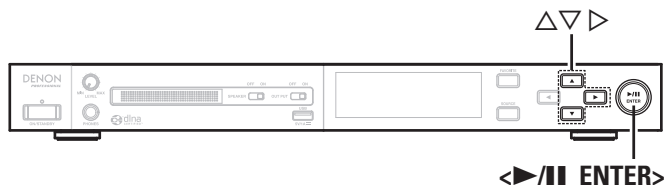

Proxy settings

Configure these settings to connect to the internet via a proxy server.

- 1 Press [MENU].**
Turns on the Menu settings mode and the Menu appears on the display (page 28 "Menu map").
- 2 Use $\Delta \nabla$ to select "Network" – "Connection" – "Proxy", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**
"Setup Proxy" menu appears.
- 3 If "Proxy(On)" appears, go to step 5. If "Proxy(Off)" appears, press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**
"Select Proxy" menu appears.
- 4 Use $\Delta \nabla$ to select "On", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**
"Setup Proxy" menu appears.
- 5 Use $\Delta \nabla$ to select "Proxy (Address)" or "Proxy (Name)", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**
"Select Type" menu appears.
- 6 Use $\Delta \nabla$ to select "Address" or "Name", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**
"Setup Proxy" menu appears.
- 7 Use $\Delta \nabla$ to select "Address" or "Name", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**
"Input Proxy Address" or "Input Proxy Name" menu appears.
- 8 Use $\Delta \nabla$ or [NUMBER] (0 – 9) to input the address or name, then press [ENTER] or \blacktriangleleft /|| ENTER.**
"Setup Proxy" menu appears.
- 9 Use $\Delta \nabla$ to select "Port", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**
"Input Proxy Port" menu appears.
- 10 Use $\Delta \nabla$ or [NUMBER] (0 – 9) to input the port, then press [ENTER] or \blacktriangleleft /|| ENTER.**
The Proxy settings are completed.

Network Setup [Network]

Other network settings

Network Standby

Set the network function On/Off during standby.

- 1 Press [MENU].**
Turns on the Menu settings mode and the Menu appears on the display (page 28 "Menu map").
- 2 Use $\Delta \nabla$ to select "Network" – "Other Network" – "Network Standby", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**
"Network Standby" menu appears.
- 3 Use $\Delta \nabla$ to "Network On", then press [ENTER], \blacktriangleleft /|| ENTER or \blacktriangleright .**

Network On Network is on during standby. Main unit operable with a network compatible controller. Shortens the time before the network connection is completed.

- When "Network Standby" is set to "Network On", the power display lights orange.
- More power is consumed when in standby (Power consumption: 6.5 W).

Network Off Suspend network function during standby. It will take slightly longer till the network connection is completed.

- The minimum amount of power is consumed when in standby (Power consumption: 0.5 W).
- This is the default setting.

- 4 Press [MENU].**
The display returns to normal.

□ PC Language

Selects the language to be used for displaying the Internet sites.

- 1 Press [MENU].**
Turns on the Menu settings mode and the Menu appears on the display (☞ page 28 "Menu map").
- 2 Use Δ / ∇ to select "Network" – "Other Network" – "PC Language", then press [ENTER], \blacktriangleleft / \blacktriangleright /II ENTER or \blacktriangleright .**
"PC Language" setting menu appears.
- 3 Use Δ / ∇ to select computer environment language, then press [ENTER], \blacktriangleleft / \blacktriangleright /II ENTER or \blacktriangleright .**

□ Friendly Name Edit

The Friendly Name is the name of this unit displayed on the network (Maximum 63 characters).

- 1 Press [MENU].**
Turns on the Menu settings mode and the Menu appears on the display (☞ page 28 "Menu map").
- 2 Use Δ / ∇ to select "Network" – "Other Network" – "Friendly Name Edit", then press [ENTER], \blacktriangleleft / \blacktriangleright /II ENTER or \blacktriangleright .**
"Friendly Name Edit" menu appears.
- 3 Select the friendly name (DENON:[DN-700H]), and press [ENTER], \blacktriangleleft / \blacktriangleright /II ENTER or \blacktriangleright .**
- 4 Edit a friendly name.**
• For character input, see page 38.

Update Notification

Displays a notification message on this unit's menu screen when the latest firmware is released with "Firmware Update".
Connect to broadband Internet (☞ page 7) when using this function.

- 1 Press [MENU].**
Turns on the Menu settings mode and the Menu appears on the display (☞ page 28 "Menu map").
- 2 Use Δ / ∇ to select "Network" – "Other Network" – "Update Notification", then press [ENTER], \blacktriangleleft / \blacktriangleright /II ENTER or \blacktriangleright .**
"Update Notification" menu appears.
- 3 Use Δ / ∇ to "On", then press [ENTER], \blacktriangleleft / \blacktriangleright /II ENTER or \blacktriangleright .**

On Display update message.

Off Do not display update message.



- When you press [ENTER] or \blacktriangleleft / \blacktriangleright /II ENTER during display of the notification message, the "Check for Update" is displayed. (Refer to page 34 for more information on "Firmware Update".)
- Press \blacktriangleleft to erase the notification message.

Upgrade Notification

Display a notification message on this unit's menu screen when downloadable firmware is released with "Add New Feature".
Connect to broadband Internet (☞ page 7) when using this function.

- 1 Press [MENU].**
Turns on the Menu settings mode and the Menu appears on the display (☞ page 28 "Menu map").
- 2 Use Δ / ∇ to select "Network" – "Other Network" – "Upgrade Notification", then press [ENTER], \blacktriangleleft / \blacktriangleright /II ENTER or \blacktriangleright .**
"Upgrade Notification" menu appears.
- 3 Use Δ / ∇ to "On", then press [ENTER], \blacktriangleleft / \blacktriangleright /II ENTER or \blacktriangleright .**

On Display upgrade message.

Off Do not display upgrade message.





- When you press [ENTER] or \blacktriangleleft / \blacktriangleright /II ENTER during display of the notification message, the "Add New Feature" is displayed. (Refer to page 34 for more information on "Add New Feature".)
- Press \blacktriangleleft to erase the notification message.



Symbols used to indicate buttons in this manual

- Button located on both the main unit and the remote control → **BUTTON**
- Button only on the main unit → **<BUTTON>**
- Button only on the remote control → **[BUTTON]**

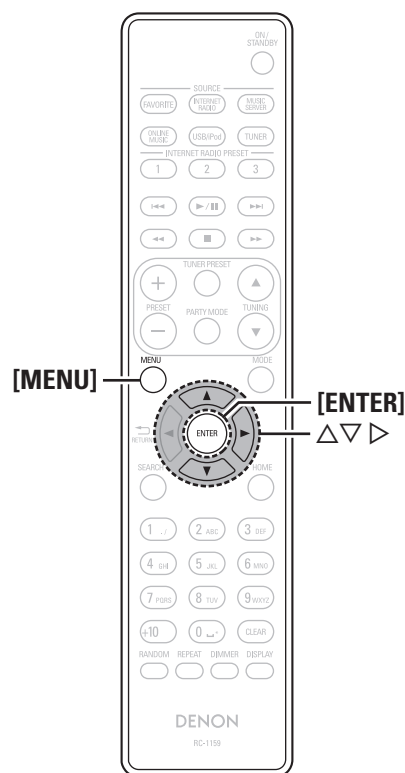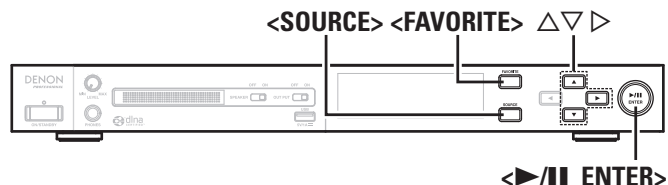

Other Setup [Other]

Auto Standby

With the Auto Standby ON, this unit will automatically enter the standby mode after about 30 continuous minutes of stop mode with no operation.

- The default setting is "Off".

1 Press [MENU].

Turns on the Menu settings mode and the Menu appears on the display (see page 28 "Menu map").

2

Use $\Delta \nabla$ to select "Other" – "Auto Standby", then press [ENTER], \triangleleft /|| ENTER or \triangleright .
"Select Auto Standby" menu appears.

3

Use $\Delta \nabla$ to select "On", then press [ENTER], \triangleleft /|| ENTER or \triangleright .
The setting is entered.

NOTE

In the following situations, the Auto standby function does not operate.

- When an iPod is connected to the USB port on the unit.
- When the input source is "TUNER".
- When the input source being played is "Internet Radio", "Music Server", "Pandora" or "Rhapsody".

Power on Play

When the power plug is inserted into the power outlet, the power switches on automatically and the last received radio station is played back.

- The default setting is "Off".

1 Press [MENU].

Turns on the Menu settings mode and the Menu appears on the display (see page 28 "Menu map").

2

Use $\Delta \nabla$ to select "Other" – "Power on Play", then press [ENTER], \triangleleft /|| ENTER or \triangleright .
"Power on Play" menu appears.

3

Use $\Delta \nabla$ to select "On", then press [ENTER], \triangleleft /|| ENTER or \triangleright .

On

When Internet Radio or AM/FM broadcast was received last, the power switches on automatically and the station received last is played.

If USB memory device was played last, the power switches on automatically, and the file from the first folder in the root directory of the USB memory device is played.

Off

The unit remains in standby mode.

NOTE

- The only input sources that can be played by the Power on play function are "Internet Radio", "USB", "AM" and "FM". All other input sources are stopped at their first respective screen.
- If there is no file in the first folder in the root directory of the USB memory, files in the USB memory cannot be played using the Power on Play function.

IR Remote

To prevent mistaken operation, you can disable the remote signal sensor function for the supplied remote control.

- The default setting is “Enable”.

1 Press [MENU].
Turns on the Menu settings mode and the Menu appears on the display (☞ page 28 “Menu map”).

2 Use $\Delta\nabla$ to select “Other” – “IR Remote”, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .
“IR Setting” menu appears.

3 Use $\Delta\nabla$ to select “Disable”, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

Enable Enables the remote control signal sensor function.

Disable Disables the remote control signal sensor function.

NOTE

When “Disable” is selected, the remote control cannot be used to operate this unit.

Key Lock

To prevent mistaken operation, you can lock the operation buttons on the main unit to disable operation from the main unit. You can select whether to lock all buttons or to lock specific buttons.

- The default setting is “Enable”.

1 Press [MENU].
Turns on the Menu settings mode and the Menu appears on the display (☞ page 28 “Menu map”).

2 Use $\Delta\nabla$ to select “Other” – “Key Lock”, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .
“Key Lock” menu appears.

3 Use $\Delta\nabla$ to select “All” or “Manual”, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

All Locks all operation buttons on the main unit.

Manual Locks selected operation buttons on the main unit.

4 [When “Manual” is selected] Press $\Delta\nabla$ to select the buttons that you want to lock, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

PLAY/PAUSE Locks the $\blacktriangleleft/\blacksquare$ ENTER button on the unit.

Cursor Locks the $\Delta\nabla\blacktriangleleft\blacktriangleright$ buttons on the unit.

SOURCE Locks the **SOURCE** button on the unit.

FAVORITE Locks the **FAVORITE** button on the unit.

5 Use $\Delta\nabla$ to select “Disable”, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .

Enable Enables the selected operation buttons.

Disable Disables the selected operation buttons.



Press and hold **<SOURCE>** for at least 1 second to lock all of the operation buttons on the unit, and disable operations from the unit (☞ page 39 “Locking operation buttons on the unit”). When all of the buttons are locked, press and hold **<SOURCE>** for at least 1 second to cancel the lock, and enable operations from the unit (☞ page 39 “Cancelling the operation button lock on the unit”).

Screen Saver

Use the following procedure to set the screen saver.

When the Screen Saver is set to “On”, if no operations are performed for more than 30 minutes, the Screen Saver function operates.

When the Screen Saver function operates, the source icon at the top left of the display flashes.

When a button on the unit or remote control is pressed, the Screen Saver function is cancelled.

- The default setting is “Off”.

1 Press [MENU].
Turns on the Menu settings mode and the Menu appears on the display (☞ page 28 “Menu map”).



2 Use $\Delta\nabla$ to select “Other” – “Screen Saver”, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .
“Screen Saver” menu appears.

3 Use $\Delta\nabla$ to select “On”, then press [ENTER], $\blacktriangleleft/\blacksquare$ ENTER or \blacktriangleright .



Symbols used to indicate buttons in this manual

- Button located on both the main unit and the remote control → **BUTTON**
 Button only on the main unit → **<BUTTON>**
 Button only on the remote control → **[BUTTON]**

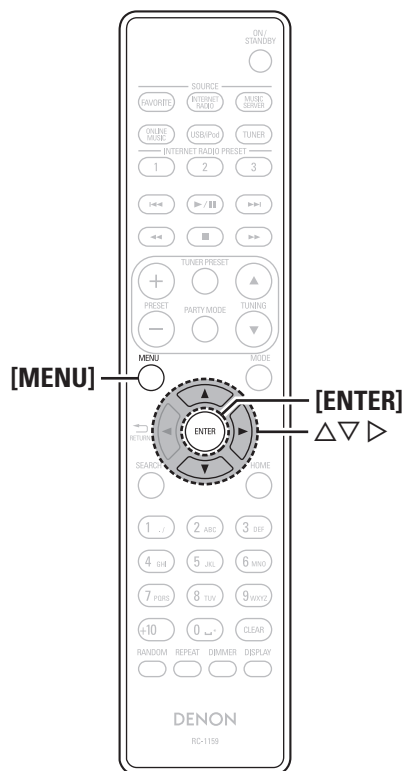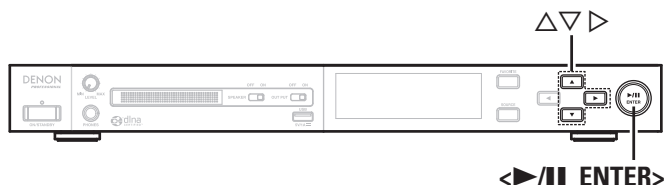

Firmware Update

- In order to update the firmware, the environment and settings required for connecting to broadband internet are needed (page 7).
- Perform the firmware update operation after at least 2 minutes has elapsed since turning this unit's power ON.

1 Press [MENU].

Turns on the Menu settings mode and the Menu appears on the display (page 28 "Menu map").

2 Use Δ / ∇ to select "Other" – "Firmware Update", then press [ENTER], \blacktriangleleft /|| ENTER> or \blacktriangleright .

Check for Update Check for firmware updates. You can also check approximately how long it will take to complete an update.

Start Execute the update process.

- If updating fails, the set automatically retries, but if updating is still not possible, one of the messages shown below is displayed. If the display reads as shown below, check the settings and network environment, then update again.

Display	Description
Updating fail	Updating failed.
Login failed	Failure to log into server.
Server is busy	Server is busy. Wait a while then try again.
Connection fail	Failure in connecting to server.
Download fail	Downloading of the firmware has failed.

Other Setup [Other]

Add New Feature

- In order to add new functions, the environment and settings required for connecting to broadband internet are needed (page 7).
- Perform the add new feature operation after at least 2 minutes has elapsed since turning this unit's power on.

1 Press [MENU].

Turns on the Menu settings mode and the Menu appears on the display (page 28 "Menu map").

2 Use Δ / ∇ to select "Other" – "Add New Feature", then press [ENTER], \blacktriangleleft /|| ENTER> or \blacktriangleright .

Start Upgrade Execute the upgrade process.

- If the upgrade is not successful, an error message identical to those in "Firmware Update" (page 34) will appear on the display. Check the settings and network environment, then update again.

Upgrade Status Display a list of the additional functions provided by the upgrade.

Upgrade ID The ID number shown on this screen is needed when carrying out the procedure.



See the D&M Professional website for details about updates. When the procedure is complete, "Registered" is displayed and updates can be carried out. If the procedure has not been carried out, "Not Registered" is displayed.

[Notes concerning use of “Firmware Update” and “Add New Feature”]

- Do not turn off the power until updating or upgrading is completed.
- Even with a broadband connection to the Internet, approximately 20 minutes is required for the updating/upgrading procedure to be completed.
- Once updating/upgrade starts, normal operations on this unit cannot be performed until updating/upgrading is completed.
- Furthermore, updating/upgrading the firmware may reset the backup data for the parameters, etc. set for this unit.
- If the update or upgrade fails, remove and re-insert the power cord. “Update Retry” appears on the display and update restarts from the point at which update failed. If the error continues despite this, check the network environment.



- Information regarding the “Firmware Update” function and “Add New Feature” will be announced on the D&M Professional web site each time related plans are defined.
- When usable new firmware is released with “Firmware Update” or “Add New Feature”, a notification message is displayed on the menu screen. When you do not want to be notified, set “Update Notification” (page 31) and “Upgrade Notification” (page 31) to “Off”.

Language

Sets the language for display the menu.

- The factory language setting is “English”.

1

Press [MENU].

Turns on the Menu settings mode and the Menu appears on the display (page 28 “Menu map”).

2

Use Δ / ∇ to select “Other” – “Language”, then press [ENTER], \blacktriangleleft / \blacktriangleright /II ENTER or \blacktriangleright .

English

/

Deutsch

/

Français

/

Italiano

/

Español

Getting started
Connections
Basic operations
Advanced operations
Information
Glossary of terms
Troubleshooting
Specifications
Index

TP (Traffic Program)

TP identifies programs that carry traffic announcements. This allows you to easily find out the latest traffic conditions in your area before leaving home.

TP Search

Use this function to find RDS stations broadcasting traffic programs (TP stations).

1 Press [TUNER] to switch the input source to “TUNER (FM)”.

- For details on selecting the input source using the unit buttons, see “Selecting the input source using unit operations” (page 9).

2 Press [SEARCH].

3 Use Δ / ∇ to select “TP Search”, then press [ENTER], \blacktriangleleft /[II ENTER] or \blacktriangleright .

Automatically begin the TP search operation.

- “No Programme” is displayed when there is no traffic information broadcast station.

RT (Radio Text)

RT allows RDS stations to send text messages that appear on the display.



- When the RT mode is turned on while an RDS broadcast station not offering an RT service is tuned in, “NO TEXT” is displayed on the display.
- The RT mode cannot be set in the AM band or for FM stations not offering RDS broadcasts.

NOTE

The operations described below selecting “RDS Search” will not function in areas in which there are no RDS broadcasts.

Tuner (FM/AM) operation

Operation buttons	Function
[FAVORITE]	Calls the Favorite function
<FAVORITE> (Press and release)	Plays back the radio station or file at the top of the Favorite List
<FAVORITE> (Press and hold)	Registers the radio station currently being played back to the Favorite List
[PRESET +, -]	Preset channel selection
[TUNER PRESET]	Preset menu
[■]	Stop
[TUNING ▲▼]	Tuning (up/down)
[MENU]	Menu
[MODE]	Switch search modes
Δ / ∇ / \blacktriangleleft / \blacktriangleright	Cursor operation (Up/Down/Left/Right)
[ENTER]	Enter
[SEARCH]	RDS search / PTY search / TP search / Auto preset
[HOME]	Return to top page
[0 - 9, +10]	Preset channel selection





Symbols used to indicate buttons in this manual

Button located on both the main unit and the remote control

→ **BUTTON**

Button only on the main unit → **<BUTTON>**

Button only on the remote control → **[BUTTON]**

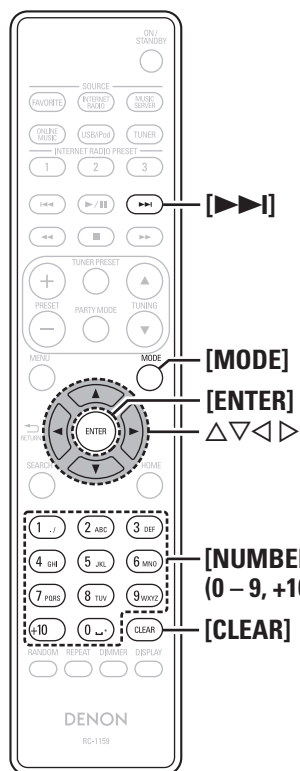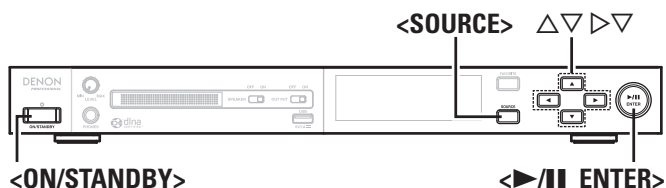

Other functions

Inputting characters

On this unit, the names displayed for “Giving station names to preset channels” (page 20) etc., screens can be changed as desired. For inputting characters, there are two methods, as shown below.

Method	Operations
Using the number buttons	<ul style="list-style-type: none"> Operating with the remote control unit. Multiple characters are assigned to a button, and each time the button is pressed, a character is switched.
Using the cursor buttons	<ul style="list-style-type: none"> Operating with the remote control unit or the main unit. Use Δ ∇ \triangleleft \triangleright and [ENTER] or <▶/■ ENTER> to input characters.

 
Display of an input screen

[Preset name input]



Cursor

[Account input]



Using the number buttons

1 Display the screen for inputting characters.

2 Place the cursor at the character to be changed with \triangleleft \triangleright and press **[NUMBER]** (0 – 9) until the desired character is displayed.

• The types of characters that can be input are as shown below.

1 \cdot /	1. @ - _ / : ~	6 MNO	m n o M N O 6
2 ABC	a b c A B C 2	7 PQRS	p q r s P Q R S 7
3 DEF	d e f D E F 3	8 TUV	t u v T U V 8
4 GHI	g h i G H I 4	9 WXYZ	w x y z W X Y Z 9
5 JKL	j k l J K L 5	0 \cdot	0 (Space) ! " # \$ % & ' () * + , ; < = > ? [\] ^ _ { } ; < = > ? [\] ^ _ { }

• The input character type can be switched by pressing **[MODE]** while the display name is being changed.

• Press **[CLEAR]** to delete the character.

• For entering the characters assigned to one number button continuously, press \triangleright to move the cursor to the right after entering a character then enter the next character.

• For entering characters assigned to separate buttons, press the number button continuously. The cursor automatically moves to the next position, and the entered character is registered.

3 Repeat step 2 to change the name then press **[ENTER]** or **<▶/■ ENTER>** to register it.

Example: For changing characters from “POPS” to “ROCK”

① Place the cursor at “P”. ▶ P O P S

② Press **[7 PQRS]** seven times. ▶ R O P S

③ Press \triangleright twice. ▶ R O P S

④ Press **[2 ABC]** six times. ▶ R O C S

⑤ Press \triangleright . ▶ R O C S

⑥ Press **[5 JKL]** five times. ▶ R O C K

⑦ Press **[ENTER]** or **<▶/■ ENTER>** to register the input name.

Using the cursor buttons

- 1 Display the screen for inputting characters.**
- 2 Use $\triangleleft \triangleright$ to set the cursor to the character you want to change.**
- 3 Use $\triangle \nabla$ to change the character.**
 - The types of characters that can be input are as shown below.

[Lower case characters]
abcdefghijklmnopqrstuvwxyz

[Upper case characters]
ABCDEFGHIJKLMNOPQRSTUVWXYZ

[Symbols] ! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { | } ~

[Numbers] 0123456789 (Space)

 - The input character type can be switched by pressing [MODE] while the display name is being changed.
 - Press [CLEAR] to delete the character.
 - Press [▶▶I] to insert a space.
- 4 Repeat steps 2 and 3 to change the name then press [ENTER] or $\triangleleft \triangleright$ ENTER to register it.**

Last function memory

This stores the settings as they were immediately before going into the standby mode.
When the power is turned back on, the settings are restored to as they were immediately before going into the standby mode.

Locking operation buttons on the unit

Press and hold <SOURCE> for at least 1 seconds.

This locks all operation buttons on the main unit.

- All of the operation buttons on the unit turn off.
- If any of the buttons on the unit are pressed when the operation buttons are locked, "Key Locked" is displayed.



To set the lock for individual buttons, see "Key Lock" (page 33).

Cancelling the operation button lock on the unit

When the operation buttons are locked, press and hold <SOURCE> for more than 1 second.

The lock is cancelled for the operation buttons on the unit, and operation for all of the buttons is enabled.

Restart

If for some reason the unit does not respond during use, or the power cannot be switched ON/OFF, restart the unit.

Press and hold <ON/STANDBY> for at least 5 seconds.

The unit automatically restarts.



- If the unit does not restart when the operation above is performed, disconnect the power cord from the rear panel of the unit, re-connect it and then switch the power on.
If operations still cannot be performed correctly, reset the microprocessor.
- This unit can be used continually for up to 24 hours. Continuing to use this unit for longer than 24 hours may result in operations failing to function correctly. To continue use for longer than 24 hours, restart the unit every 24 hours.

Resetting the microprocessor

Perform this procedure if the display is abnormal or if operations cannot be performed.

When the microprocessor is reset, all the settings are reset to their default values.

- 1 Pull the power cord out of the power outlet.**
- 2 Plug the power cord into a power outlet while pressing <SOURCE> and $\triangleleft \triangleright$ ENTER simultaneously.**
- 3 5 seconds later, release the buttons.**
"Initialized" appears in the display.



If "Initialized" does not display in step 3, start over from step 1.

Serial remote control function

In the Serial remote control function, a host such as a computer is connected to the unit. By sending control commands from the host to the unit, the unit can be operated, and the status information of the unit can be checked both on the unit and host. There are 2 methods for connecting the host and unit, namely RS-232C control and IP Control.

RS-232C control

You will be able to perform the three control functions from the host by connecting an RS-232C straight cable to the RS-232C serial terminal (9-pin D-sub) connector.

[Three control functions]

- ① **Controlling and operating DN-700H from the host** (☞page 41)
- ② **Sending the status information to the host when DN-700H receives a status request command from the host** (☞page 41)
- ③ **Automatically sending the status information to the host when there is a change to the DN-700H status** (☞page 41)


❑ Communication format

- Compatible Connector: 9-pin D-sub (male)
- Communication speed: 9,600 bps
- Data Bit: 8 bit
- Parity: None
- Stop Bit: 1 bit
- Flow Control: None

Pin Arrangement

Pin Number	Signal Name
1	Ground
6	NC
2	TxD
7	NC
3	RxD
8	NC
4	NC
9	NC
5	S. Ground

❑ Connections

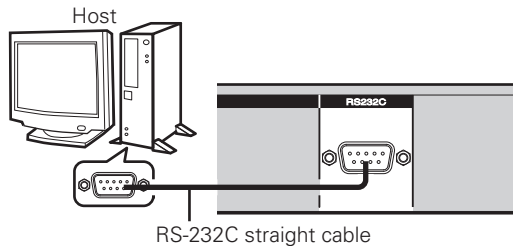

IP Control (Ethernet)


You will be able to perform the three control functions from the host by connecting an ethernet cable to the ethernet connector (Connector type:RJ-45 (10BASE-T/100BASE-TX)).

❑ Communication format


- Communication system: A full duplex
- Communication speed: 10 Mbps/100 Mbps
- Communication port: TCP port 23 (telnet)
- Communication data length: 135 bytes (maximum)

❑ Connections

① Connecting the unit and host directly

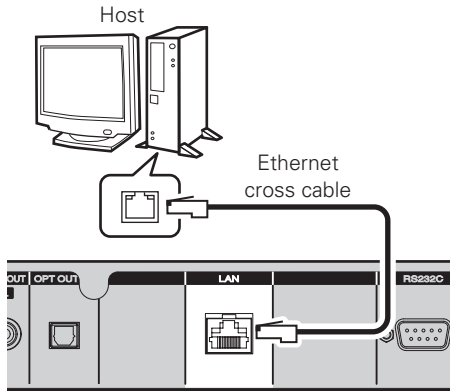

② Connecting the unit and host via a hub

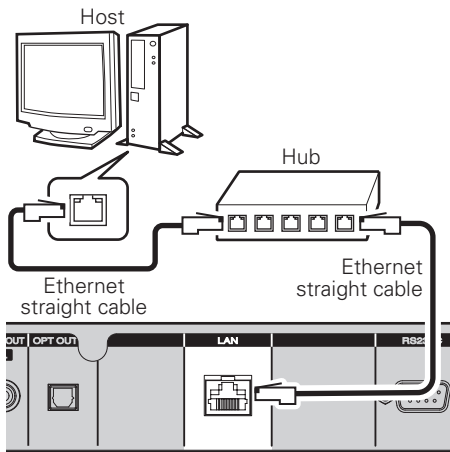

Communication protocol

The following three data forms are defined.

COMMAND

The message sent to a system from a host. A command to a system is given from a host. Refer to the following table for the contents of “Control command code table” (☞page 42).

RESPONSE

The message is sent to a host from a system if the ‘request command’ (COMMAND+?+CR(0x0D)) has come from a host. The RESPONSE should be sent within 200 ms of receiving the COMMAND. The form of RESPONSE presupposes that it is the same as that of EVENT. Refer to the following table for the contents of “Status request and status information code table” (☞page 44).

EVENT

The message sent to a host from a system. The result is sent, when a system is operated directly and a state changes. The form of EVENT presupposes that it is the same as that of COMMAND. Refer to the following table for the contents of “Event Status Command table” (☞page 45).

❑ Basic specification


The command by ASCII CODE, parameter expression

NOTE

ASCII CODE which can be used is from 0x20 to 0x7F: the alphabet and the number of 0-9, and space (0x20), some signs, and carriage return (0x0D) — It is used only as a pause sign.

Structure of Control Commands

Each packet of a control command begins with the COMMAND and ends with the End Character "0x0D" as shown below.

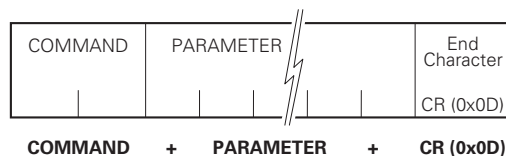

COMMAND: ASCII CODE of 2 characters

PARAMETER: ASCII CODE (up to 25 characters)

NOTE

To confirm the status information of the unit, send COMMAND + ? + CR to the unit from the host.

The unit status information is sent to the host.

For "Status request and status information code table" (page 44).

Structure of Command Codes

Item	Value (the hex value is indicated in parentheses)
Command	Indicate a description of the command.
Parameter	Indicate a description of the parameter.
End character	'CR'(0 x 0D)


The response time out is 200 msec.



- When a command is received, DN-700H responds within 200 msec.
- Allow an interval of at least 200 msec between commands when sending a series of commands from the host. DN-700H will not receive commands when the interval is less than 200 msec.
- COMMAND is receivable also during transmission of EVENT.
- Do not send request commands from the host until DN-700H returns a RESPONSE.
- 1 seconds later, please transmit the next COMMAND after transmitting a power on COMMAND (PWON).

① Controlling and operating DN-700H from the host


When DN-700H receives a control command from the host, the unit executes the command.

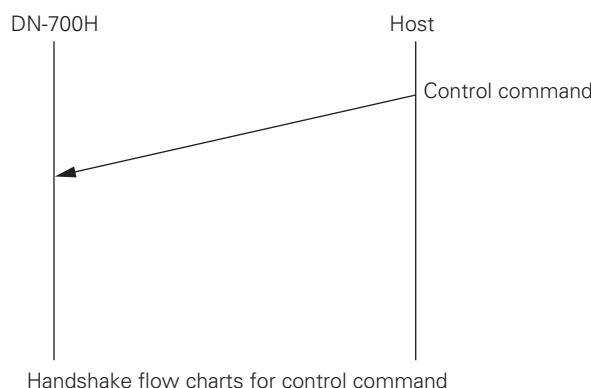

For "Control command code table" (page 42).

② Sending the status information for a status request command from the host


When DN-700H receives a status request command from the host, the unit responds the status information.

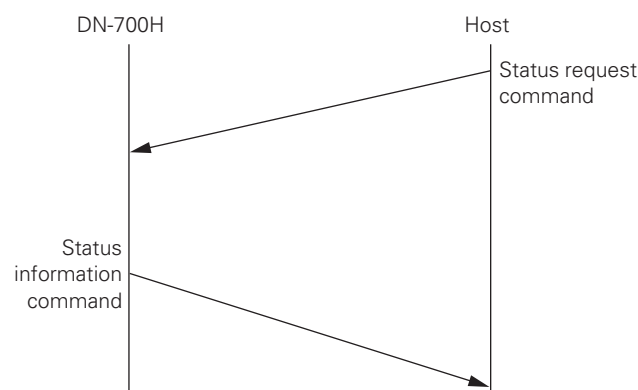

For "Status request and status information code table" (page 44).

③ Automatically sending the status information when there is a change to the DN-700H status

When there is a change to the DN-700H status, DN-700H automatically sends the status information to the host.

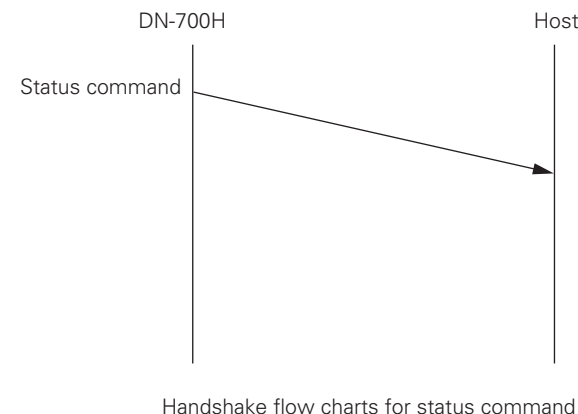

The commands used for sending status information are the same as the status information commands used for ②.

For "Status request and status information code table" (page 44).

Control command code table

CATEGORY	CONTENTS	COMMAND	PARAMETER	CODE	REMARKS
POWER	POWER ON	PW	ON	PWON<CR>	Only enabled when Network standby is "Network On".
	STANDBY		STANDBY	PWSTANDBY<CR>	
Input Source	Internet Radio	SI	InternetRadio	SIIRADIO<CR>	
	Music Server		MusicServer	SISERVER<CR>	
	USB		USB	SIUSB<CR>	
	Analog Tuner (AM/FM)		Analog Tuner(AM/FM)	SITUNER<CR>	
	RHAPSODY		RHAPSODY	SIRHAPSODY<CR>	Operation is only possible for U.S.A. and Canada models.
	PANDORA		PANDORA	SIPANDORA<CR>	Operation is only possible for U.S.A. and Canada models.
Favorite	FAVORITE direct change to No.**	FV	**	FV **<CR>	** : Favorite No
	"Cursor Up" Control	MN	CUP	MNCUP<CR>	
	"Cursor Down" Control		CDN	MNCDN<CR>	
	"Cursor Left" Control		CLT	MNCLT<CR>	
	"Cursor Right" Control		CRT	MNCRT<CR>	
	"Enter" Control		ENT	MNENT<CR>	
	"FAVORITE ON"		FAV ON	MNFAV ON<CR>	
	"FAVORITE OFF"		FAV OFF	MNFAV OFF<CR>	
Analog Tuner (AM/FM)	TUNER Frequency UP	TF	ANUP	TFANUP<CR>	TF COMMAND: '*' parameters can not operate when input source isn't tuner.
	TUNER Frequency DOWN		ANDOWN	TFANDOWN<CR>	
	TUNER Frequency direct change		AN*****	TFAN*****<CR>	****. ** kHz at AM band (>050000 is AM.)(6 digits) *Only enabled when receiving AM broadcasts ****. ** MHz at FM band (<050000 is FM.)(6 digits) *Only enabled when receiving FM broadcasts
	TUNER PRESET CHANNEL UP	TP	ANUP	TPANUP<CR>	TP COMMAND: '*' parameters can not operate when input source isn't tuner.
	TUNER PRESET CHANNEL DOWN		ANDOWN	TPANDOWN<CR>	
	TUNER PRESET direct change to No.**		(PRESET No.)	TPAN**<CR>	** : Tuner preset No
	TUNER PRESET MEMORY		ANMEM**	TPANMEM**<CR>	
	Band set to AM	TM	ANAM	TMANAM<CR>	
	Band set to FM		ANFM	TMANFM<CR>	
	Return Tuning Mode Status		?	TM?<CR>	
	Tuning mode set to AUTO mode		ANAUTO	TMANAUTO<CR>	
	Tuning mode set to MANUAL mode		ANMANUAL	TMANMANUAL<CR>	

CATEGORY	CONTENTS	COMMAND	PARAMETER	CODE	REMARKS
Internet Radio Music Server USB iPod direct Online Service	"Play" Control (Internet Radio/Music Server /USB)	@TP	PLAY	@TPPLAY<CR>	
	"Play/Pause" Control (iPod Direct)				
	"Pause" Control		PLAYPAUSE	@TPPLAYPAUSE<CR>	
	"Play/Pause" Control (iPod Direct)				
	"Stop" Control		STOP	@TPSTOP<CR>	
	"Skip Plus" Control		JUMP+	@TPJUMP+<CR>	
	"Skip Minus" Control		JUMP-	@TPJUMP-<CR>	
	"Cursor Up" Control	NS	90	NS90<CR>	
	"Cursor Down" Control		91	NS91<CR>	
	"Cursor Left" Control		92	NS92<CR>	
	"Cursor Right" Control		93	NS93<CR>	
	"Repeat One"		9H	NS9H<CR>	USB/iPod direct/Music Server
	"Repeat All"		9I	NS9I<CR>	USB/iPod direct/Music Server
	"Repeat Off"		9J	NS9J<CR>	USB/iPod direct/Music Server
	"Random On/Repeat ALL"		9K	NS9K<CR>	USB/Music Server
	"Shuffle Songs" Control				iPod direct only
	"Random Off"		9M	NS9M<CR>	USB/Music Server
	"Shuffle Off" Control				iPod direct only
	"Browse Mode/Remote Mode" Control		9W	NS9W<CR>	iPod direct only
	Preset1 Call	NSP	P1	NSP1<CR>	
	Preset2 Call		P2	NSP2<CR>	
	Preset3 Call		P3	NSP3<CR>	
	Preset1 Memory		P1 MEM	NSP1 MEM<CR>	
	Preset2 Memory		P2 MEM	NSP2 MEM<CR>	
	Preset3 Memory		P3 MEM	NSP3 MEM<CR>	
	Preset Name: P1		*	NSP01*****<CR>	*****: 20 digits
	Preset Name: P2		*	NSP02*****<CR>	*****: 20 digits
	Preset Name: P3		*	NSP03*****<CR>	*****: 20 digits
	"Direct Character Search"(except iPod Direct)	NSD	*	NSD*<CR>	*: 0-9, A-Z

□ Status request and status information code table

When the DN-700H receives a status request command from the host, it sends the status information to the host.

When there is a change to the DN-700H status, the DN-700H automatically sends the status information to the host.

Status request command (Host → DN-700H)			Status information command (DN-700H → Host)		REMARKS
Request.	Command	Response	Command		
POWER	PW Status	PW?<CR>	ON	PWON<CR>	
			STANDBY	PWSTANDBY<CR>	
Input Source	Input Source Status	SI?<CR>	TUNER	SITUNER<CR>	
			InternetRadio	SIIRADIO<CR>	
			MusicServer	SISERVER<CR>	
			USB	SIUSB<CR>	
Favorite	Favorite number status	FV?<CR>	Favorite number No.**	FV **<CR>	
Analog Tuner (AM/FM)	Frèquency Status	TFAN?<CR>	Frequency	TFAN*****<CR>	**** ** kHz at AM band (>050000 is AM.) (6 digits) *Only enabled when receiving AM broadcasts **** ** MHz at FM band (<050000 is FM.)(6 digits) *Only enabled when receiving FM broadcasts
	Preset Status	TPAN?<CR>	Preset number	TPAN**<CR>	** : Tuner preset No
	Mode Status	TM?<CR>	Auto mode	TMANAUTO<CR>	
			Manual mode	TMANMANUAL<CR>	
Internet Radio Music Server USB iPod direct Online Service	Onscreen Display Information List	NSE<CR> UTF-8 CODE Character	Displays current screen information	NSE0*****_?????<CR>	*: UTF-8 code character (Max 95 byte) ?: Don't care (The character after Null should be disregarded) _: Null ※: Cursor & playable music Information data (1 byte) Bit1: Playable music =1 Bit2, 3: Don't care Bit4: Cursor select=1 Bit5, 6, 7, 8: Don't care *****_?????: 96 byte fixed
				NSE1※*****_?????<CR>	
				NSE2※*****_?????<CR>	
				NSE3※*****_?????<CR>	
				NSE4※*****_?????<CR>	
				NSE5※*****_?????<CR>	
				NSE6※*****_?????<CR>	
				NSE7*****_?????<CR>	
				NSE8*****_?????<CR>	
				NSE9*****_?????<CR>	
	Net Audio Preset 1-3 status (UTF-8)	NSP<CR>	Displays the registered Preset name	NSP01 - NSP03	

□ Event Status Command table

Unit event information is displayed.


EVENT	CONTENTS	EVENT	PARAMETER	CODE	REMARKS
POWER	POWER ON	PW	ON	PWON<CR>	
	STANDBY		STANDBY	PWSTANDBY<CR>	
Input Source	Internet Radio	SI	InternetRadio	SIIRADIO<CR>	
	Music Server		MusicServer	SISERVER<CR>	
	USB		USB	SIUSB<CR>	
	Analog Tuner (AM/FM)		Analog Tuner(AM/FM)	SITUNER<CR>	
	RHAPSODY		RHAPSODY	SIRHAPSODY<CR>	Operation is only possible for U.S.A. and Canada models.
	PANDORA		PANDORA	SIPANDORA<CR>	Operation is only possible for U.S.A. and Canada models.
Favorite	“FAVORITE NAME” Request	FV	**	FV**aaaa_??????<CR>	*: Favorite No. , a: Character length (MAX 32 byte), _: Null
			aaaa_??????		? : Don't Care (The character after Null should be disregarded) **aaaa_?????: 35 byte fixed
Analog Tuner (AM/FM)	TUNER Frequency change	TF	AN*****	TFAN****.*<CR>	****.* kHz at AM band (6 digits) ****.* MHz at FM band (6 digits)
	TUNER PRESET change to No.**		AN**(PRESET No.)	TPAN**<CR>	**(Preset No.)
	Band set to AM		ANAM	TMANAM<CR>	
	Band set to FM	TP	ANFM	TMANFM<CR>	
	Tuning mode set to AUTO mode		ANAUTO	TMANAUTO<CR>	
	Tuning mode set to MANUAL mode	TM	ANMANUAL	TMANMANUAL<CR>	
On screen Display Information	Answered By the NSE Command.	NSE	0	NSE0*****_?????<CR>	*: UTF-8 code character (Max 95 byte) ?: Don't care (The character after Null should be disregarded) _: Null ※: Cursor & playable music Information data (1byte) Bit1: Playable Music =1 Bit2, 3: Don't care Bit4: Cursor select=1 Bit5, 6, 7, 8: Don't care *****_?????: 96 byte Fixed
	Display Line0 Information		1	NSE1※*****_?????<CR>	
	Display Line1 Information		2	NSE2※*****_?????<CR>	
	Display Line2 Information		3	NSE3※*****_?????<CR>	
	Display Line3 Information		4	NSE4※*****_?????<CR>	
	Display Line4 Information		5	NSE5※*****_?????<CR>	
	Display Line5 Information		6	NSE6※*****_?????<CR>	
	Display Line6 Information		7	NSE7*****_?????<CR>	
	Display Line7 Information		8	NSE8*****_?????<CR>	
	Display Line8 Information		9	NSE9*****_?????<CR>	
	Display Line9 Information				

Information

Part names and functions

For buttons not explained here, see the page indicated in parentheses ().

Front panel

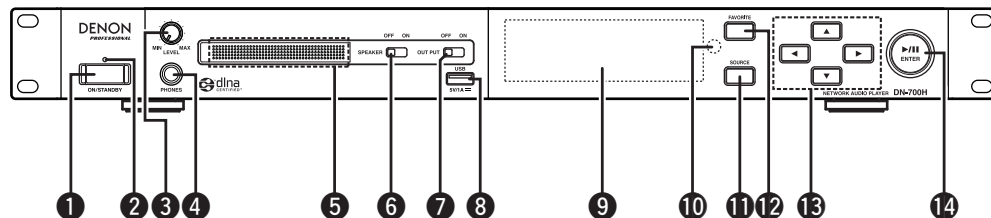


- 1 Power operation button (ON/STANDBY)** (8)
Turns power to this unit on and off (standby).
- 2 Power indicator** (8)
The power indicator changes as shown below according to the status of the unit.
 - Standby Red
 - Network standby Orange
 - Auto standby Off
- NOTE**
The DENON PROFESSIONAL logo on the front panel lights blue when the power is turned on.
- 3 Volume adjustment knob (LEVEL)** (5)
Adjusts the volume of headphones and the front speakers.
Press the switch to make it spring out. After adjusting the volume, press the switch back in again.
- 4 Headphones jack (PHONES)** (5)
- 5 Front speaker**
- 6 Speaker output switch (SPEAKER ON/OFF)** (4)
Switch to "ON" to output audio from the front speakers of the unit.
When this switch is "OFF", sound is not output from the front speakers of the unit.
- 7 Audio output switch (OUT PUT ON/OFF)** (4)
Switch to "ON" to output audio to an external device connected to the unit.
When this switch is "OFF", audio is not output to the external device.
- 8 USB port** (23, 25)
Used to connect USB memory devices or iPod.
- 9 Display**
Displays play status, settings, etc.
- 10 Remote control sensor** (3)
- 11 Input source select button (SOURCE)** (9)
Selects the input source.
- 12 Favorite button (FAVORITE)** (22)
Calls stations or files registered in the favorite list. Also registers stations or files to the favorite list.
- 13 Cursor buttons (Δ ▽ ◀ ▶)** (9)
- 14 Play/Pause button (▶/II)** (9)
ENTER button (9)



The buttons on the unit are lit when they can be operated, and off when they cannot be operated.

Rear panel

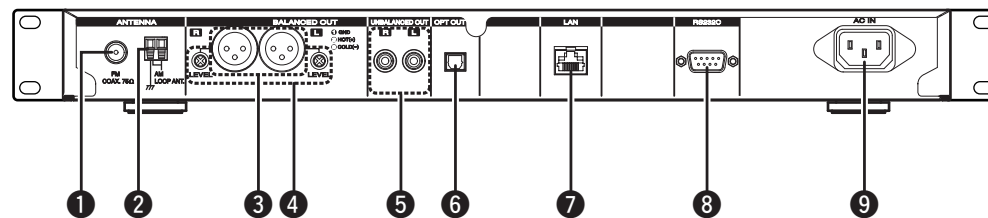


- 1 FM antenna terminal** (6)
Connect the supplied FM indoor antenna. Connect to an external antenna if reception is poor.
- 2 AM antenna terminal** (6)
Connect to the supplied AM loop antenna.
- 3 BALANCED OUT connectors** (4)
Connect a separate Amplifier, Mixer, or Pre amplifier (sold separately).
Use the following types of cable to connect the devices.
 - XLR Type
 - Pin Arrangement: 1 GND, 2 Hot, 3 Cold
 - Applicable Connector: XLR-3-11C or equivalent
- 4 LEVEL control knob** (4)
Adjust the volume level for balanced output.
- 5 UNBALANCED OUT connectors** (4)
Connect a separate Amplifier, Mixer, or Pre amplifier (sold separately).
Use an RCA Type cable to connect the devices.
- 6 Digital out connector (OPT OUT)** (5)
Connect a digital device such as a commercially available AV receiver or D/A converter.
- 7 LAN connector** (7)
- 8 RS232C connector** (5)
- 9 AC inlet (AC IN)** (8)
Connect the supplied power cord.

Remote control

This section explains the buttons used to playback each input source.

Buttons that work with all input sources (USB/iPod, TUNER and network)

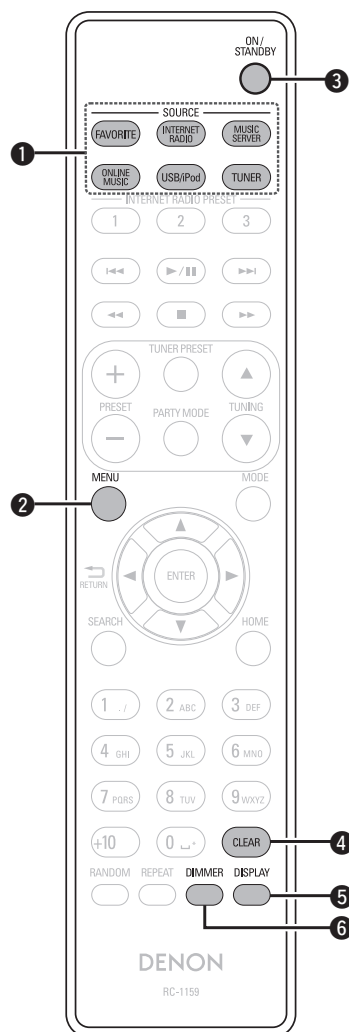


- 1 Input source select button (9)
- 2 MENU button (28)
- 3 ON/STANDBY button (8)
- 4 CLEAR button (38, 39)
- 5 DISPLAY button (13)
- 6 DIMMER button (9)

NOTE

The PARTY MODE button is not used for any operations on this unit.
Also, the ONLINE MUSIC button is not used on European models.

Buttons that work when the input source is "Internet Radio", "Music Server", "Pandora" or "Rhapsody"


"Buttons that work with all input sources (USB/iPod, TUNER and network)" can also be used.

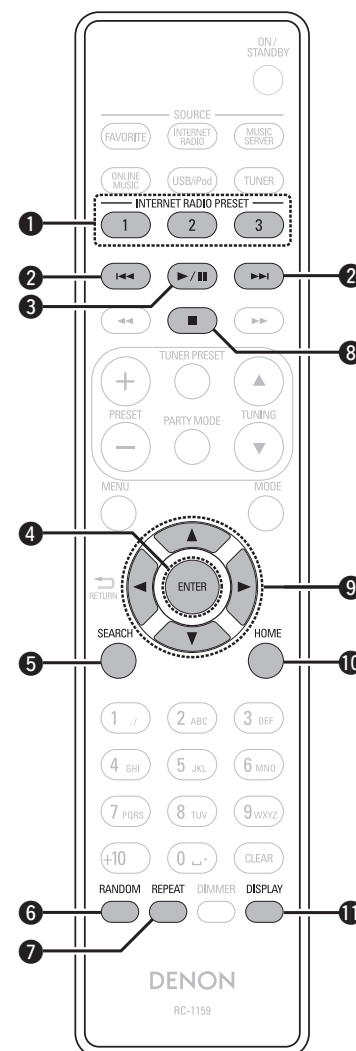

- 1 INTERNET RADIO PRESET buttons (12)
- 2 Reverse-skip/Forward-skip buttons
(◀◀, ▶▶) (17)
- 3 Play/Pause button (▶/||) (17)
- 4 ENTER button (12)
- 5 SEARCH button (13)
- 6 RANDOM button (17)
- 7 REPEAT button (17)
- 8 Stop button (■) (13)
- 9 Cursor buttons (△▽◀▶) (12)
- 10 HOME button (13)
- 11 DISPLAY button (13)

Buttons that work when the input source is "TUNER"


"Buttons that work with all input sources (USB/iPod, TUNER and network)" can also be used.

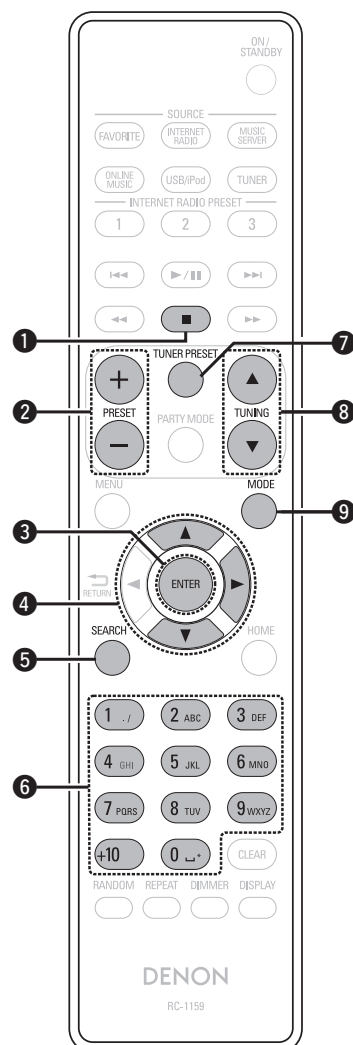

- 1 Stop button (■) (20)
- 2 Preset channel buttons (PRESET +, -) (21)
- 3 ENTER button (20)
- 4 Cursor buttons (Δ ∇ ▷) (20, 21)
- 5 SEARCH button (20)
- 6 Number buttons (21)
- 7 TUNER PRESET button (20)
- 8 Tuning up/Tuning down buttons (TUNING Δ ∇) (20)
- 9 MODE button (20)

Buttons that work when the input source is "USB/iPod"

"Buttons that work with all input sources (USB/iPod, TUNER and network)" can also be used.

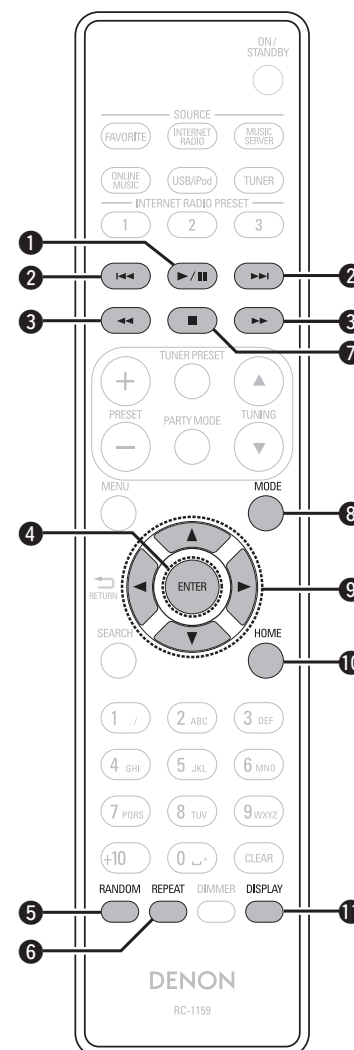

- 1 Play/Pause button (▶/||) (23, 25)
- 2 Reverse-skip/Forward-skip buttons (◀◀, ▶▶) (24, 26)
- 3 Fast-reverse/Fast-forward buttons (◀◀, ▶▶) (24)
- 4 ENTER button (23, 25)
- 5 RANDOM button (24, 26)
- 6 REPEAT button (24, 26)
- 7 Stop button (■) (24, 26)
- 8 MODE button (23)
- 9 Cursor buttons (Δ ∇ ◀ ▷) (24, 26)
- 10 HOME button (24, 26)
- 11 DISPLAY button (24, 26)

Made for



iPod iPhone



“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone, may affect wireless performance.

AirPlay, the AirPlay logo, iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

- Individual users are permitted to use iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch for private copy and playback of non-copyrighted contents and contents whose copy and playback is permitted by law. Copyright infringement is prohibited by law.

USB memory device

Important information

A USB memory device can be connected to the USB port of this unit to play music files stored on the USB memory device.

Also, files stored on an iPod can be played when the iPod is connected directly to the USB port of this unit. See “iPod® playback” (page 23).

- Only USB memory devices conforming to mass storage class and MTP (Media Transfer Protocol) standards can be played on this unit.
- This unit is compatible with USB memory devices in “FAT16” or “FAT32” format.



If the number of files stored in a USB memory device exceeds 1,000, the access speed may become slower.

[Types of files that can be played back by each function]

	USB memory devices *1
WMA (Windows Media Audio)	✓ *2
MP3 (MPEG-1 Audio Layer-3)	✓
WAV	✓
MPEG-4 AAC	✓ *3
FLAC (Free Lossless Audio Codec)	✓ *4

*1 USB

- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit is compatible with WMA META tags.
- WAV format Quantization bit rate: 16 bits.
- If the image size (pixels) of an album artwork exceeds 500×500 (WMA/MP3/WAV/FLAC) or 349×349 (MPEG-4 AAC), then music may not be played back properly.

*2 Copyright-protected files can be played on certain portable players compatible with MTP.

*3 Only files that are not protected by copyright can be played on this unit.

Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

*4 For FLAC format files, 32/44.1/48/88.2/96 kHz 16/24 bit 2channel attribute files can be played. For other file formats (MP3, WMA, m4A, WAV), 32/44.1/48 kHz 16 bit 2channel attribute files can be played.

[Playback file specifications]

	Sampling frequency	Bit rate	Extension
WMA (Windows Media Audio)	32/44.1/48 kHz	48 – 192 kbps	.wma
MP3 (MPEG-1 Audio Layer-3)	32/44.1/48 kHz	32 – 320 kbps	.mp3
WAV	32/44.1/48 kHz	–	.wav
MPEG-4 AAC	32/44.1/48 kHz	16 – 320 kbps	.aac/ .m4a/ .mp4
FLAC (Free Lossless Audio Codec)	32/44.1/48/ 88.2/96 kHz	–	.flac

Network audio

Important information

□ About the internet radio function

- Internet radio refers to radio broadcasts distributed over the Internet.
Internet radio stations from around the world can be received.
- This unit is equipped with the following Internet radio functions:
 - Stations can be selected by genre and region.
 - Internet radio stations can be preset (see page 12).
 - Internet radio stations in MP3 and WMA (Windows Media Audio) format can be listened to.
 - Your favorite radio stations can be registered by accessing an exclusive DENON Internet radio URL from a Web browser on a computer.
- The function is managed for individual users, so you must provide your MAC or e-mail address.
Exclusive URL: <http://www.radiodenon.com>
- The radio station database service may be suspended without notice.
- This unit's Internet radio station list is created using a radio station database service (vTuner). This database service provides a list edited and created for this unit.

□ About the Music server

This function lets you play music files and playlists (m3u, wpl) stored on a computer (music server) connected to this unit via a network.

With this unit's network audio playback function, connection to the server is possible using one of the technologies below.

- Windows Media Player Network Sharing Service
- Windows Media DRM10

[Types of files that can be played back by each function]

Format*8	Internet radio	Music server *1		
		Windows Media Player 11	Windows Media Player 12	DLNA Server*3
WMA (Windows Media Audio) (with DRM)	*5	✓	✓	*4
WMA (Windows Media Audio) (without DRM)	✓	✓	✓	✓
WMA Lossless	*9	✓	✓	*9
MP3 (MPEG-1 Audio Layer-3)	✓	✓	✓	✓
WAV (Liner PCM)	*5	✓	✓	✓
m4a (iTunes AAC, without DRM)	*5	*6	✓*2	✓*2
FLAC (Free Lossless Audio Codec)	*5	*7	*7	✓

A server or server software compatible with distribution in the corresponding formats is required to play music files via a network.

*1 Music server

- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit is compatible with WMA META tags.
- WAV format Quantization bit rate: 16 bits.
- If the image size (pixels) of an album artwork exceeds 500×500 (WMA/MP3/WAV/FLAC) or 349×349 (MPEG-4 AAC), then music may not be played back properly.

*2 Only files that are not protected by copyright can be played on this unit.

Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

*3 Depending on the DLNA server specifications, formats that can be distributed may differ. Check the manual of your DLNA server. This table assumes the use of Twonky Media ver.4.4 (<http://www.twonkyvision.de/>). DLNA server software such as Twonky Media must be purchased separately.

*4 DLNA servers do not support the distribution of DRM contents.

*5 DN-700H supports the playback of MP3 and WMA (no copyright protection) format Internet Radio Stations.

*6 Windows Media Player 11 does not support m4a format distribution.

*7 Windows Media Player 11 and Windows Media Player 12 do not support FLAC format distribution.

*8 For FLAC format files, 32/44.1/48/88.2/96 kHz 16/24 bit 2channel attribute files can be played. For other file formats (MP3, WMA, m4A, WAV), 32/44.1/48 kHz 16 bit 2channel attribute files can be played.

*9 Internet radio and DLNA Server do not support WMA Lossless format distribution.

[Playback file specifications]

	Sampling frequency	Bit rate	Extension
WMA (Windows Media Audio)	32/44.1/48 kHz	48 – 192 kbps	.wma
MP3 (MPEG-1 Audio Layer-3)	32/44.1/48 kHz	32 – 320 kbps	.mp3
WAV	32/44.1/48 kHz	–	.wav
MPEG-4 AAC	32/44.1/48 kHz	16 – 320 kbps	.aac/ .m4a/ .mp4
FLAC (Free Lossless Audio Codec)	32/44.1/48/ 88.2/96 kHz	–	.flac

NOTE

- When using Twonky Media, if there are more than 300 sub folders stored in the selected folder, music files may not be recognized.
- When using Windows Media Player 11, if there are more than 10000 music files registered in the selected folder, music files may not be recognized.
- Depending on the Music server used, the pause operation may be unavailable.

□ About Pandora®

Pandora® is free personalized internet radio that helps you discover new music you'll love mixed in with music you already know. You can instantly listen to your own personalized radio stations that are created by simply entering a favorite artist, song, comedian or genre.

When you first listen to Pandora®, it is necessary to subscribe to a Pandora® account at the Pandora® homepage on your PC and register this machine. See the Pandora® website for details.

<http://www.pandora.com/denon>

PANDORA, the PANDORA logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. Used with permission.

□ About Rhapsody

Rhapsody is a paid music broadcast service of RealNetworks.

When you first listen to Rhapsody, it is necessary to subscribe to a Rhapsody account at the Rhapsody homepage by your PC and register this machine. See the Rhapsody homepage for details.

<http://www.rhapsody.com/denon>

Glossary of terms

A

AirPlay

AirPlay sends (plays) contents recorded in iTunes or on an iPhone/iPod touch to a compatible device via the network.

B

Bit rate

This expresses the read amount per 1 second of video/audio data recorded in a disc. A larger number means higher sound quality, but also means a larger file size.

D

DLNA

DLNA and DLNA CERTIFIED are trademarks and/or service marks of Digital Living Network Alliance. Some contents may not be compatible with other DLNA CERTIFIED™ products.

DRM

DRM stands for Digital Rights Management. It is a general term that describes technology or functions that are used to protect the copyright of digital content such as music and movies.

F

FLAC

FLAC stands for Free lossless Audio Codec, and is a lossless free audio file format. Lossless means that the audio is compressed without any loss in quality. The FLAC license is as shown below.

Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2007,2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

I

iTunes

iTunes is the name of the multimedia player provided by Apple Inc. It enables management and playback of multimedia contents including music and movies. iTunes supports many main file formats including AAC, WAV, and MP3.

M

MP3 (MPEG Audio Layer-3)

This is an internationally standardized audio data compression scheme, using the "MPEG-1" video compression standard. It compresses the data volume to about one eleventh its original size while maintaining sound quality equivalent to a music CD.

MPEG (Moving Picture Experts Group), MPEG-2, MPEG-4

These are the names for digital compression format standards used for the encoding of video and audio. Video standards include "MPEG-1 Video", "MPEG-2 Video", "MPEG-4 Visual", "MPEG-4 AVC". Audio standards include "MPEG-1 Audio", "MPEG-2 Audio", "MPEG-4 AAC".

S

Sampling frequency

Sampling involves taking a reading of a sound wave (analog signal) at regular intervals and expressing the height of the wave at each reading in digitized format (producing a digital signal).

The number of readings taken in one second is called the "sampling frequency". The larger the value, the closer the reproduced sound is to the original.

V

vTuner

This is a free online content server for Internet radio. Note that usage fees are included in upgrade costs.

For inquiries about this service, visit the vTuner site below.

vTuner website: <http://www.radiodemon.com>

This product is protected by certain intellectual property rights of Nothing Else Matters Software and BridgeCo. Use or distribution of such technology outside of this product is prohibited without a license from Nothing Else Matters Software and BridgeCo or an authorized subsidiary.

W

Windows Media DRM

This is a copyright protection technology developed by Microsoft.

Content providers are using the digital rights management technology for Windows Media contained in this device (WM-DRM) to protect the integrity of their content (Secure Content) so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM software to play Secure Content (WM-DRM Software). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content (Secure Content Owners) may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content.

A list of revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation list onto your device on behalf of Secure Content Owners.

Windows Media Player Ver. 11 or later

This is a media player distributed free of charge by Microsoft Corporation.

It can be used to play playlists created with Windows Media Player Ver. 11 or later as well as files in such formats as WMA, DRM WMA, MP3 and WAV.

WMA (Windows Media Audio)

This is audio compression technology developed by Microsoft Corporation.

WMA data can be encoded using Windows Media® Player Ver.7, 7.1, Windows Media® Player for Windows® XP and Windows Media® Player 9 Series.

To encode WMA files, only use applications authorized by Microsoft Corporation. If you use an unauthorized application, the file may not work properly.

Troubleshooting

If a problem occurs first check the following:

1. Are the connections correct?
2. Is the set being operated as described in the owner's manual?
3. Are the other devices operating properly?

If this unit does not operate properly, check the items listed in the table below.

If the symptom is not covered on the check list, contact your dealer or service centers.

Service centers are listed at <http://www.d-mpro.com>.

[General]

Symptom	Cause	Countermeasure	Page
Set does not operate properly.	• External noise or interference is causing the set to malfunction.	• Reset the microprocessor.	39
Display not lit and sound not produced when power switched to on.	• Power cord not plugged in securely.	• Check the connections on the set's rear panel and the connection of the power plug to the power outlet.	8
Display lit but sound not produced.	• Wrong input source selected.	• Select the appropriate input source.	9
Display is off.	• The Dimmer setting is set to "Off".	• Set to something other than "Off".	9
Power turns off suddenly and POWER indicator flashes red. (Flashes at 0.25 second intervals)	• Set is damaged.	• Turn off the power and contact a D&M Professional service center.	—
"No Network Connection" is displayed.	• The network is not properly set up.	• Select a source other than the network function.	9
		• Perform "Network First Setup."	28
Remote control does not work.	• The "IR Remote" setting is set to "Disable".	• Set the "IR Remote" setting to "Enable".	33
When the power is in standby mode, the power indicator does not light red.	• The "Auto Standby" setting is set to "On". • The "Network Standby" setting is set to "On".	• Set the "Auto Standby" setting to "Off".	8, 32
		• Set the "Network Standby" setting to "Off".	8, 11
Audio is not output from the BALANCED OUT connectors or UNBALANCED OUT connectors.	• The audio output switch on the front panel is "OFF".	• Turn the audio output switch on the front panel "ON".	4

[Tuner]

Symptom	Cause	Countermeasure	Page
Continuous noise is heard when receiving FM programs.	• Antenna cable is not properly connected.	• Connect the antenna cable properly. • Connect an outdoor antenna.	6 —
Hissing or continuous noise is heard when receiving AM programs.	• This may be noise from a TV or interference from a broadcast station.	• Turn off the TV. • Change the position and direction of the AM loop antenna.	— 6
Display lit but sound not produced.	• When the input source is "FM" or "AM", audio is not output from the digital out connector.	• Use the BALANCED OUT connectors or UNBALANCED OUT connectors.	4, 5

[Internet radio/Music server/iPod/USB memory device]

Symptom	Cause	Countermeasure	Page
Music files are not played correctly.	• The size of the album artwork image registered to the music file is too large.	• The supported album art image size for WMA, MP3, WAV, and FLAC formats is 500 x 500 pixel or smaller. For m4a format, the supported image size is 349 x 349 pixel or smaller. If the image is larger than the supported size, the audio file may not be played correctly.	—
When a USB memory device is connected, "USB/iPod" is not displayed.	• The set cannot recognize a USB memory device.	• Check the connection.	25
	• A USB memory device not conforming to mass storage class or MTP standards is connected.	• Connect a USB memory device conforming to mass storage class or MTP standards.	—
	• A USB memory device that the set cannot recognize is connected.	• This is not a malfunction. D&M Professional does not guarantee that all USB memory devices will operate or receive power.	—
iPod cannot be played.	• USB memory device is connected via USB hub.	• Connect the USB memory device directly to the USB port.	—
	• The input source is set to something other than "USB/iPod".	• Switch the input source to "USB/iPod".	9
	• Cable is not properly connected.	• Reconnect.	23
	• The iPod is connected to this unit using an iPod cable (commercially available) that is longer than 2 m (6.6 ft).	• Use a genuine cable or iPod cable that is shorter than 1 m (3.3 ft) to connect the iPod to this unit.	23

Symptom	Cause	Countermeasure	Page
Files on a USB memory device cannot be played.	• USB memory device is in a format other than FAT16 or FAT32.	• Set the format to FAT16 or FAT32. For details, refer to the USB memory device's operating instructions.	–
	• USB memory device is divided into multiple partitions.	• When divided into multiple partitions, only files stored in the top partition can be played.	–
	• Files are stored in a non-compatible format.	• Record the files in a compatible format.	49
	• You are attempting to play a file that is copyright protected.	• Files that are copyright protected cannot be played on this set.	49
Internet radio cannot be played.	• Ethernet cable is not properly connected or network is disconnected.	• Check the connection status.	7
	• Program is being broadcast in non-compatible format.	• Only Internet radio programs in MP3 and WMA can be played on this set.	50
	• The computer's or router's firewall is activated.	• Check the computer's or router's firewall settings.	–
	• Radio station is not currently broadcasting.	• Choose a radio station that is currently broadcasting.	12
	• IP address is wrong.	• Check the set's IP address.	28
Files stored on a computer cannot be played.	• Files are stored in a non-compatible format.	• Record in a compatible format.	50
	• You are attempting to play a file that is copyright protected.	• Files that are copyright protected cannot be played on this set.	50
	• Set and computer are connected by USB cable.	• The set's USB port cannot be used for connection to a computer.	–
Server is not found, or it is not possible to connect to the server.	• The computer's or router's firewall is activated.	• Check the computer's or router's firewall settings.	–
	• Computer's power is not turned on.	• Turn on the power.	–
	• Server is not running.	• Launch the server.	–
	• Set's IP address is wrong.	• Check the set's IP address.	28
Cannot connect to preset or favorite radio stations.	• Radio station is not currently broadcasting.	• Wait a while before trying again.	–
	• Radio station is not currently in service.	• It is not possible to connect to radio stations that are no longer in service.	–

Symptom	Cause	Countermeasure	Page
For some radio stations, "Server Full" or "Connection Down" is displayed and station cannot be connected to.	• Station is congested or not currently broadcasting.	• Wait a while before trying again.	–
Sound is broken during playback.	• Network's signal transfer speed is slow or communications lines or radio station is congested.	• This is not a malfunction. When playing broadcast data with a high bit rate, the sound may be broken, depending on the communications conditions.	–
Sound quality is poor or played sound is noisy.	• File being played has a low bit rate.	• This is not a malfunction.	–



[Pandora®] (U.S.A. and Canada models only)

Symptom	Cause	Countermeasure	Page
Cannot login to Pandora®. ("Email address" or "Password" is displayed.)	• Login information is incorrect.	• Check if the "Email address" for Pandora® has been properly entered. Re-enter the "Password". (Password is not displayed.)	17
"Account is no longer active" is displayed.	• Your account has expired.	• Obtain a new account. • Contact Pandora® Listener Support at pandora-support@pandora.com .	–
"Pandora is only available for use in United States" is displayed.	• You are trying to access from a country where Pandora® is not available.	• Pandora® is not available in all countries. Please check http://blog.pandora.com/faq/ .	–
"Incorrect Email or Password" is displayed.	• You entered an incorrect account or password for the login authentication.	• Enter the correct email address and password.	17
"No skips remaining" is displayed.	• You may only skip up to 6 tracks per station, per hour (and free Pandora® accounts are limited to 12 skips per day). When the skips are used up, no more forward/skip operation is available.	• Unfortunately, our music licenses force us to limit the amount of tracks you can skip in an hour.	–
"100 Station Limit" is displayed.	• You have already registered 100 stations. You can not register a new station.	• Reduce the number of stations to fewer than 100.	–
"Please Try Again Later" is displayed.	• Pandora® is performing system maintenance.	• Please try again later.	–

[Rhapsody] (U.S.A. and Canada models only)

Symptom	Cause	Countermeasure	Page
Cannot login to Rhapsody. ("Incorrect Username or Password" is displayed.)	• Login information is incorrect.	• Check if the Username for Rhapsody has been properly entered. Re-enter the Password. (Password is not displayed.) www.rhapsody.com/denon	19

[AirPlay]

Symptom	Cause	Countermeasure	Page
The AirPlay icon  is not displayed in iTunes or on the iPhone/iPod touch.	• This unit and the computer or iPhone/iPod touch are not connected to the same network (LAN). • iTunes or the iPhone/iPod touch do not have firmware that supports AirPlay installed.	• Connect the computer or iPhone/iPod touch to the same network as this unit. • Update to the latest firmware.	3 34
No sound.	• This unit is not selected in the screen that is displayed when iTunes or the iPhone/iPod touch is started.	• Start iTunes or switch on the iPhone/iPod touch, click the AirPlay icon  in the displayed screen, and select this unit.	27

[Remote control]

Symptom	Cause	Countermeasure	Page
Set does not work properly when remote control operated.	• Batteries are worn. • You are operating outside of the specified range. • Obstacle between main unit and remote control. • The batteries are not inserted in the proper direction, as indicated by the polarity marks in the battery compartment. • The set's remote control sensor is exposed to strong light (direct sunlight, fluorescent light, etc.).	• Replace with new batteries. • Operate within the specified range. • Remove the obstacle. • Insert the batteries in the proper direction, following the polarity marks in the battery compartment. • Move the set to a place in which the remote control sensor will not be exposed to strong light.	3 3 – 3 3

Specifications

Audio section

- Audio channel
- Frequency response

- Signal-to-noise Ratio
- Dynamic range
- Channel separation
- Total Harmonic Distortion
- Analog output

- Balanced out L/R
 - Type
 - Maximum level
 - Variable range
- Unbalanced out L/R
 - Type
 - Standard level
- Digital output (optical)
- Headphone Output :
- Monitor speaker Output

2 channel stereo
2 Hz – 48 kHz (Sampling frequency: 96 kHz)
2 Hz – 20 kHz (Sampling frequency: 44.1 kHz)
98 dB (1 kHz, 0 dB playback, A filter)
96 dB (1 kHz, 0 dB playback, A filter)
88 dB (1 kHz, 0 dB playback, A filter)
0.01% (1 kHz, 0 dB playback, A filter)

XLR (1 : GND, 2 : Hot, 3 : Cold)
+10 dBu / Under 600 Ω load (0 dBFS Reference)
+10 – –6 dBu

RCA terminal
2 Vrms / Under 10 kΩ load
–21 – –15 dBm
20 mW / 32 Ω
600 mW / 8 Ω

Tuner section

- FM tuner
- Range of receivable frequencies

- S/N ratio (mono)
- Sensitivity (S/N 50 dB)
- AM tuner
- Range of receivable frequencies

- S/N ratio
- Sensitivity (S/N 20 dB)

87.5 – 107.9 MHz
(U.S.A. and Canada models)
87.5 – 108.0 MHz
(European,U.K. and Asia/Pacific models)
65 dB
7 dBμV (IHF)

520 – 1710 kHz
(U.S.A. and Canada models)
522 – 1611 kHz
(European,U.K. and Asia/Pacific models)
40 dB
56 dBμV/m

Power supply

Power supply voltage/frequency

AC 120 V, 60 Hz
(U.S.A. and Canada models)
AC 230 V, 50/60 Hz
(European,U.K. and Asia/Pacific models)
20 W
0.5 W
6.5 W

Power consumption
Power consumption in standby mode
Power consumption in network standby mode

- For purposes of improvement, specifications and design are subject to change without notice.

Getting started
Connections
Basic operations
Advanced operations
Information
Glossary of terms
Troubleshooting
Specifications
Index

Index

A

Accessories	2
Add New Feature	34
AirPlay	27, 51
AM loop antenna	6
Auto preset	20
Auto Standby	32

B

Bit rate	49, 50, 51
Browse mode	23

C

Cable	
Audio cable	4
Balanced cable	4
Ethernet cable	7
Optical cable	5
RS-232C straight cable	5
Characters	38, 39
Connection	
Amplifier	4
Antenna	6
AV receiver	5
D/A converter	5
External control device	5
Headphones	5
Mixer	4
Network	7
Power cord	8
Pre amplifier	4

D

Display's brightness	9
DLNA	51

F

Favorite list	22
Firmware Update	34
FLAC	51
FM indoor antenna	6
Friendly Name Edit	31
Front panel	46

I

Input source	9
Inputting characters	38
Internet radio	12
IR Remote	33
iTunes	27, 51

K

Key Lock	33
----------------	----

L

Language	35
----------------	----

M

Menu map	28
MP3	49, 50, 51
MPEG	51
MPEG-4 AAC	49
Music server	16

N

Network First Setup	10
Network Standby	30

P

Pandora®	17
PC Language	31
Playback	
FM/AM	20
Internet radio	12
iPod	23
Music Server	16
Network audio	12, 50
Pandora®	17
Random	26
Repeat	26
Rhapsody	19
USB memory device	25, 49
Power on Play	32
Private radio station	14
PTY	36

R

RDS	36
Rear panel	46
Remote control	3, 47, 48
Batteries	3
Remote mode	23
Resetting the microprocessor	39
Rhapsody	19
RT	37

S

Sampling frequency	49, 50, 51
Screen Saver	33
Serial remote control	40
IP Control (Ethernet)	40
RS-232C control	40
Setting	
Network	29
Other	32

T

TP	37
----------	----

U

Update Notification	31
Upgrade Notification	31

V


vTuner	50, 51
--------------	--------

W

Windows Media DRM	50, 51
Windows Media Player	16, 51
WMA	49, 50, 51

Dimensions

Unit : mm (in)

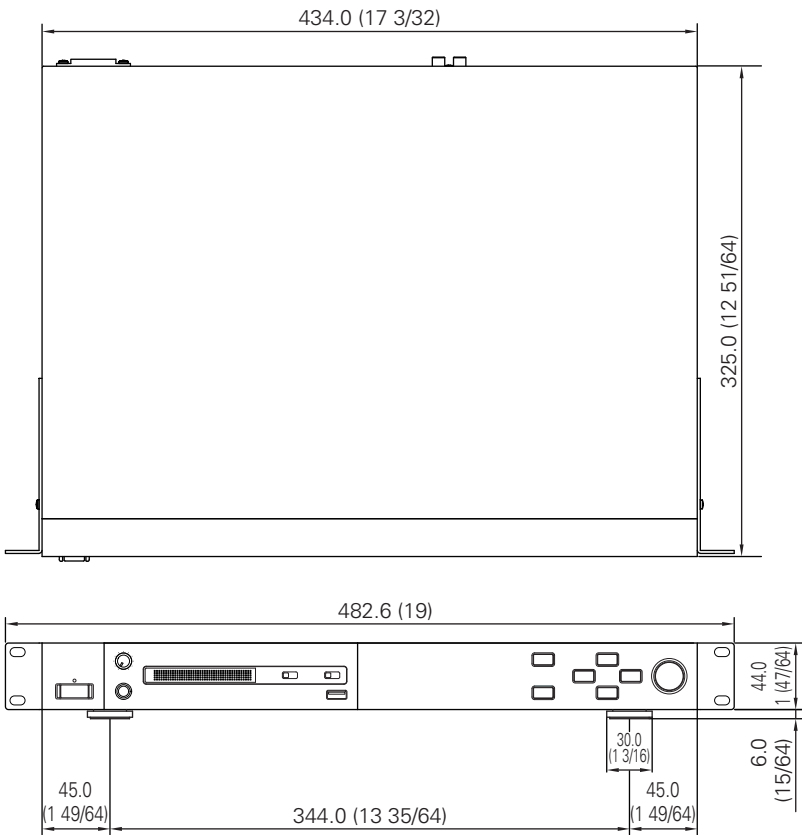

Weight

3.3 kg (7.4 lbs)

D&M Holdings Inc.