# Bose<sup>®</sup> ControlSpace<sup>®</sup> AMS-8 Audio Management System

Privileged user software guide





# **Room Control**

English

# Paging Panel

Room Control can be used to change the source and volume settings of a room. This module contains 3 displays, showing:

- 1. the selected room (left display)
- 2. the selected source (right display)
- 3. a listing of available sources and rooms, depending on the button pressed.
- When no button is pressed, the third display shows the actual status of the room.





Press this button to turn a room on/off



Press this button to synchronize the AMS-8 system time with the connected computer time (only available in Multi User mode)



Settings button (Pin-code protected)



Button to open all modules (Paging panel & Presets/Events, only available in Multi User Mode)



Room select: Press this button at the left to select another room to control (only available in Multi User Mode)

Select: Press this button at the right to select another source to listen to



Minimize/Close button

口))

Mute: Press this button to mute the source (only available in Single User Mode)

Volume fader: Move this fader to adjust the level in the room, shown on the display

The paging panel can be used to page into one or more rooms/zones by using a separate microphone. This panel can also be used to send a pre-recorded message (or commercial or music track) into one or more selected rooms/zones (only in combination with ControlSpace<sup>®</sup> AMS-8 Message Storage Card).



0	Press this button to t
	Settings button (Pin-
Cone 3	Zone button: Press to Press and hold until t
Select message	Message select: Push
((+))	Push to talk: Press th (a chime signal will be
((1)) ((1)) ((1))	Push to talk: Up to 3 e at different paging lev
Select all zones	Press this button to s
Deselect all zones	Press this button to c
Paging status: No info eventable	Paging/Message Stat system, also if a page paging panel or via th

English

		Í		Ĩ		Ĭ	? – X
17	Zone 17	33	Zone 33	49	Zone 49	65	Zone 65
18	Zone 18	34	Zone 34	50	Zone 50	66	Zone 66
19	Zone 19	35	Zone 35	51	Zone 51	67	Zone 67
20	Zone 20	36	Zone 36	52	Zone 52	68	Zone 68
21	Zone 21	37	Zone 37	53	Zone 53	69	Zone 69
22	Zone 22	38	Zone 38	54	Zone 54	70	Zone 70
23	Zone 23	39	Zone 39	55	Zone 55	71	Zone 71
24	Zone 24	40	Zone 40	56	Zone 56	72	Zone 72
25	Zone 25	41	Zone 41	57	Zone 57	73	Zone 73
26	Zone 26	42	Zone 42	58	Zone 58	74	Zone 74
27	Zone 27	43	Zone 43	59	Zone 59	75	Zone 75
28	Zone 28	44	Zone 44	60	Zone 60	76	Zone 76
29	Zone 29	45	Zone 45	61	Zone 61	77	Zone 77
30	Zone 30	46	Zone 46	62	Zone 62	78	Zone 78
31	Zone 31	47	Zone 47	63	Zone 63	79	Zone 79
32	Zone 32	48	Zone 48	64	Zone 64	80	Zone 80

turn a room on/off

-code protected)

o select a room/zone (button turns into green). the button changes to red, to block a room/zone for paging/ messaging

h this button to select a message listed in the Status Display

his button to make a page into the selected room(s)/ zone(s) e played before the microphone will be released for paging)

extra 'push to talk' buttons can be assigned to allow paging evels.

select all zones at once

deselect all zones at once

tus display: Shows the status of paging and messaging of the whole e or message is activated from another user interface, e.g. a hardware he ControlSpace<sup>\*</sup> AMS-8 Event Scheduler.

# **Room Combining**

English

This module can be used to activate up to 40 Room Combining presets. All programmed presets will be listed in the status display (the lowest display in the picture below). To activate: Click on one of the listed presets. A <u>highlighted</u> preset indicates that these are active at the moment. When a red indicator is shown in front of a preset, one can not (de-)activate this preset (<u>User disabled</u> or <u>blocked</u> due to room overlap). One is able to configure 10 of the 40 Room Combining presets and the user ability to control these on the AMS-8 system rack. All other Room Combining presets can only be configured by your system installer.





Settings button (Pin-code protected)

Button to open all modules (Paging panel & Presets/Events, only available in Multi User Mode)



Preset select: Press this button (at the left) to (de-)activate another preset

# **Event Scheduler**

This module can be used to activate up to 40 events from the Event Scheduler. All programmed events will be listed in the status display (the lowest display in the picture below). To activate: Click on one of the listed events. A <u>highlighted</u> event indicates that these are active at the moment. When a red indicator is shown in front of an event, one can not (de-)activate this event (<u>User disabled</u> or <u>blocked</u> due to room overlap). The user is able to configure 10 of the 40 events and the user ability to control these on the AMS-8 system rack. All other events can only be configured by your system installer.

	AMS-8 Preset & Event Panel				
	Presets Events				
0	Event 1 - Standby Event				
	AOSE				



Settings button (Pin-code protected)

Button to open all modules (Paging panel & Presets/Events, only available in Multi User Mode)

Preset select: Press this button (at the left) to (de-)activate another preset

English

# How to reach the sales offices in Europe

#### Austria

Professional Systems Division, Austria Bose Ges.m.b.H., Business Park Vienna Wienerbergstrasse 7, 10 O.G. 1100 Wien, Österreich Telephone: 01-60404340 Fax: 01-604043423

#### Belgium

Professional Systems Division, Belgium Bose N.V., Limesweg 2 3700 Tongeren, België Telephone: 012-390800 Fax: 012-390840

#### Denmark

Professional Systems Division, Denmark Bose Danmark A/S, Industrivej 7 PO Box 14, 2605 Brøndby, Danmark Telephone: 43437777 Fax: 43437818

#### France

Professional Systems Division, France Bose S.A., 12 rue de Témara 78100 Saint Germain en Laye Telephone: 01-30616363 Fax: 01-30616388

#### Germany

Professional Systems Division, Germany Bose GmbH, Max-Planck-Straße 36, 61381 Friedrichsdorf, Deutschland Telephone: 06172-7104-0 Fax: 06172-7104-19

#### Ireland

Professional Systems Division, Ireland Bose GP, Castleblayney Road Carrickmacross, County Monaghan Republic Of Ireland Telephone: 042-9661988, Fax: 042-9661998

### Italy

Divisione Professionale, Italia Bose S.p.A., Via Giovanni Spadolini 5/A 20141 Milano, Telefono: 02 36 704 500 Numero verde: 800 832277, Fax: 02 36n 704 600 E-mail: Bose\_italy@bose.com Sito Web: http://pro.bose.it

#### The Netherlands

Professional Systems Division, The Netherlands Bose B.V., Nijverheidstraat 8 1135 GE Edam, Nederland Telephone: 0299-390139 Fax: 0299-390109

#### Norway

Professional Systems Division, Norway Bose Filial till Bose A/S Danmark, Lerkev 58 2209 Kongsvinger, Norge Telephone: 062-821560 Fax: 062-821569

## Poland

Bose sp. z o.o., ul. Wołoska 12, 02-675 Warszawa Tel.: (48) 22-852-2928 Faks: (48) 22-852-2927

### Switzerland

Professional Systems Division, Switzerland Bose AG, Hauptstrasse 134 4450 Sissach, Sweiz Telephone: 061-9757733 Fax: 061-9757744

### Spain

Gaplasa S.A. Avda. Ingeniero Conde de Torroja 25 28022 Madrid, España Telephone: 91 748 29 60 Fax: 91 329 16 75

### Sweden

Professional Systems Division, Sweden Bose, filial till Bose A/S Danmark Johannefredsgatan 4, 43153 Mölndal, Sverige Telephone: 031-878850 Fax: 031-274891

### United Kingdom

Professional Systems Division, United Kingdom Bose Ltd., 1 Ambley Green Gillingham Business Park Gillingham, Kent ME8 ONJ, England Telephone: 0870-741-4500 Fax 0870-741-4545