



RSM4 RS232 Control Document

Protocol

Baud 9600
Parity None
Data Bits 8
Stop Bits 1
Flow control None

Note the baud rate will actually be whatever the incoming port is programmed to; commands will be received on all ports.

Control Commands

Table 1 provides a list of all of the available control codes for the product in both hexadecimal and ASCII formats. In the ASCII column [CR] is used to denote the carriage return character.

Function	Command (Hex)	Command (ASCII)
Preset	23 50 52 45 53 45 54 x 0D Where x is the preset number in ASCII notation, i.e. a value of 6 is 36 and a value of 10 is 31 30.	#PRESETx[CR] Where x is the preset number from 1 to 10

Table 1, Control codes