



Star Force

ORDERCODE 43089



Highlite International B.V.
Vestastraat 2
6468 EX Kerkrade
The Netherlands
Phone: +31 45-5667700

SHOWELECTRONICS FOR PROFESSIONALS

Congratulations!

You have bought a great, innovative product from Showtec.

The Showtec Star Force brings excitement to any venue. Whether you want simple plug-&-play action or a sophisticated DMX show, this product provides the effect you need.

You can rely on Showtec, for more excellent lighting products.

We design and manufacture professional light equipment for the entertainment industry.

New products are being launched regularly. We work hard to keep you, our customer, satisfied.

For more information: iwant@showtec.info

You can get some of the best quality, best priced products on the market from Showtec.

So next time, turn to Showtec for more great lighting equipment.

Always get the best -- with Showtec !

Thank you!



Warning	2
Safety Instructions	2
Operating Determinations	4
Rigging	4
Return Procedure	5
Claims.....	5
Description of the device	6
Overview	6
Set Up and Operation	7
Control Modes.....	7
One Star Force (Auto Run Programs)	7
One Star Force (Sound-control)	7
Multiple Star Forces (Master/Slave control)	7
Multiple Star Forces (DMX Control)	8
Fixture Linking.....	9
Data Cabling.....	9
Control Panel.....	10
DMX Control Mode.....	10
DMX Addressing	10
Menu Overview.....	11
Main Menu Options	11
1. Auto Run Programs	12
2. DMX Mode	12
3. Slave Mode	12
4. Sound control Mode.....	12
5. LED Display Mode	12
6. Display Reverse.....	12
7. Version Number	12
DMX Channels	13
4 Channels.....	13
Maintenance	14
Replacing a Fuse	14
Troubleshooting	14
No Light	14
No Response to DMX.....	14
Product Specification	16

Warning

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOUR INITIAL START-UP!**

Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Your shipment includes:

- Showtec Star Force including hanging bracket
- IEC powercable 1,5m
- User manual



LED Expected Lifespan

LEDs gradually decline in brightness over time. HEAT is the dominant factor that leads to the acceleration of this decline. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal or singular optimum conditions. For this reason when all color LEDs are used at their fullest intensity, life of the LEDs is significantly reduced. It is estimated that a viable lifespan of 40,000 to 50,000 hours will be achieved under normal operational conditions. If improving on this lifespan expectancy is of a higher priority, place care in providing for lower operational temperatures. This may include climatic-environmental and the reduction of overall projection intensity.



CAUTION!

**Keep this device away from rain and moisture!
Unplug mains lead before opening the housing!**



Safety Instructions

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



**CAUTION! Be careful with your operations.
With a dangerous voltage you can suffer
a dangerous electric shock when touching the wires!**



Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Do not open the device and do not modify the device.
- Never use anything to cover the ground contact.
- Never leave the device run without a lamp!
- Never look directly into the light source.
- Never leave any cables lying around.
- Do not insert objects into air vents.
- Do not connect this device to a dimmerpack.
- Do not switch the device on and off in short intervals, as this would reduce the device's life.
- Do not shake the device. Avoid brute force when installing or operating the device. The Star Force reacts very sensitive to movement.
- Never use the device during thunderstorms, unplug the device immediately.
- Only use device indoor, avoid contact with water or other liquids.
- Do not touch the device's housing bare-handed during its operation (housing becomes hot).
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Only install the device with the hanging-bracket.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power-cord is never crimped or damaged. Check the device and the power-cord from time to time.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- If the lens or glass is obviously damaged, it has to be replaced. So that its functions are not impaired, due to cracks or deep scratches.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. Lighteffect must be installed out of the reach of children. Never leave the unit running unattended.
- For replacement use fuses of same type and rating only.
- Allow time to cool down, before replacing lamp.
- The user is responsible for correct positioning and operating of the Star Force. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.



CAUTION ! EYEDAMAGES !
Avoid looking directly into the light source.
(meant especially for epileptics) !



Operating Determinations

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light-output and the illuminated surface must be more than 0.5 meter.
- The maximum ambient temperature $t_a = 45^\circ\text{C}$ must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 45°C .
- If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash etc.

You endanger your own safety and the safety of others!

Rigging

Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

Do not attempt the installation yourself !

Always let the installation be carried out by an authorized dealer !

Procedure:


- If the Star Force is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the Star Force, with the mounting-bracket, to the trussing system.
- The Star Force must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the device, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

Improper installation can cause serious damage to people and property !

Connection with the mains

Connect the device to the mains with the power-plug.

Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	FASE
N	BLUE	BLACK	SILVER	NUL
	YELLOW/GREEN	GREEN	GREEN	EARTH

Make sure that the device is always connected properly to the earth!



Return Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail aftersales@highlite.nl and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) A brief description of the symptoms

Claims

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.

Description of the device

Features

The Showtec Star Force is a light effect with high output and great effects.

- New generation moonflower with a high power LED light source.
- Intelligent Music Control (IMC), that reacts to your music like a real light-jockey.
- If you are playing easy-listening music different nice slow programs will be selected.
- If you are playing party music, IMC will select uplifting programs and different strobe patterns
- Power Supply: 100-230V 50/60 Hz
- Light Source: 1 x 10W 4-in1 RGBW Chip
- Peak Power 118 Watt; Continuous Power 42 Watt
- Beam angle:28° degree
- Lasersharp beams
- Sound-active program selectable by DMX
- Control: Auto, Sound, Master/Slave, DMX
- Music-controlled via built-in microphone
- DMX Channels: 4
- Control Display: 4 Digits LED, which can be inverted and shut down after you adjust your settings
- Power Connector: IEC In/Out
- Data Connector: In/Out (XLR 3 Pin)
- Digital Addressing
- Strobe: 0-20Hz
- Plug & Play
- Stand-alone
- Fuse 1A / 250V
- Dimensions: 195 x 207 x 168 mm LxWxH (excl. bracket)
- Weight: 2,48 kg
- Optional Accessories: IEC cables, 90465, 90446, 90466, 43098



Overview



- | | |
|---|--|
| <ul style="list-style-type: none"> 1) Adjustment screw 2) Lens 3) Jack for Preset Controller (43098) 4) IEC Power OUT 5) IEC Power IN + Fuse 1A 250V 6) Built-in Microphone 3-pin DMX In | <ul style="list-style-type: none"> 7) LCD Display with menu buttons 8) 3-pin DMX In 9) 3-pin DMX Out 10) Audio Sensitivity 11) Safety eye |
|---|--|

Fig. 1

Set Up and Operation

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa. Remove all packing materials from the Star Force. Check that all foam and plastic padding is removed. **Always disconnect from electric mains power supply before cleaning or servicing.** Damages caused by non-observance are not subject to warranty.

Control Modes

There are 4 modes:

- Auto Run Programs
- Sound-controlled
- Master/Slave
- DMX512

One Star Force (Auto Run Programs)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Plug the end of the electric mains power cord into a proper electric power supply socket.
3. When the Star Force is not connected by a DMX-cable, it functions as a stand-alone device. Please see page 12 for more information about the Auto Run Programs.

One Star Force (Sound-control)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Plug the end of the electric mains power cord into a proper electric power supply socket.
3. Turn on the music. If device is set to **500n** (Audio) and you have pressed enter, then the fixture will react to the beat of the music. Please see page 12 for more information about the sound-control options.

Multiple Star Forces (Master/Slave control)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Plug the end of the electric mains power cord into a proper electric power supply socket.
3. Use a 3-p XLR cable to connect the Star Force.

The pins:



1. Earth
2. Signal -
3. Signal +

4. Link the units as shown in (Fig. 2), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units. You can use the same functions on the master device as described on page 12 (Auto Run or Music control). This means on the master device you can set your desired operation Mode and all slave devices will react the same as the master device.

Multiple Star Forces (Master/Slave control)

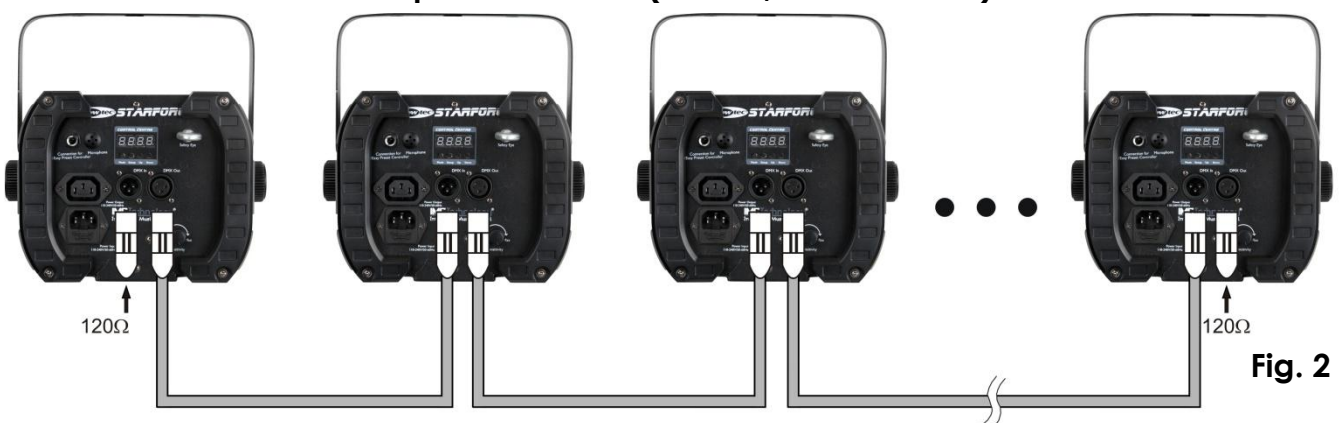


Fig. 2

Multiple Star Forces (DMX Control)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Always use a safety cable (ordercode 70140 / 70141).
3. Use a 3-p XLR cable to connect the Star Force and other devices.


Occupation of the XLR-connection:

DMX-OUTPUT XLR mounting-socket:




- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

DMX-input XLR mounting-plug:

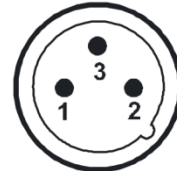

- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

The transformation of the controller line of 3 pins and 5 pins (plug and socket)

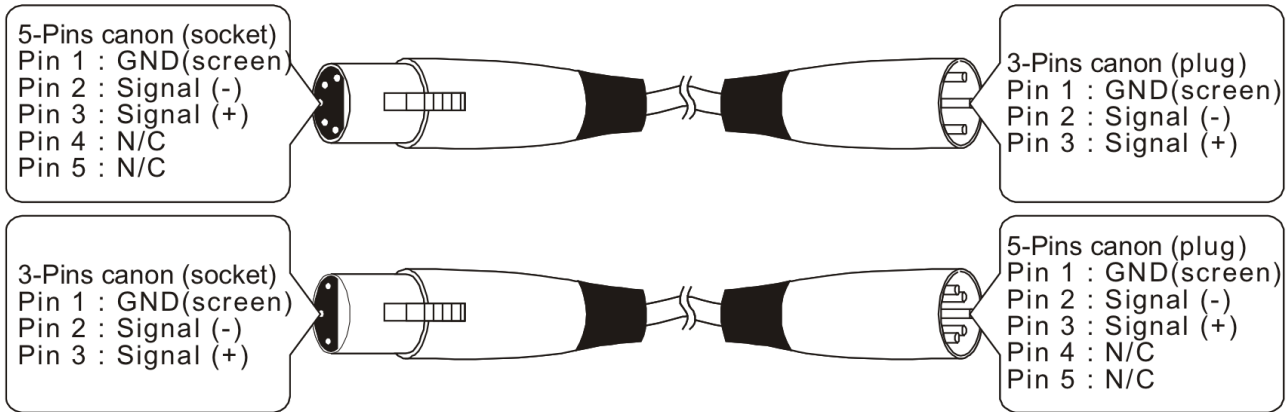

4. Link the units as shown in (figure 3), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.
5. Supply electric power: Plug electric mains power cords into each unit's IEC socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

Multiple Star Forces DMX Set Up



Fig. 3

Note : Link all cables before connecting electric power

Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Important: Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.



Maximum recommended DMX data link distance: 100 meters
Maximum recommended number of Star Forces on a DMX data link: 30 fixtures

Data Cabling

To link fixtures together you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

DAP Audio Certified DMX Data Cables

- DAP Audio cable for allround use. bal. XLR/M 3 p. > XLR/F 3 p.
Ordercode FL01150 (1,5m.), FL013 (3m.), FL016 (6m.), FL0110 (10m.), FL0115 (15m.), FL0120 (20m.).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL71150 (1,5m.), FL713 (3m.), FL716 (6m.), FL7110 (10m.).

Control Panel



Fig. 4

A. LCD Display
B. MODE button
C. SETUP Button

D. Up Button
E. Down Button

DMX Control Mode

The fixtures are individually addressed    on a data-link and connected to the controller. When a DMX signal is present, the **d** will blink.

The fixtures respond to the DMX signal from the controller. (When you select the DMX address and save it, the controller will display the saved DMX address the next time.)

DMX Addressing

The control panel on the front side of the Star Force allows you to assign the DMX fixture address, which is the first channel from which the Star Force will respond to the controller.

Please note when you use the controller, the unit has **4** channels.

When using multiple Star Force, make sure you set the DMX addresses right.

Therefore, the DMX address of the first Star Force should be **1(A001)**; the DMX address of the second Star Force should be **1+4=5 (d005)**; the DMX address of the third Star Force should be **5+4=9 (d009)**, etc.

Please, be sure that you don't have any overlapping channels in order to control each Star Force correctly.

If two or more Star Force are addressed similarly, they will work similarly.

For address settings, please refer to the instructions under "Addressing"

Controlling:

After having addressed all Star Force fixtures, you may now start operating these via your lighting controller.


Note: After switching on, the Star Force will automatically detect whether DMX 512 data is received or not. If there is no data received at the DMX-input, the "LED" on the control panel will not flash.

The problem may be:


- The XLR cable from the controller is not connected with the input of the Star Force.
- The controller is switched off or defective, the cable or connector is defective, or the signal wires are swapped in the input connector.

Note: It's necessary to insert a XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.


Menu Overview

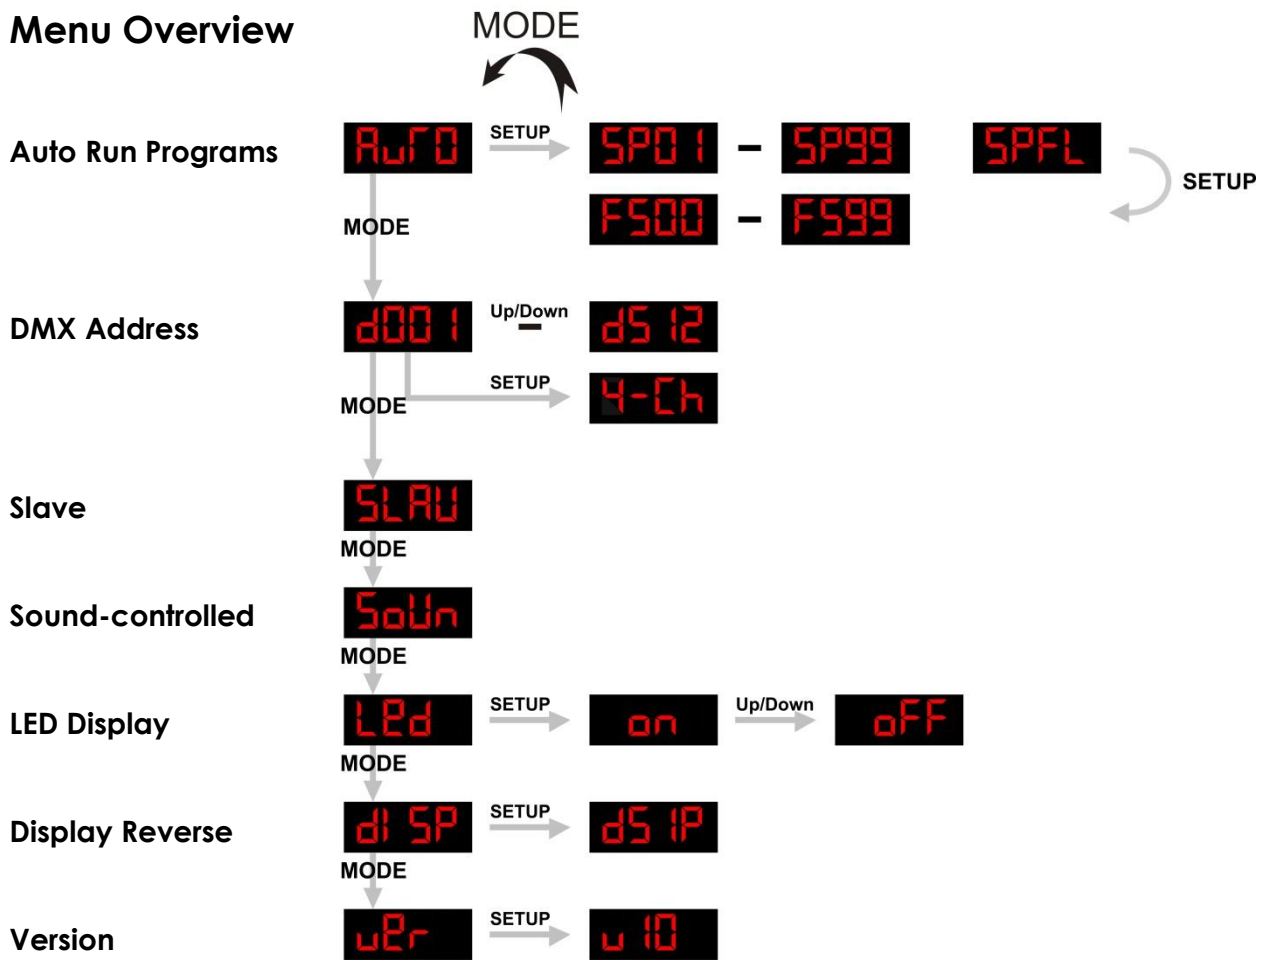

Main Menu Options

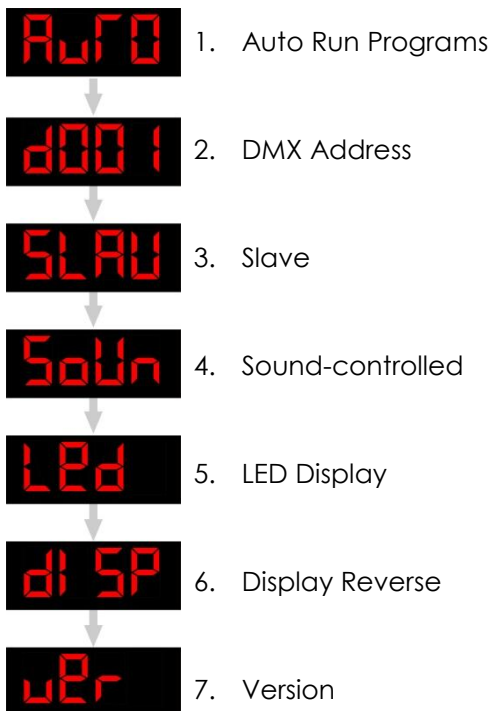

1. Auto Run Programs

- 1) Press the **MODE** button on the device, until the display shows  .
- 2) With this menu you can set the Auto Mode of the Star Force.
- 3) Press **Setup** to enter the AUTO Menu. You can choose 2 different sub menus.

 -   Speed from 01-99 and FL

 -  Flash Frequency from 00-99

- 4) Use the **SETUP** button to scroll through the menu.

2. DMX Mode

When a DMX signal is present, the **d** will blink.

With this menu you can set the DMX address.

- 1) Press the **MODE** button on the device, until the display shows  .

- 2) You can choose 512 different DMX addresses.

Use the **Up / Down** buttons to select the required address from    .


- 3) You can also press the **SETUP** button to set the DMX Mode.

 4 Channels

3. Slave Mode


When the display shows:  , the device is a slave device. It will now react the same as its master.

4. Sound control Mode

- 1) Press the **MODE** button on the device, until the display shows  . Turn on the music and the Star Force will react to the beat of the music.
You cannot adjust the sensitivity.

5. LED Display Mode

With this menu you can set the LED Display On or Off.


- 1) Press the **MODE** button on the device, until the display shows  .
- 2) Press **Setup** to enter the LED Display Menu. You can choose 2 different settings.
- 3) Use the **Up / Down** buttons to select:

 ON: The LED display will light all the time.

 OFF: The LED display will turn off after 30 seconds.

6. Display Reverse

With this menu you can reverse the LED Display.


- 1) Press the **MODE** button on the device, until the display shows  .
- 2) Press **Setup** to enter the Display Reverse Menu and change the display to upside-down.

 LED display regular.

 LED display upside-down.

7. Version Number

With this menu you can view the version number of your Star Force.

- 1) Press the **MODE** button on the device, until the display shows  .
- 2) Press **Setup** to show the version number.

 Version V1.0

DMX Channels

4 Channels

Channel 1 - Programs

0-9	Blackout
10-19	Red
20-29	Green
30-39	Blue
40-49	White
50-59	Red + Green
60-69	Red + Blue
70-79	Red + White
80-89	Green + Blue
90-99	Green + White
100-109	Blue + White
110-119	Red + Green + Blue
120-129	Red + Green + White
130-139	Red + Blue + White
140-149	Green + Blue + White
150-159	Red + Green + Blue + White
160-229	Automatic
230-255	Sound-controlled

Channel 2 – Strobe Speed (when CH1 is set between 10-229)

0-9	No Function
10-255	Strobe from slow to fast

Channel 3 –Speed (when CH1 is set between 160-229)

0-9	No Function
10-255	Speed from slow to fast

Channel 4 – Motor Rotation (when CH1 is set between 10-159)

0-9	No Rotation
10-119	Counterclockwise (CCW) rotation from fast to slow
120-145	Stop
146-255	Clockwise (CW) rotation from slow to fast

Maintenance

The Showtec Star Force requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe lens clean with glass cleaner and a soft cloth. Do not use alcohol or solvents. Keep connections clean. Disconnect electric power, and then wipe the connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

1. All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
2. There may not be any deformations on housings, fixations and installation spots.
3. Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
4. The electric power supply cables must not show any damages or material fatigue.

Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below to do so.

1. Unplug the unit from electric power source.
2. Insert a screwdriver into the slot in the fuse cover. Gently pry up the fuse cover. The fuse will come out.
3. Remove the used fuse. If brown or unclear, it is burned out.
4. Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Troubleshooting

No Light

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

If the light effect does not operate properly, refer servicing to a technician.

Response: Suspect three potential problem areas: the power supply, the LEDs, the fuse.

1. Power supply. Check that the unit is plugged into an appropriate power supply.
2. The LEDs. Return the Star Force to your Showtec dealer.
3. The fuse. Replace the fuse. See page 15 for replacing the fuse.
4. If all of the above appears to be O.K., plug the unit in again.
5. If you are unable to determine the cause of the problem, do not open the Star Force, as this may damage the unit and the warranty will become void.
6. Return the device to your Showtec dealer.

No Response to DMX

Response: Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

1. Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
2. Determine whether the controller or light effect is at fault. Does the controller operate properly with other DMX products? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

Problem	Probable cause(s)	Remedy
One or more fixtures are completely dead.	No power to the fixture	<ul style="list-style-type: none"> • Check that power is switched on and cables are plugged in.
	Primary fuse blown.	<ul style="list-style-type: none"> • Replace fuse.
Fixtures reset correctly, but all respond erratically or not at all to the controller.	The controller is not connected.	<ul style="list-style-type: none"> • Connect controller.
	3-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed).	<ul style="list-style-type: none"> • Install a phase reversing cable between the controller and the first fixture on the link.
Fixtures reset correctly, but some respond erratically or not at all to the controller.	Poor data quality	<ul style="list-style-type: none"> • Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link.
	Bad data link connection	<ul style="list-style-type: none"> • Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.
	Data link not terminated with 120 Ohm termination plug.	<ul style="list-style-type: none"> • Insert termination plug in output jack of the last fixture on the link.
	Incorrect addressing of the fixtures.	<ul style="list-style-type: none"> • Check address setting.
	One of the fixtures is defective and disturbs data transmission on the link.	<ul style="list-style-type: none"> • Bypass one fixture at a time until normal operation is regained: unplug both connectors and connect them directly together. • Have the defective fixture serviced by a qualified technician.
	3-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed).	<ul style="list-style-type: none"> • Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture, that behaves erratically.
Shutter closes suddenly	The color wheel, gobo wheel, or a gobo has lost its index position and the fixture is resetting the effect.	<ul style="list-style-type: none"> • Contact a technician for servicing the problem persists.
No light	Fixture is too hot.	<ul style="list-style-type: none"> • Allow fixture to cool. • Clean fan. • Make sure air vents at control panel and front lens are not blocked. • Turn up the air conditioning .
	LEDs damaged	<ul style="list-style-type: none"> • Disconnect fixture and return to your dealer.
	The power supply settings do not match local AC voltage and frequency.	<ul style="list-style-type: none"> • Disconnect fixture. Check settings and correct if necessary.

Product Specification

Model: Showtec Star Force

New generation moonflower with a high power LED light source.

Intelligent Music Control (IMC), that reacts to your music like a real light-jockey.

If you are playing easy-listening music different nice slow programs will be selected.

If you are playing party music, IMC will select uplifting programs and different strobe patterns

Control Display: 4 Digits LED, which can be inverted and shut down after you adjust your settings

Power Supply: 100-230V 50/60 Hz

Light Source: 1 x 10W 4-in-1 RGBW Chip

Peak Power 118 Watt; Continuous Power 42 Watt

Beam angle: 28° degree

Lasersharp beams

Sound-active program selectable by DMX

Control: Auto, Sound, Master/Slave, DMX

Music-controlled via built-in microphone

DMX Channels: 4

Power Connector: IEC In/Out

Data Connector: In/Out (XLR 3 Pin)

Digital Addressing

Strobe: 0-20Hz

Plug & Play

Stand-alone

Fuse 1A / 250V

Dimensions: 195 x 207 x 168 mm LxWxH (excl. bracket)

Weight: 2,48 kg

Optional Accessories: IEC cables, 90465, 90466, 90446, 43098

Minimum distance:

Minimum distance from flammable surfaces: 0.5m

Minimum distance to lighted object: 0.8m



Design and product specifications are subject to change without prior notice.



Website: www.Showtec.info

Email: service@highlite.nl



© 2012 Showtec.