SY

User Manual

SY-AD-18G

18G HDMI 2.0 Audio De-Embedder

Balanced, Un-balanced Analogue and Digital Coax S/PDIF

This HDMI 2.0 audio de-embedder supports all HDMI signals up to 18Gbps (4K60 4:4:4) with HDR, EDID and CEC pass-through. It de-embeds the HDMI input audio to analogue balanced, unbalanced and coax S/PDIF simultaneously for the Pass-through and 2Ch modes, or to digital coax audio only when set to the Bitstream mode.

This de-embedder will be useful for any situation where the audio needs to be processed separately from the HDMI signal, such as Video processors or projectors. It is capable of handling all HDMI resolutions, including the growing 18G sector.

Features

- Balanced and Unbalanced audio outputs for L+R and Coax S/PDIF
- Supports three audio input modes: Pass-Through, Bitstream and PCM
- LPCM 2ch, Dolby 2 / 5.1 Ch and DTS 2 / 5.1 Ch
- HDMI HBR (High Bit Rate) supported in PASS mode only
- Resolutions up to HDMI 2.0 4K60 4:4:4 (18Gbps), HDR
- HDCP 1.4/2.2 supported on HDMI IN EDID and CEC pass-through
- HDCP 1.4 only on HDMI OUT
- Audio de-embed even when no display connected

Panel Descriptions





Figure 1 - Front

Figure 2 - Rear

Front

Name	Description
Power LED	RED – Powered with no HDMI input GREEN when an HDMI input signal is detected
Switch	Set Audio mode to EDID Pass-through, Bitsteam or 2ch Only
HDMI IN	HDMI Input connector from HDMI source
Service	Only for service
PSU	12V DC PSU input

Rear

Name	Description
HDMI Out	HDMI Output connector to HDMI sink
5 way block	Pluggable screw terminal for balanced L/R analogue audio
L Phono & R Phono	Phono connectors for unblanced L/R analogue audio
COAX Phono	Digital audio output

System Connection

The AD-18G can be located anywhere in the HDMI cabling, the following diagram is only an installation example.

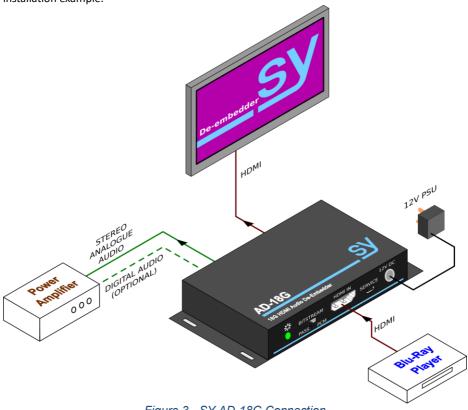


Figure 3 - SY-AD-18G Connection

Power LED

The front panel power LED will be either red or green when the de-embedder is powered:

- Red indicates that the AD-18G is powered but there is no HDMI input signal present.
- Green indicates that the AD-18G is powered and the HDMI input signal is present.

Switch Settings

The AD-18G can operate in one of three modes that sets the HDMI IN EDID:

- Pass Use the audio settings given in the display EDID
- 2. Bitstream Only provide S/PDIF digital audio output
- 2CH Force 2 channel LPCM mode only

The following table summarises the audio outputs that are active for each setting:

Mode	Analogue Audio	Digital Audio
Pass	Yes	Yes
Bitstream	No	Yes
PCM	Yes	Yes

Output Connectors

The AD-18G provides up to four connection modes:

- 1. Balanced stereo analogue audio on the 5-way pluggable connector
- 2. Unbalanced stereo analogue audio on the 5-way pluggable connector
- 3. Unbalanced stereo analogue audio from the L & R phono connectors
- 4. Digital S/PDIF audio from the COAX phono connector

Balanced Audio Output Wiring

All five connections are required when using balanced audio, be sure to note the polarity of the output signals and ensure that they are wired correctly to the amplifying equipment.

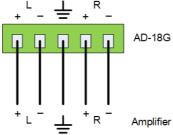


Figure 4 - Balance Audio Wiring

Unbalanced Audio Output Wiring

Only three connections are required when using unbalanced audio from the 5-way pluggable block. Only use left and right signals that have the same polarity symbol when using this configuration.

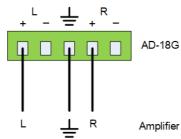


Figure 5 - Unbalanced Audio Wiring

Troubleshooting

The following table lists some of the basic checks that should be performed before determining that the product may be faulty:

Problem	Possible cause	Solutions to try first
Power LED off	PSU problem	 Check that PSU output voltage is correct and the current rating is sufficient to power the product. Check that connection polarity is correct – This product uses centre positive connection.
Power LED red	No HDMI Input	Check that the HDMI source is outputting an image. Check that the HDMI cables are good and properly connected.
Power LED green, but no image	HDMI output	 Check that the HDMI sink is on. Check that correct input is selected on the HDMI sink device. Check that the HDMI cables are properly connected.
No analogue audio	Switch setting	 Analogue audio is only available when the switch is in either the PASS or the 2CH position. Check the wiring of the audio connections.
Lack of centre in stereo image	Phasing error	Check the wiring of the analogue audio connections is correct at the 5-way pluggable block and the amplifier input. The polarities used for both the left and right channels must be identical for both the SY-AD-18G and the amplifier input.
No digital audio	S/PDIF	 Check that the wiring to the COAX output is correct. Check that the equipment receiving the digital audio is able to do so. Ensure that the receiving equipment has its digital audio input enabled and/or selected.

Specifications

General

HDMI Video Resolution	VESA and SMPTE 480p to 2160p with 3D. All HDMI resolutions to 3840x2160p @60Hz 4:4:4 (18 Gbit/s) 480p@60Hz 576p@50Hz 720p@60Hz 1080p@24Hz 1080p@50Hz 1080p@60Hz 4K@24Hz 4K@30Hz 4K@60Hz 4:4:4 All PC resolutions to 1920x1200@60Hz	
HDMI Version	2.0 – All HDMI versions to 2.0v	
HDCP Version (Input)	1.4 and 2.2	
HDCP Version (Output)	1.4 Only	
Coax digital audio format	LPCM 2ch, Dolby Digital 2 or 5.1ch, DTS 2 or 5.1ch	
Input Connectors	1x HDMI 1x 2.1mm DC connector	
Output Connectors	1x HDMI 1x 5 way pluggable screw terminal for L+R balanced 2x Phono for L+R unbalanced 1x Phono for Coax S/PDIF	
Power Supply	12V DC @ 1A max.	
Power Consumption	3W max.	

Environmental

Operating Temperature	-10 to +55°C (+14 to +131°F)
Operating Humidity	10 to 90 % RH (non-condensing)
Weight	245g

Physical

Dimensions (WxHxD)	129 x 21.5 x 77mm
Case Material	Steel chassis

Part Number

SY-AD-18G	18G Audio De-Embedder
31 AD 100	100 Addio De Embeddei

Safety Instructions

To ensure reliable operation of this product as well as protecting the safety of any person using or handling these devices while powered, please observe the following instructions.

- Use the power supply provided. If an alternate supply is required, check the voltage, polarity and that it has sufficient power to supply the device it is connected to.
- 2. Do not operate this product outside the specified temperature and humidity range given in the above specifications.
- 3. Ensure there is adequate ventilation to allow this product to operate efficiently.
- 4. Repair of this equipment should only be carried out by qualified professionals as this product contains sensitive devices that may be damaged by any mistreatment.
- 5. Only use this product in a dry environment. Do not allow any liquids or harmful chemicals to come into contact with this product.

After Sales Service

- Should you experience any problems while using this product, firstly refer to the Troubleshooting section in this manual before contacting SY Technical Support.
- 2. When calling SY Technical Support, the following information should be provided:
 - Product name and model number
 - Product serial number
 - Details of the fault and any conditions under which the fault occurs.
- This product has a two year standard warranty, beginning from the date of purchase as stated on the sales invoice. For full details please refer to our Terms and Conditions.
- 4. SY Product warranty is automatically void under any of the following conditions:
 - The product is already outside of its warranty period
 - Damage to the product due to incorrect usage or storage
 - Damage caused by unauthorised repairs
 - Damage caused by mistreatment of the product
- 5. Please direct any questions or problems you may have to your local dealer before contacting SY Electronics.

NOTES: