




RF V6B Vertical Mounting Bracket

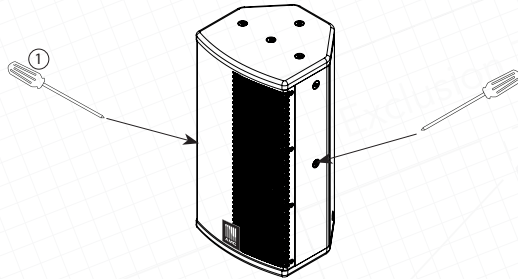


When mounting RF 6 vertically, unscrew sockets on the sides. Do not use these removed screws for mounting - proper size screws for attaching bracket are included with V6B.

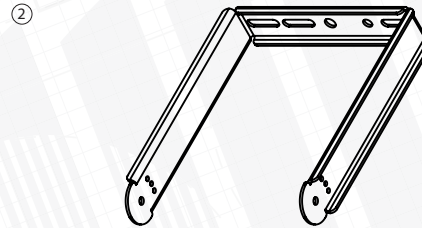

Attach mounting bracket to the surface. Please leave required space from all sides for cables and loudspeaker angle adjustment.

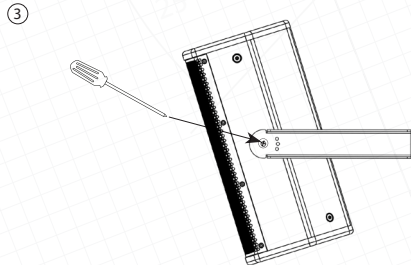

Place loudspeaker into the bracket and tighten the screws on both sides. Plug audio cables and make final angle loudspeaker adjustments.

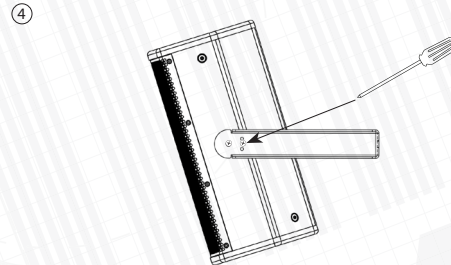

Fix loudspeaker angle with self-driving screws on both sides of the bracket. It is necessary to use these screws to keep loudspeaker from shifting angle due to weight and vibration.

Please pay attention: Mount loudspeaker on the reliable base only.