




RF UB Vertical Mounting Bracket

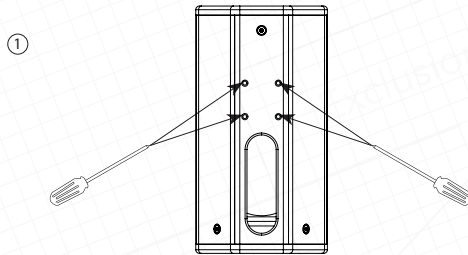


① Unscrew four sockets on the back of loudspeaker. Do not use these removed screws for mounting - proper size screws for attaching bracket are included with RF UB.

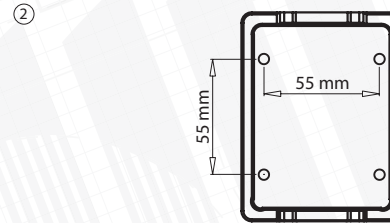

② Attach mounting plate to the surface. Please leave required space from all sides for cables and loudspeaker angle adjustment.

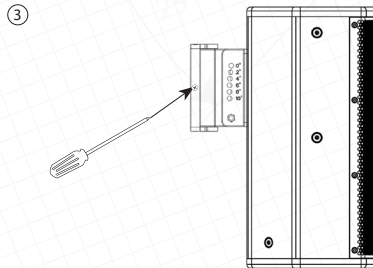

③ Place loudspeaker with attached bracket onto mounting plate. Fix the two security screws on both sides of the bracket to prevent loudspeaker removal from the plate.

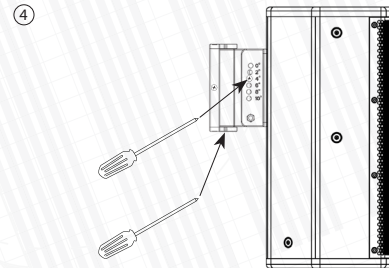

④ Plug audio cables and make final loudspeaker angle adjustments. Place the screws for fixing vertical and horizontal angles and tighten.

Please pay attention: Mount loudspeaker on the reliable base only.