# USER MANUAL



AV-MT300



### DISCLAIMER, CONTACT AND CE MARKING

#### Disclaimer

All text, graphics, photographs, trademarks, logos, artwork and computer code (collectively, "Content"), including but not limited to the design, structure, selection, coordination, expression, "look and feel" and arrangement of such Content, contained in this Manual is owned, controlled or licensed by or to Avonic, and is protected by trade dress, copyright, patent and trademark laws, and various other intellectual property rights and unfair competition laws.

Except as expressly provided in these Terms of Use, no Content of this Manual may be copied, reproduced, republished, uploaded, posted, publicly displayed, encoded, translated, transmitted or distributed in any way (including "mirroring") to any other computer, server, Website or other medium for publication or distribution or for any commercial enterprise, without the prior written consent of Avonic.

#### Copyright © 2023 AVONIC All Rights Reserved.

The information contained in this Manual is subject to change without notice.

#### **Contact Info**

For any questions or suggestions, contact your reseller or local distributor of Avonic.

Visit the Avonic website www.avonic.com to find your local Avonic distributor or to download the most recent version of the documentation.

#### Join Avonic on Social Media



www.Facebook.com/avonicPTZ



www.instagram.com/avonicPTZ



www.Linkedln.com/company/avonic



www.youtube.com/channels/avonic



www.twitter.com/avonic



### IMPORTANT INFORMATION

### Liability

Avonic will NOT be held responsible for any damage or injury caused by unqualified persons carrying out these tasks, or by not following the instructions in this Manual.

#### Intended Use and Non-Intended Use

#### Installation



The following applies to the **installation** of the mount and the camera:

- The installation activities described in this Manual should ONLY be executed by experienced technicians.
- The installation activities should NOT be executed by minors, mentally disabled persons or other persons not qualified to perform these tasks.

#### **Operation**



The following applies to the **operation** of the mount and the camera:

- The operational activities described in this Manual should ONLY be executed by people with enough technical knowledge to perform the activities in a safe manner.
- This Product is specifically developed for video conferencing / streaming via internet by companies, institutes and universities. It is NOT meant for private use in the residential area.
- This Product should ONLY be used indoors.
- This Product is NOT a medical device and should NOT be used as a substitute for professional medical judgment. It is NOT designed or intended for use in the diagnosis of disease or other conditions, or in the cure, mitigation, treatment, or prevention of any condition or disease. Please consult your healthcare provider prior to making any decisions related to your health.

#### **Important Precautions**



This Product is NOT intended for use where failure of the device could lead to death, personal injury, or severe environmental damage.



Be sure that you have COMPLETELY READ and UNDERSTOOD ALL information in this Manual before unpacking, installing and using this Product. Keep the Manual in a safe place for future reference or download it from www.avonic.com.



Failure to follow the SAFETY NOTES as described in this chapter could result in fire, electric shock, injury, or damage to this Product or other property.



Power this Product ONLY with the included cable and power adapter. Other adapters may not meet applicable safety standards, and could pose a risk of death or injury when connected.

### Symbols Used in This Manual

Symbol	Meaning	Description
$\triangle$	Danger	Not following the instructions associated with this symbol may lead to personal injury and / or serious damage to the Product.
4	Electrical Shock	Not following the instructions associated with this symbol may lead to life-threatening situations and / or serious damage to the Product.
$\triangle$	Important	The information associated with this symbol requires special attention.



Symbol	Meaning	Description
0	Information	The information associated with symbol refers to a general remark or a reference to other documentation.
<b>③</b>	Instruction	This symbol refers to one or more user instructions.
6	Recycling	Specific parts of the Product can be re-used.

### Acronyms

The following acronyms are used in this Manual:

PTZ Pan / Tilt / Zoom

**SKU** Stock Keeping Unit

**UNC** Unified National Coarse



# Contents

DISCLAIMER, CONTACT AND CE MARKING	i
IMPORTANT INFORMATION	ii
Liability	ii
Intended Use and Non-Intended Use	ii
Installation	ii
Operation	
Important Precautions	
Symbols Used in This Manual	
Acronyms	iv
INTRODUCTION	
Purpose of This Manual	6
Target Audience	6
Document Structure	6
SAFETY INSTRUCTIONS	7
Important Precautions	7
Intended Use	7
Handling	
Mounting	
Ventilation	
Repair	
PRODUCT OVERVIEW	9
Description	
Features	9
UNPACKING	.10
Package Contents	10
Unpacking the Mount	
Return Procedure	.11
MOUNTING AND INSTALLATION	. 12
Mounting on a Wall or mounting pole	.12
1. Baseplate	
2. Mounting the Camera	
3. Cable Cover	
Mounting on a Wall or mounting pole	
1. Baseplate	
2. Mounting the Camera	
3. Cable Cover	
4. Cover Cap	
Mounting Pole	
MEASUREMENTS AND SPECS	
General Specifications	
TRANSPORT AND STORAGE	. 19
DISPOSAL AND RECYCLING	20



# INTRODUCTION

### Purpose of This Manual

This Manual describes the safety precautions and the instructions for safe unpackaging, installation, operation, maintenance and disposal of the Avonic MT300 Mount.



In this Manual the Avonic MT300 Mount is referred to as the 'Product'.

### Target Audience

This Manual is developed for installation technicians who install the Product at client sites, and for IT professionals who are responsible for operating the Product.

#### **Document Structure**

The Manual is subdivided into the following **Chapters**:

- 1. Introduction
- 2. Safety
- 3. Product Overview
- 4. Unpacking
- 5. Mounting and Installation
- 6. Measurements and Specs
- 7. Transport and Storage
- 8. Disposal and Recycling



### SAFETY INSTRUCTIONS

This chapter contains important safety information regarding the unpacking, installation and use of the mount and the camera.

### Important Precautions



This Product is NOT intended for use where failure of the device could lead to death, personal injury, or severe environmental damage.



Be sure that you have COMPLETELY READ and UNDERSTOOD ALL information in this Manual before unpacking, installing and using this Product. Keep the Manual in a safe place for future reference or download it from www.avonic.com.



Failure to follow the SAFETY NOTES as described in this chapter could result in fire, electric shock, injury, or damage to this Product or other property.



Power this Product ONLY with the included cable and power adapter. Other adapters may not meet applicable safety standards, and could pose a risk of death or injury when connected.

#### Intended Use



See section Intended Use and Non-Intended Use on page iii for details.

#### Handling



To prevent the risk of injury, take the following precautions when handling this Product:

- Handle the Product with care. It is made of metal and plastic components.
- The Product can be damaged if dropped, burned, punctured or crushed, or if it comes into contact with liquid.
- Do not pick up and move the Product unit while a tripod is attached. The fitting may break under the weight of the tripod, which may result in injury.
- If you suspect any damage to the Product, discontinue its use, as it may cause injury.

#### **Mounting**



To prevent the Product from falling down which may cause injuries:

- Set up this Product on a hard, stable surface or mount it to a wall or ceiling.
- ONLY use an Avonic mount for mounting to a wall or ceiling.
- Ensure the mounting construction is capable of supporting four times the weight of the Product. (See 'General Specifications > Weight product' in the Product Datasheet for the exact weight.)
- Use a safety loop or drop protection that prevents the Product from falling if the mounting construction fails.
- During installation, NEVER install a Product above a person.
- Check the installation at least once a year. An improper mounting could cause the unit to fall off, resulting in personal injury.

#### Ventilation



To prevent the risk of life-threatening injury or damage to the Product or other property, caused by electric shock or fire hazard due to overheating of the camera mounted on the Product:

- Maintain adequate ventilation by NOT installing or placing the Product unit in a bookcase, built-in cabinet or any other confined space.
- Ensure that curtains or any other material does NOT obstruct the ventilation.



#### Repair



Take the following precautions if the Product should be repaired:

- Don't open this Product and don't attempt to repair it yourself. Disassembling the Product may damage it or may cause injury to you.
- If this Product is damaged, malfunctioning, or if it comes into contact with liquid, contact Avonic or an Avonic Authorized Service Provider.
- Repairs by service providers other than Avonic or an Avonic Authorized Service Provider may not involve the use of Avonic genuine parts and may affect the safety and functionality of the device. You can find more information about repairs and service at <a href="https://www.avonic.com">www.avonic.com</a>.



### PRODUCT OVERVIEW

### Description

The Avonic MT300 wall and ceiling mount is a solid wall and ceiling mount suitable for the support of the CM93 PTZ camera. Its discrete design matches the silent operation of Avonic PTZ cameras. The wall and ceiling mount is a beautiful extension that not only ensures great and safe support of the PTZ cameras but also allows for all the cables to be hidden inside the mount. For mobile applications the MT300 can be mounted on a tripod. Available in black and white to match our PTZ cameras.



### **Features**

The Avonic MT300 has the following features:

#### Separate base and plate

Separate base and camera plate for hassle free mounting and cable installation.

#### Hands free installation

Hands free installation of the camera, only one screw needed to secure it.

#### Integrated

Integrated cable cover.

#### Desian

Discrete and compact design.

#### Seamless integration

Seamless integration with the shape and color of Avonic PTZ cameras.



### UNPACKING

This describes the contents of a complete Product package, and instructions for safe unpacking and (if necessary) Product return.

It is subdivided into the following sections:

- 1. Package Contents
- 2. Unpacking the Camera
- 3. Return Procedure

### Package Contents

The following tables contains an overview of the package contents of the Product.

No.	Quantity	Description	Avonic SKU
1	1 pc	Ceiling mount AV-MT300-B/ -W	AV-MT300-B/ -W
2	1 pc	1/4"-20 UNC Central Camera Screw	-
3	5 pc	M3*6mm DIN9785 black screw	-
4	2 pc	Black Allen bolt (back cover)	-
5	1 pc	Black 30MM Cover Cap	-

Each item is visualized below and referenced by the associated number in the table above:



Figure 1: Package Contents



### Unpacking the Mount



Execute the following steps to unpack the mount and associated components:

- 1. Open the bag.
- 2. Verify that the contents of the bag exactly matches the items as described in Package Contents on page 10. If this is NOT the case, contact Avonic and stop here.

The mount should be in its protective foam as follows:



Figure 2: Mount in bag

- 3. Verify that the plastic mount bag is sealed. If this is NOT the case, contact Avonic and stop here.
- 4. Break the seal of the sealed mount bag.
- 5. Take the mount out of the bag.
- 6. Install the mount following the steps as described in the chapter MOUNTING AND INSTALLATION on page 12

#### Return Procedure



If, for any reason, you have to return the mount to Avonic, Execute the following steps:

- 1. Place the mount back in its protective bag and in horizontal position!
- 2. Place the mount with all of its components in the bag.
- 3. Verify that the contents of the bag exactly matches the items as described in Package Contents.
- 4. Contact Avonic for the Return Procedure.



### MOUNTING AND INSTALLATION

This chapter describes the steps you have to perform to mount and install the Product in a correct and safe manner.

These steps are subdivided into the following groups, each of which is described in a separate section:

- 1. Mounting on a ceiling
- 2. Mounting on a wall or mounting pole



Take the following precautions to prevent the Product and camera from falling down which may cause injuries:

- Set up this Product on a hard, stable surface, or mount it to a wall or (computer) screen.
- ONLY use an Avonic mount for mounting to a wall or ceiling.
- Ensure the mounting construction is capable of supporting four times the weight of the Product. (See 'General Specifications > Weight product' in the Product Datasheet for the exact weight.)
- Use a safety loop or drop protection that prevents the Product from falling if the mounting construction fails.
- During mounting and installation, NEVER install a Product above a person.
- Check the installation at least once a year. An improper mounting could cause the unit to fall off, resulting in personal injury.

### Mounting on a Wall or mounting pole

#### 1. Baseplate




To install the mount, follow these instructions:

Mount the MT300 baseplate (the bracket) to the wall (Figure 5). It is possible to connect the cables from behind the wall. See the drawings under "Measurements and Specs" and figure 6 below.



For safety reasons, follow exactly the warning under Mounting and Installation, and make sure that the mounting construction is capable of supporting **four times** the weight of the Product.

Figure 3: Baseplate

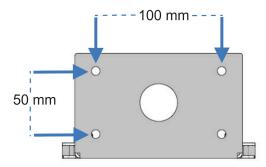

MT300



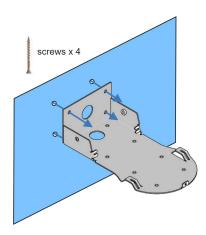


Figure 4: Screws and plugs



The screws and plugs are not included. See Package Contents what is included.


#### 2. Mounting the Camera



- 2. Place the CM93 camera on the camera plate and mount the camera plate to the camera using three of the M3\*6mm black screws AND the (only one silver) 1/4"-20 UNC screw.
- **3.** Place the camera with mounted camera plate on the baseplate and mount the camera plate to the baseplate with the fourth M3\*6mm black screw.
- **4.** Connect the cables to the camera. You can do this from the whole in the baseplate, or from behind the wall.



Make sure that the camera is locked to its baseplate, **before** you release the camera. Otherwise the camera could move and fall off the mount!

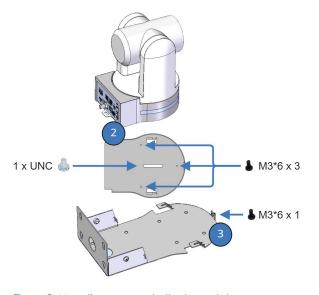

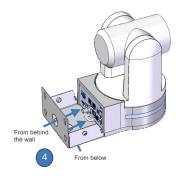


Figure 6: Connecting cables


Figure 5: Mounting camera to the baseplate

#### 3. Cable Cover



**4.** Put the cable cover over the back of the bracket, neatly concealing the cables and connectors of the camera. The cover cap can be screwed in place using the supplied M6 Allen bolts (Figure 9) for the MT300.



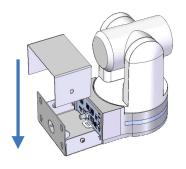

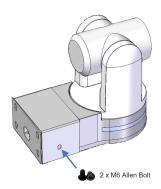


Figure 7: Cover Cap

### Mounting on a Wall or mounting pole

#### 1. Baseplate




To install the mount, follow these instructions:

Mount the MT300 baseplate (the bracket) to the wall (Figure 5). It is possible to connect the cables from behind the wall. See the drawings under "Measurements and Specs" and figure 6 below.



For safety reasons, follow exactly the warning under Mounting and Installation, and make sure that the mounting construction is capable of supporting **four times** the weight of the Product.

Figure 8: Baseplate

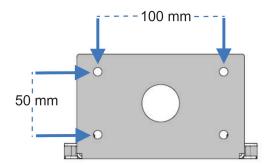

#### MT300

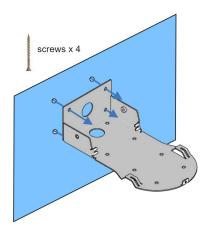


Figure 9: Screws and plugs



The screws and plugs are not included. See Package Contents what is included.




#### 2. Mounting the Camera



- 2. Place the CM93 camera on the camera plate and mount the camera plate to the camera using three of the M3\*6mm black screws AND the (only one silver) 1/4"-20 UNC screw.
- **3.** Place the camera with mounted camera plate on the baseplate and mount the camera plate to the baseplate with the fourth M3\*6mm black screw.
- **4.** Connect the cables to the camera. You can do this from the whole in the baseplate, or from behind the wall.



Make sure that the camera is locked to its baseplate, **before** you release the camera. Otherwise the camera could move and fall off the mount!

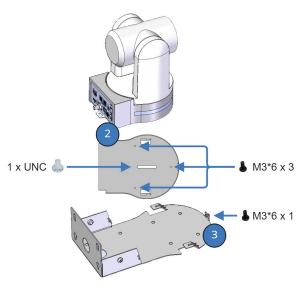

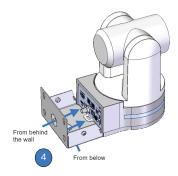



Figure 11: Connecting cables

Figure 10: Mounting camera to the baseplate

#### 3. Cable Cover



**4.** Put the cable cover over the back of the bracket, neatly concealing the cables and connectors of the camera. The cover cap can be screwed in place using the supplied M6 Allen bolts (Figure 9) for the MT300.

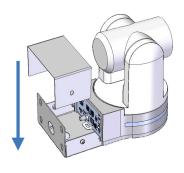

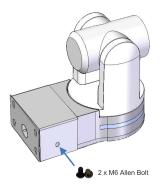


Figure 12: Cover Cap

#### 4. Cover Cap



**5.** When you have chosen to connect the cables through the wall to the camera, place the cover cap at the empty 30 mm hole at the bottom of the baseplate. Otherwise the cover cap is not needed.



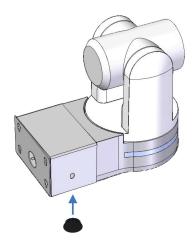


Figure 13: Cover Cap

#### **Mounting Pole**



Follow these instructions if you decide to mount the MT300 to a mounting pole:

Use a compatible screw, the 30MM Steel Ring to connect the clamp to the 30 mm gap in the center of the baseplate. It is also possible to use a (third party) mounting adapter and mounting pole. See the pictures below:



Ensure that the mounting construction is capable to carry four times the weight of the camera! See the datasheet of the camera for the exact weight.

Figure 14: Mounting clamp and ring



Figure 15: Result with trussmount clamp





Figure 16: Mounting Pole




- 2. Follow ONLY step 2 and 3in Mounting the Camera to mount the camera to the baseplate. After that, follow the steps below:
- 3. Clamp the baseplate with Trussmount Clamp to the mounting pole.
- 4. Connect all cables to the camera following step 4 in Mounting the Camera.
- 5. Place the cable cover following Cable Cover and the Cover Caps.



# MEASUREMENTS AND SPECS





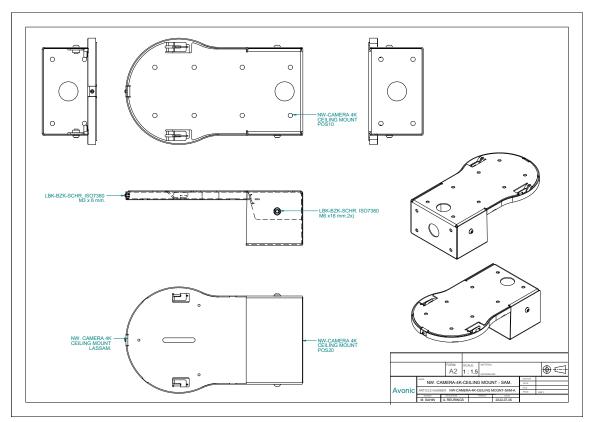


# **General Specifications**

•	
Color	Black, White
Dimensions product MM (W x H x D)	153×83×274
Weight product	1.55 KG
Included	AV-MT300 Black or white 1 x 1/4"-20 UNC camera screw 1 x 30MM Steel Ring 5 x M3*6mm black screw 2 x black Allen bolt m6* (to hold steel back cover) 1 x black 30mm cover cap



# AVONIC

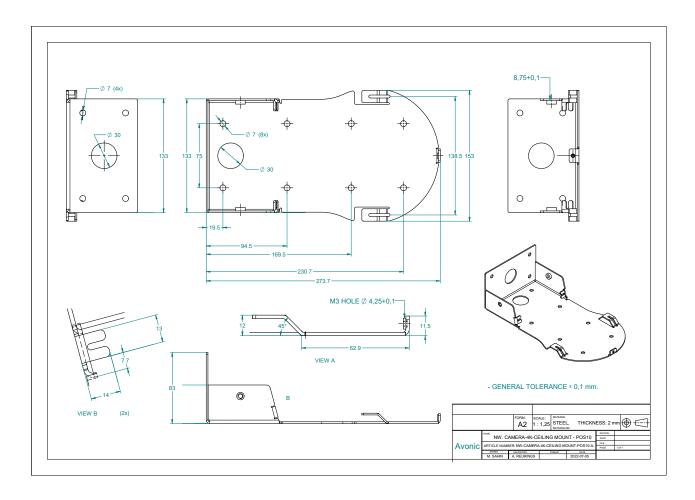



### TRANSPORT AND STORAGE

The mount must be transported in its original packaging box. Inside the box, it is recommended to wrap the mount in the original plastic bag and to place it in the protective foam.

Specific guidelines apply to the environmental temperature and humidity when operating and storing the mount and the camera.



See 'Operating humidity' and 'Storage temperature' in the provided (camera) Datasheet for the applicable



# DISPOSAL AND RECYCLING

In general, the term 'E-Waste' applies to items of all types of electrical and electronic equipment and its parts that have been discarded by the owner as waste without the intention of re-use.

Avonic outsources the disposal and recycling of its E-Waste mount and camera materials to the **Stichting Open**.



See https://stichting-open.org/ for more information about the disposal and recycling.



Avonic Wall and Ceiling Mount AV-MT300

© January 2023 • Version 1.0