

Fast-Fold NXT Fly Bracket Kit

Installation

1. Attach one Fly Bracket at each end along the top of the Fast-Fold NXT frame. See Figure 1.
2. Space the remaining brackets equally along the top of the frame. See Figure 2.

NOTE: Recommended to use a minimum of 3 Fly Brackets for all standard screen sizes.

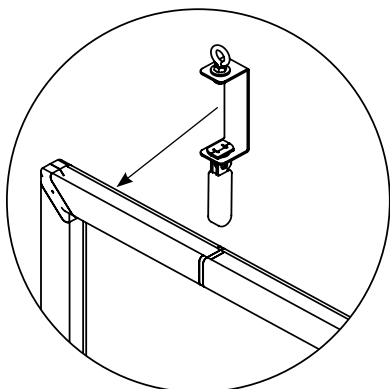
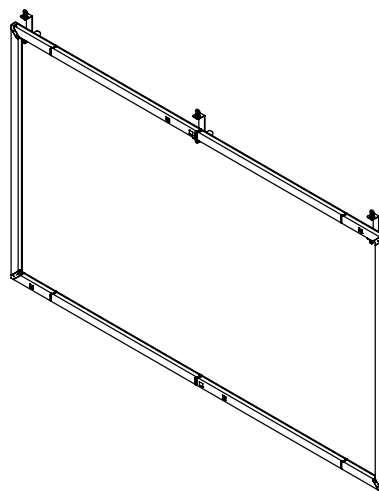


Figure 1a

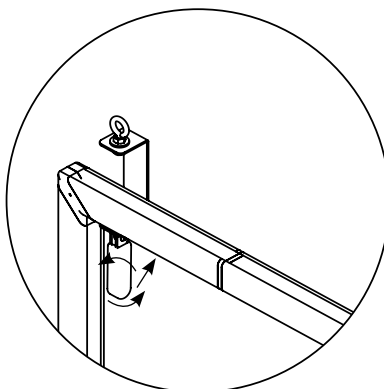


Figure 1b

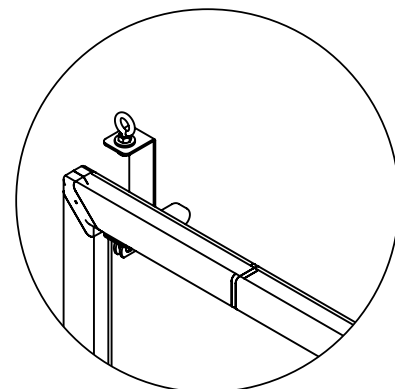


Figure 1c

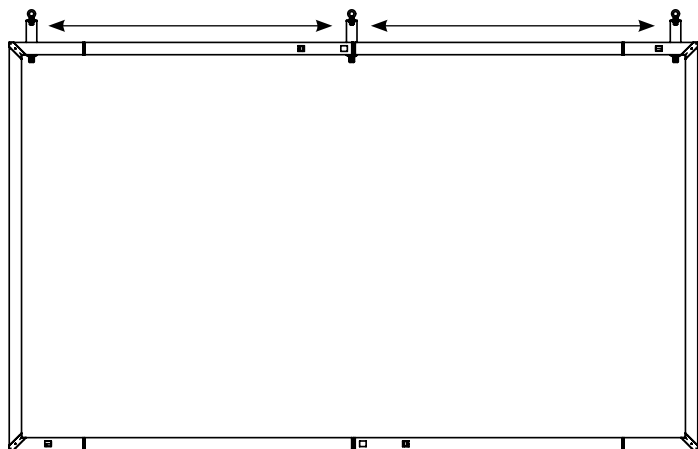


Figure 2



A BRAND OF MILESTONE AV TECHNOLOGIES | www.milestone.com

P 800.622.3737 / 574.267.8101 F 877.325.4832 / 574.267.7804

E info@da-lite.com

In British Columbia, Milestone AV Technologies ULC carries on business as MAVT Milestone AV Technologies ULC.

©2017 Milestone AV Technologies. DL-0719 (Rev. 1) 0917.

Da-Lite is a registered trademark of Milestone AV Technologies. All other brand names or marks are used for identification purposes and are trademarks of their respective owners. All patents are protected under existing designations. Other patents pending.