



OPERATING & ASSEMBLY INSTRUCTION

powerCON® | Locking 3 pole Power Connector

A. OPERATING INSTRUCTION

IMPORTANT SAFETY INSTRUCTION:


The powerCON system is certified as connector without breaking capacity according IEC 61984 / VDE 0627.

In this standard the term connector (without breaking capacity) refers to components which in normal use are not to be engaged or disengaged when under load or live.


Connector Combination & Keyways:

With the two non-interchangeable types of connectors (A type and B type) it is impossible to produce a short circuit. Mating connectors (combination) are identified by mechanical keyways and by color.


A type (color coding blue)
POWER IN

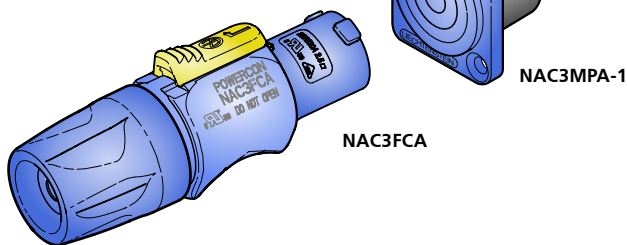

B type (color coding gray)
POWER OUT

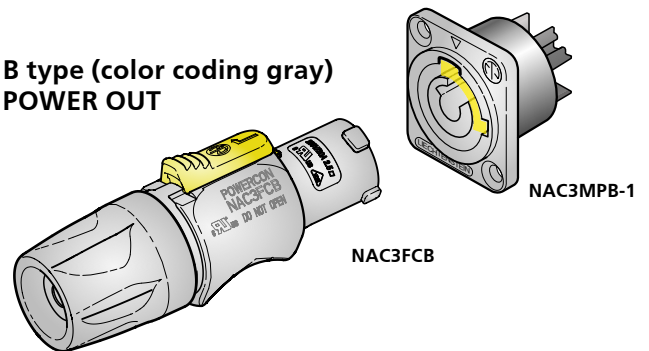


B. ASSEMBLY INSTRUCTION

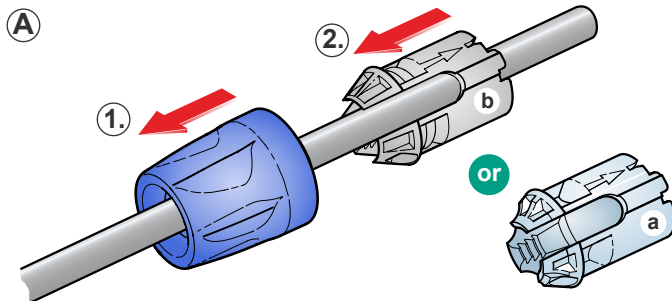


A Place the bushing (1) and the chuck (2) over the cable.

White chuck (a): 6.0 - 11.0 mm [0.236 - 0.433"]
Black chuck (b): 9.5 - 15.0 mm [0.374 - 0.59"]
VDE: 9.5 - 14.0 mm [0.374 - 0.551"]

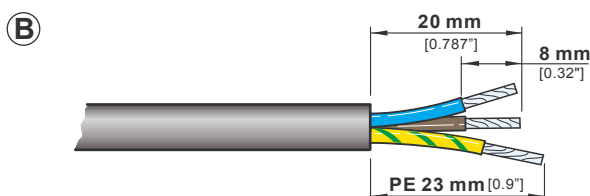


B Prepare the cable as shown.

Cable O.D.: 6.0 - 15.0 mm [0.236 - 0.59"]
Wire size: 2.5 mm² (AWG 14)

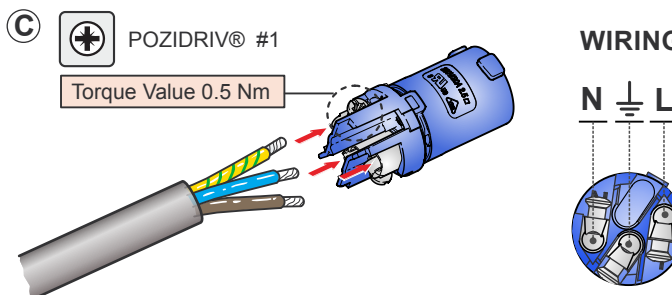

C Insert the wire into the terminals and fasten the clamping device with a POZIDRIV® #1, max. Torque 0.5 Nm (0.37 lb-ft).



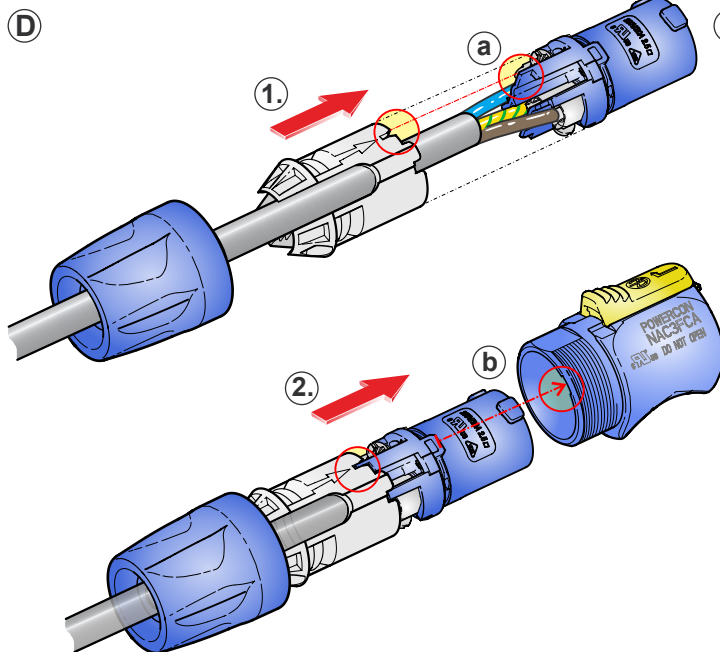


D Slide the insert and the chuck (1) into the housing (2).

Important:

- (a) Align the chuck by positioning the nose into the recess.
- (b) Pay attention to the guiding keyway!



E  Wrench size 7/8" (SW22)

Torque Value 2.5 Nm

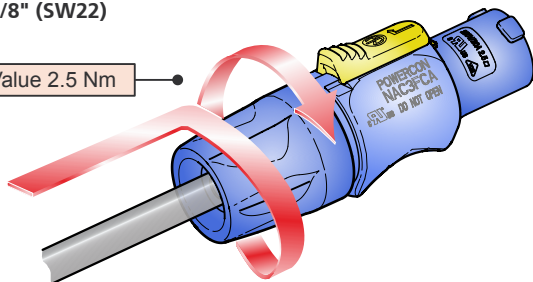

E Fasten bushing by means of a fork wrench 7/8" (SW 22), min. Torque 2.5 Nm (1.8 lb-ft).

FINISHED powerCON

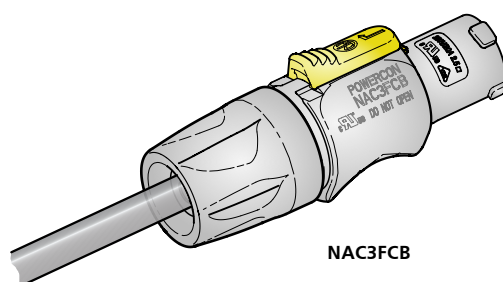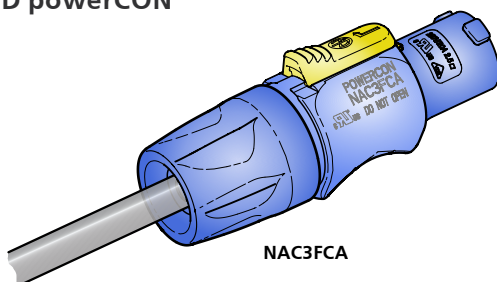

Find more details of powerCON on www.neutrik.com.

NEUTRIK AG LI T: +423/237 24 24 F: +423/232 53 93
NEUTRIK USA Inc. USA T: +1 704/972 3050 F: +1 704/438 9202
NEUTRIK (UK) Ltd. UK T: +44 1983/811441 F: +44 1983/811439
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131/280 890 F: +49 8131/280 830

NEUTRIK France FR T: +33 1/4131 6750 F: +33 1/4131 0511
NEUTRIK Tokyo Ltd. JP T: +81 3/3663 4733 F: +81 3/3663 4796
NEUTRIK Hong Kong Ltd. HK T: +852/2687 6055 F: +852/2687 6052
NEUTRIK India Pvt. Ltd. IND T: +91/982 05 43 424 F: +91/22 26163

Draft. Nr.: BDA 452 | Update: 31.08.2015 | Data subject to change without prior notice. ©2015 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.