




ASSEMBLY INSTRUCTION

convertCON | NC3FM-C, 3 Pole XLR Cable Connector

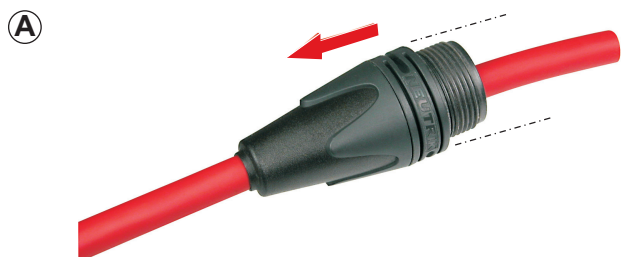


Slide the boot onto the cable.




Prepare cable as shown.



Slide back the shell (change gender from female to male).

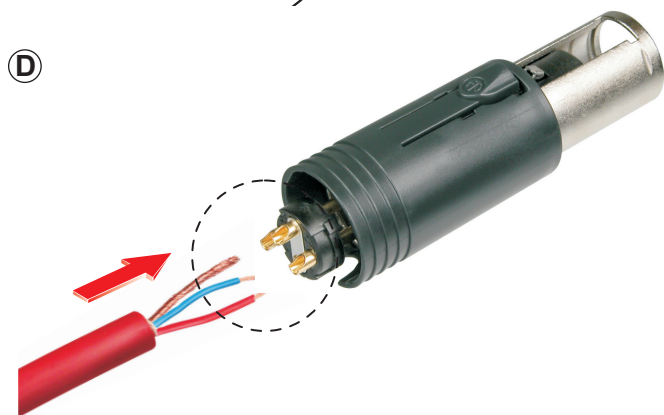

Insert wires into the terminals and solder them.

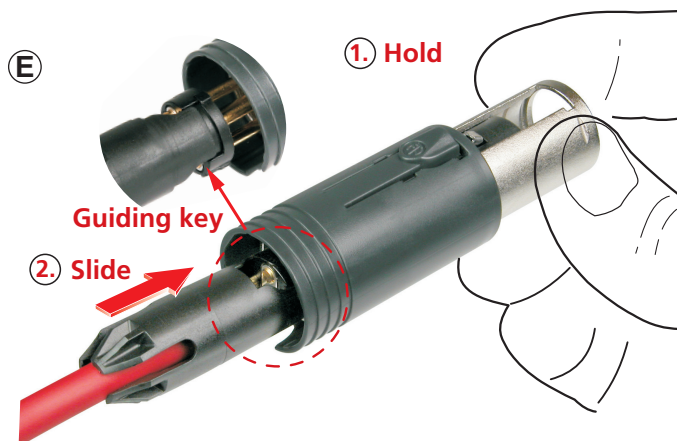

Put chuck onto the cable and slide insert & chuck into the housing.

Attention: Pay attention to align the chuck on the guiding key.




F



Finish installation by turning the boot onto the connector.

Handling

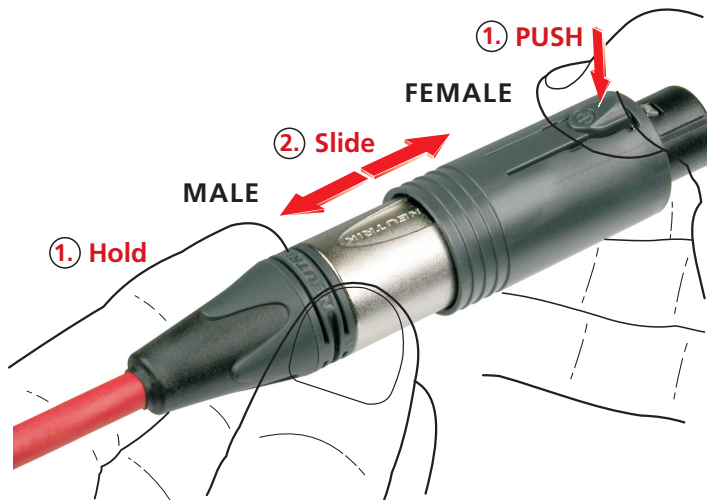

Easy selectable gender from male to female and vice versa:

To change gender hold the boot with one hand. Press the push down with the other hand and slide the shell to desired gender.

Convert FEMALE



Connecting two convertCON



ATTENTION

- convertCON does not lock with all chassis connectors!
- Pay regard to orientation while connecting two convertCON.

NEUTRIK AG
NEUTRIK Zürich AG
NEUTRIK USA Inc.
NEUTRIK (UK) Ltd.

LI
CH
USA
UK

T: +423 / 237 24 24 F: +423 / 232 53 93
T: +41 44 / 736 5010 F: +41 44 / 736 5011
T: +1 732 / 901 9488 F: +1 732 / 901 9608
T: +44 1983 / 811 441 F: +44 1983 / 811 439

NEUTRIK Vertriebs GmbH
NEUTRIK France
NEUTRIK Tokyo Ltd.
NEUTRIK Hong Kong Ltd.

DE/NL/AT
FR
JP
HK

T: +49 8131 / 280 890 F: +49 8131 / 280 830
T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
T: +852 / 2687 6055 F: +852 / 2687 6052