


# WiPG 2000

## User Guide

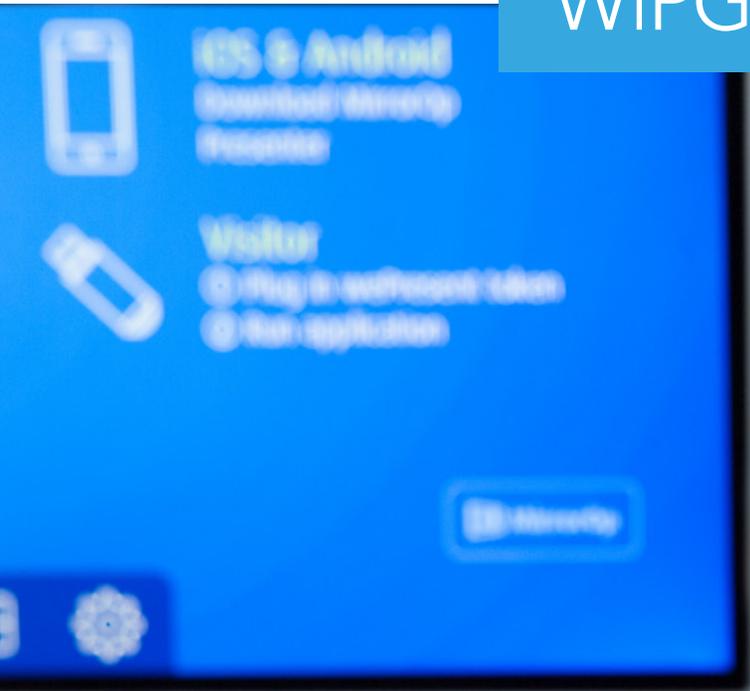

<b>1.</b>	<b>Overview</b>	<b>1</b>
<b>2.</b>	<b>Package Contents</b>	<b>4</b>
<b>3.</b>	<b>USB Token Contents</b>	<b>4</b>
<b>4.</b>	<b>Physical Details</b>	<b>5</b>
<b>5.</b>	<b>What you Might Need</b>	<b>7</b>
<b>6.</b>	<b>Quick Installation</b>	<b>8</b>
<b>7.</b>	<b>WiP-2000 Start/Standby Page</b>	<b>9</b>
	7.1 Quick Guide	9
	7.2 Whiteboard	9
	7.3 USB Player Function	11
	7.4 Conference Control Mode	11
	7.5 Sender List	12
	7.6 Split Screen Mode	12
	7.7 Setup	13
	7.8 Remote Tocuh Control (UMT)	13
	7.9 Pen Menu Function under Projecting Mode	14
<b>8.</b>	<b>Web Management</b>	<b>15</b>
	8.1 Home page	15
	8.2 Conference Control	16
	8.3 Admin	17
	8.4 System Status	18
	8.5 Device Setup	19
	8.6 Network Setup	20
	8.7 WiFi Setup	22
	8.8 SNMP Setup	26
	8.9 OSD Setup	27
	8.10 Weblides Setup	28
	8.11 Change Passwords	28
	8.12 Reset to Default	29
	8.13 Fireware Upgrade	30
	8.14 Reboot System	31
	8.15 Logout	32
	8.16 Weblides	33
<b>9.</b>	<b>USB Player</b>	<b>33</b>
	9.1 Photo Viewer	34
	9.2 Video Player	35
	9.3 Music Player	36
	9.4 Office Viewer	37
	9.5 Setup	38
<b>10.</b>	<b>Wall Mount</b>	<b>39</b>
<b>11.</b>	<b>Safety</b>	<b>40</b>

# 1 Overview

WiPG-2000 is a wireless presentation system which connects up to 64 devices on any platform (Windows/Mac/iOS/Android/Chromebook) for engaging interactive presentations. It supports Multi-touch technology, virtual whiteboard, HD video streaming, and USB HID compatible remote devices, such as a wireless mouse or keyboard.

ICON	FEATURE	DESCRIPTION
	MirrorOp for Windows and Mac	MirrorOp for Windows and Mac <ul style="list-style-type: none"> <li>• Win: 7/8</li> <li>• Mac: 10.7/10.8/10.9/10.10</li> </ul>
	MirrorOp for Galaxy	MirrorOp Sender for Samsung Galaxy series devices
	MirrorOp Presenter	High quality presentation and annotation via iPhone/iPad or Android devices (Word, Excel, PPT, PDF, Photo, Browser, Live Camera, Screenshot)
	Video Streaming	Onboard Video/Music streaming for Windows, Mac, iOS and Android
	Webslides	Broadcast slides to your devices with WiFi and web browser <ul style="list-style-type: none"> <li>• Audience can save the projecting slides for taking notes</li> <li>• Webslides can be secured by password</li> </ul>
	Whiteboard	<ul style="list-style-type: none"> <li>• Write and draw on virtual whiteboard/blackboard without any computer connected</li> <li>• Make annotations on any projecting content. Allows on screen annotation during presentation</li> <li>• Annotating, writing and drawing can be done using touch screen or any other USB HID device</li> </ul>

ICON	FEATURE	DESCRIPTION
	4 to 1 Projection	Project four PC/Mac screens to one projector/ display at once
	1 to 4 Projection	Mirror the presentation to up to four connected receivers at the same time
	Conference Control / OSD User-List	<p>Control projection from web Admin, or use mouse/keyboard to select a PC from the standby screen.</p> <ul style="list-style-type: none"> <li>• Conference control function can be secured by password</li> <li>• Moderator can control who is projecting.</li> <li>• Moderator can compare 4 screens side by side.</li> </ul>
	SNMP V3	Manage wePresent devices across the corporate network through enhanced SNMP V3 protocol
	UMT	Driverless remote touch control through network. (Support standard Win 7/8 compatible USB HID touch device)

## Key Features


- WiFi 802.1a/b/g/n (Dual-band 5G/2.4G WiFi)
- Power over Ethernet
- High performance screen/audio projection for Windows/Mac/Chromebook (Windows 7/8 and Mac 10.7/10.8/10.9/10.10)
- Remote desktop control from Touch Screen or Mouse/Keyboard for Windows/Mac
- Plug&Show: Launch software from USB Token without installation. Extra USB tokens with the Plug&Show function can be created in the wePresent software.
- High performance 4-to-1 Quadrant Screen Projection
- Supports up to 64 concurrent users
- Conference Control: Teacher/ Mediator function through the device web Admin or standby screen
- Supports Wireless Multi-touch control (Win7/8 standard HID compatible device)
- Supports writing and drawing over presentation, or drawing on whiteboard/ blackboard without PC
- Changeable customized standby screen
- Replace entire start screen with background image
- SNMP V3:
  - manage/configure multiple wePresent devices through SNMP V3 protocol
  - Firmware upgrade via FTP
  - Enhance the remote SNMP manageability to higher security level
- Wi-Fi Enterprise encryption support (AES 128-bit, HTTPS)
- Supports MSI installer for Windows software deployment and execute application from command line
- Extended desktop support for both Windows and Mac
- Security design: Session Login Code, WEP/WPA/WPA-Enterprise WiFi Security, and GateKeeper access
- HDMI and VGA dual video interfaces
- WiFi AP, Station and AP-Client mode: Make WiPG-2000 a part of the wired or wireless network. Allows internet access to all connected users and presentation from network computers

## Package Contents

- wePresent WiPG-2000
- wePresent USB Token
- Power Adapter (DC +5V, 2.6A)
- 2 WiFi Antennas
- Quick Installation Guide
- Wall Mount Kit
- Warranty Card
- CE DoC

## USB Token Contents


- MirrorOp Installer for Windows
- MirrorOp Installer for Mac
- Executable MirrorOp Application for Windows
- Executable MirrorOp Application for Mac
- VAC Driver (For Windows XP Audio Projection)
- VDD Driver (For Windows XP/Vista Virtual Extended Screen)
- SVS Driver (For Mac Extended Screen)
- User Manual

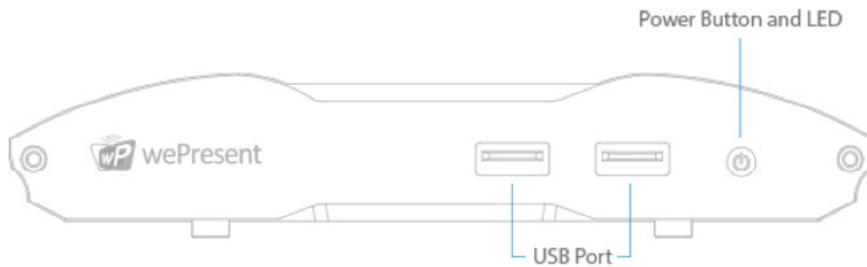

◀ *Front Panel*

## Front Panel

DESCRIPTION	
Power Button and LED	Power on/off bottom LED Indicator: System Loading (red), Ready (blue)
USB Port (Front)	2 USB ports for USB, mouse and keyboard

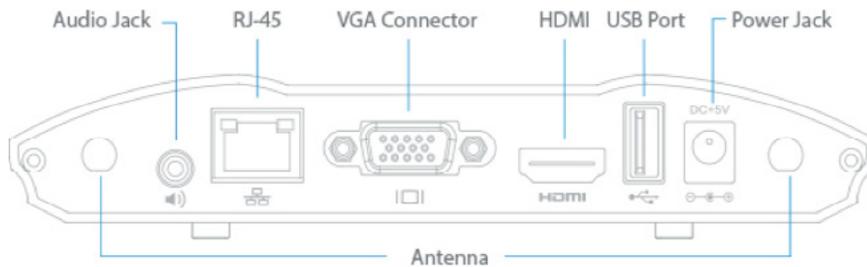


◀ *Rear Panel*

## Rear Panel

	DESCRIPTION
Antenna	WiFi Antenna
USB Port (rear)	USB port for USB Thumb drive or Touch Device
RJ-45	10/100M RJ-45 port PoE (Power Over Ethernet)
VGA Connector	VGA Connector
HDMI	HDMI Connector
Audio Jack	Audio Jack (3.5mm)
Power Jack	Power Jack (5V/2.5A)

- The USB port can only supply up to 5V/0.5A to USB touch device and USB drive
- PoE Standard: IEEE 802.3at Standard 13 watts type 1 (class 0) powered device(PD) of Power Over Ethernet(PoE)

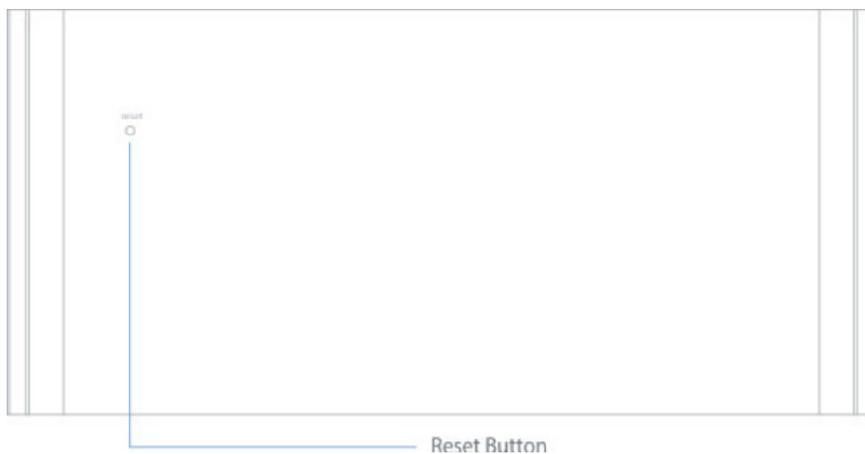


◀ *Bottom Side*


## Bottom Side

	DESCRIPTION
Screw Hole	Screw Hole for Wall Mount Kit
Reset Button	Press reset button and power on the device to execute Hardware Reset

- Projector/display with VGA/HDMI input
- Windows or Mac PC/Laptop
- Apple iPhone or iPad device
- Android Phone or Tablet device
- Chromebook laptop
- Speaker (Optional, for audio projection feature)
- USB Mouse and Keyboard (Optional, for remote desktop feature)
- USB HID Touch Screen/IWB Device (Optional, for multitouch feature)

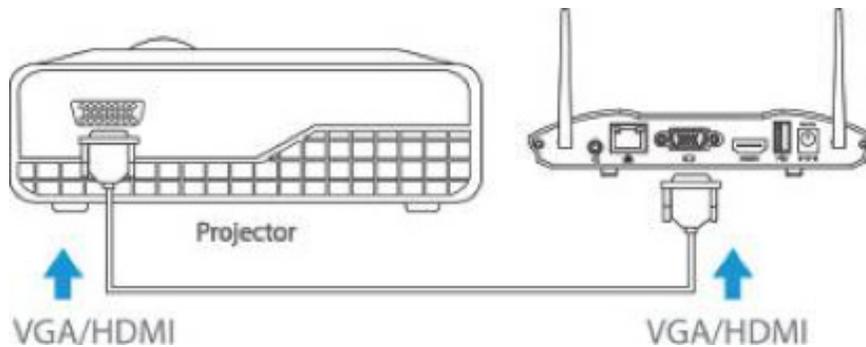

1. Connect wePresent WiPG-2000 to Projector/display through VGA/HDMI port and turn on projector/display power.
2. Connect the power adaptor to:
  - WiPG-2000 and press the power button to turn on WiPG-2000
  - System will be ready when the LED light turns to blue

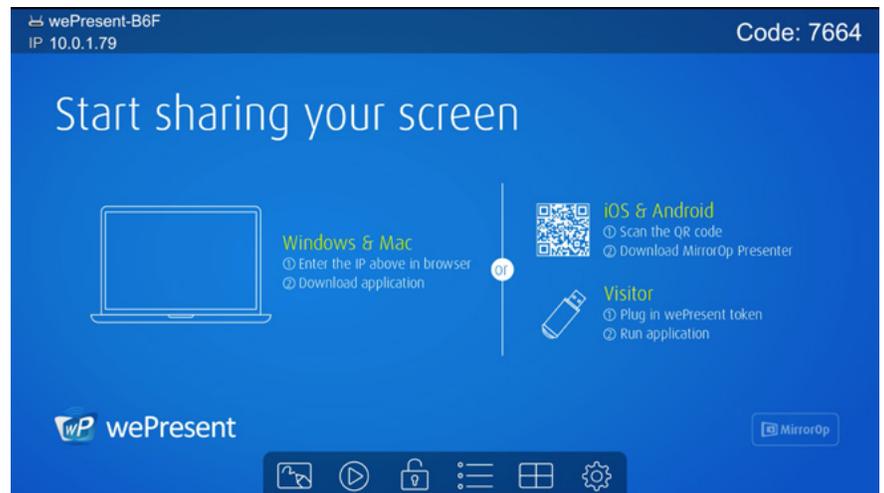


3. Insert the speaker cable to WiPG-2000 audio jack for audio output (Optional).
4. Insert the USB mouse or keyboard or USB touch device to WiPG-2000 front/rear USB port for On-Screen Display (OSD) control (Optional).

## 7 WiPG-2000 Start/Standby Page


### 7.1 Quick Guide

The device will show the startup screen as below, as well as the wePresent device information and function icons.

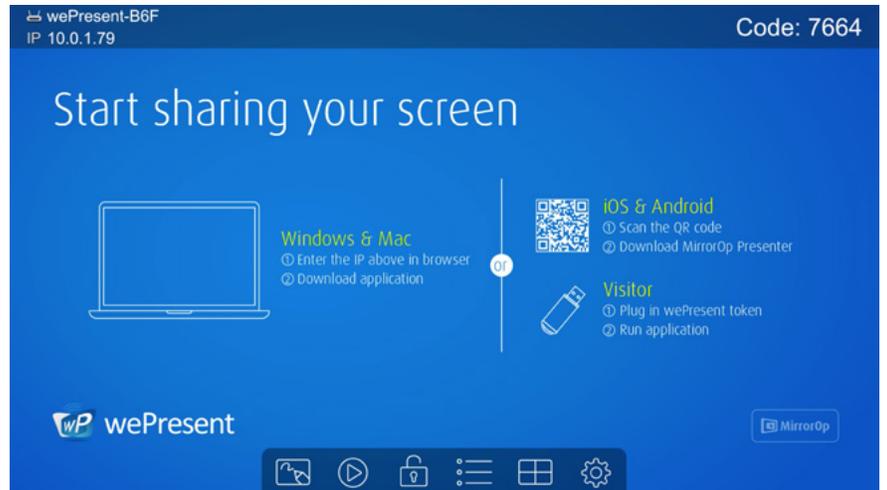

### 7.2 Whiteboard

Click on the “whiteboard”  icon on the start page to enter “whiteboard” function. Write and draw on screen through USB Mouse, Touch Screen or IWB device.

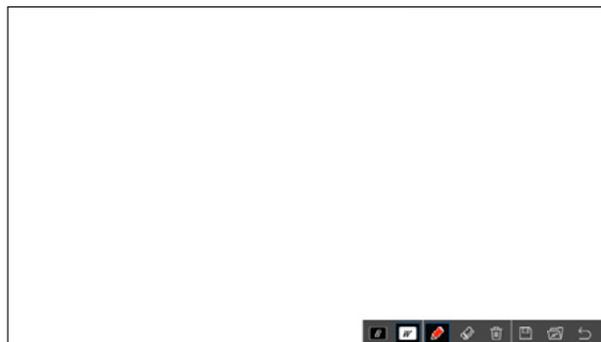

## 7 WiPG-2000 Start/Standby Page

### Pen Menu Functions

BUTTON	DESCRIPTION
	Open/Minimize all Pen menu bar
	Home, Go back to wePresent home standby screen
	Clear all of the drawing/writing on the screen
	Erase part of drawing/writing
	Select the pen colour. (Red, Green, Blue)
	Select the size of the pen. (Small, Medium, Large)
	Click to use the blackboard. (All the drawing/writing will be cleared when changing to different mode)
	Click to use the whiteboard. (All the drawing/writing will be cleared when changing to different mode)

### 7.3 USB Player Function

Click on the “USB Player”  button on the start page to enter “USB Player” function. Access and play the Photo/Music/Video/Office files from the inserted USB drive. For additional details, please see the USB Player section.




### 7.4 Conference Control Mode

1. Click  to enable conference control mode and the users will be unable to present to screen themselves. The moderator can only manage the projecting sender through web conference control page or the user list.
2. Click  to disable conference control mode, the users will be able to present to screen.


## 7.5 Connected User List

Click on the “User-List” button to show all connected users. Moderator can select a user to present from the list.

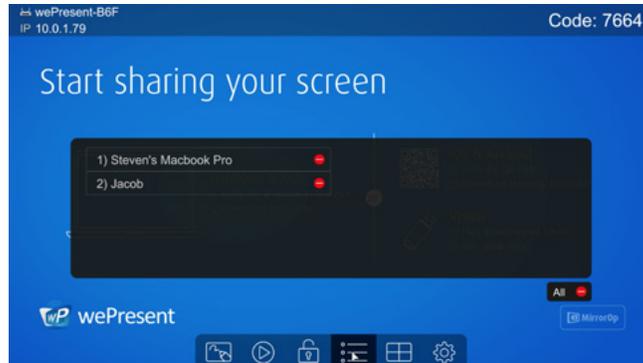


## 7.6 Quad Screen Mode

Click on the “Quad Screen”  button on the start page to enter “Quad Screen” page. Connected users will be listed. Select the “add”  icon to choose a presenter to the selected quadrant area.

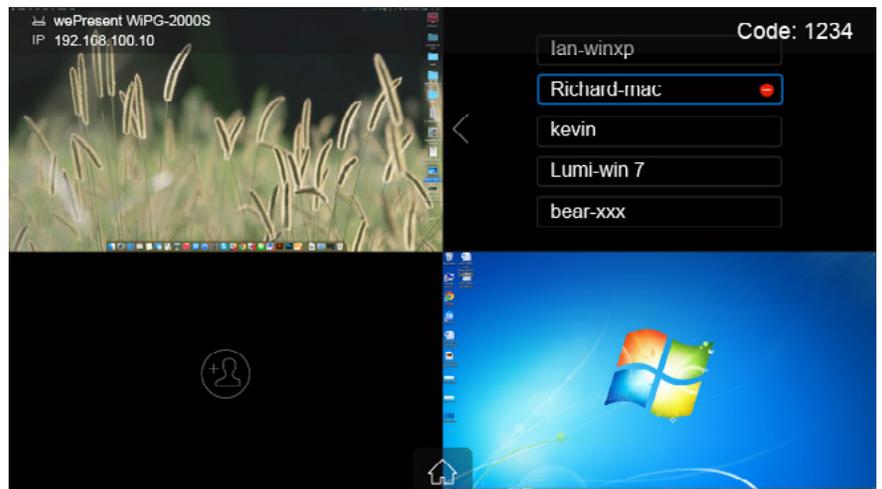

## 7.7 Setup

Click on Setup icon , to view Firmware (FW) version, resolution, WiFi channel and AP-client status information on the screen. Select "Calibration" function to calibrate the projecting screen to an optimal setting. Click on the "Make PnS Token" to copy the Plug-n-Show application for Windows and Mac to attached USB drive.

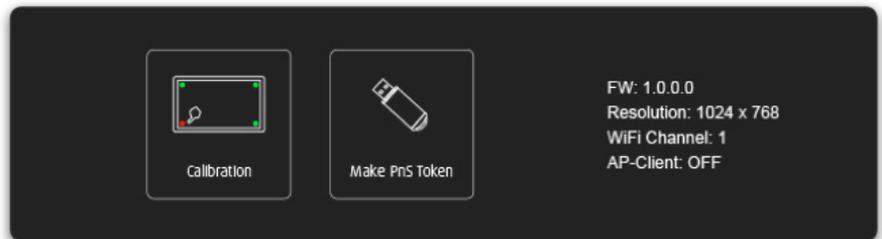

## 7.8 Remote Touch Control (UMT)

WiPG-2000 can support standard Win7/8 compatible HID touch devices. By connecting the HID touch screen/IWB device, users can control the standby screen, whiteboard and the projecting screen remotely from the Touch Screen/IWB device.

### Note:

1. The UMT can only support standard USB HID touch device, the supported touch device can be found from wePresent distributor.
2. Windows XP, 7, 8, 10, and Mac are supported for touchscreen and mouse events.
3. The USB port on WiPG-2000 can supply up to 5V/0.5A power. An additional power supply is required if the attached HID device requires more power.

## 7.9 Pen Menu Function under Projecting Mode

When users are projecting through Windows, Mac, Android and iOS application, any Win7/8 standard HID compatible device (i.e Mouse/IWB/Touchscreen) can be used for Pen feature. Users can do free drawings/writings and annotation on the projecting screen.



BUTTON	DESCRIPTION
	Home, Go back to wePresent home standby screen
	Enable/Disable the conference control mode
	The tool for PowerPoint presentation.
	PageUp/PageDn, this button to go to previous/next page.
	SlideShow, When the user is projecting a PPT file, press this button to enable Slide Show function.
	ESC, When the user is projecting a PPT file, press this button to quit Slide Show mode.
	Clear all of the drawing/writing on the screen
	Erase part of drawing/writing


## 7 WiPG-2000 Start/Standby Page

BUTTON	DESCRIPTION
	Save current screen image to USB driver
	Enable the magnifier function
	Change to Mouse mode for remote control function
	Select the color and size for Pen mode (Red, Green, Blue)
	Select the size of the pen (Small, Medium, Big)
	Change to Pointer Mode

## 8 Web Management

### 8.1 Home Page


1. Connect Mac/PC/Chromebook to the WiPG-2000.
2. Enter the receiver IP address on your browser. The IP address is found on the projector/display screen. (Default IP is 192.168.100.10)

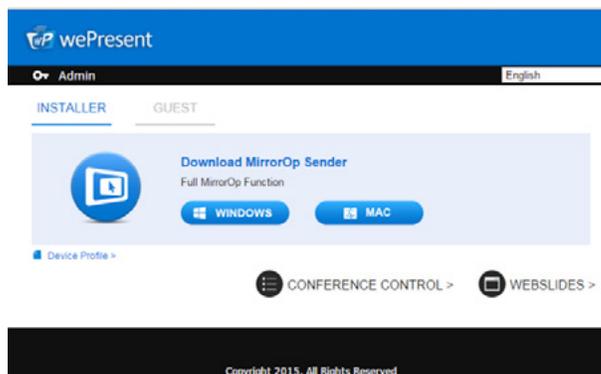

3. Please select the “Windows Utility” or “Mac Utility” and execute the installation program.  
**Note:** Please disable the “Smart Screen Filter” on IE browser; otherwise file may not be downloaded.
4. Download the Device Profile on your Windows or Mac laptop, double click the .wipg profile. The wePresent utility will launch automatically and connect to this device without further operation.


## 8.2 Conference Control

1. Select “Conference Control” function, The current connected user list can be found on this page. Verify the lock  on the start page is disabled.
2. Enter password and then press [Login]. (default password: moderator)

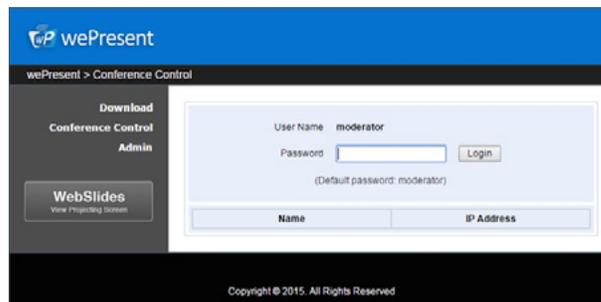

3. After login, User List can be found on the screen, which indicates all of the users connected to wePresent WiPG-2000 box.
4. The default setting is “allow control from this page only”. When this function is checked, the moderator can control all of the connected users’ projections.
5. There are three columns, “Name”, “Play Control” and “IP Address”.
  - a. Play Control: There are seven buttons, including Screen# Full , Screen #1 , Screen#2 , Screen#3 , Screen#4 , Stop  and Remove .
  - b. Moderator can click on the “Full” button to allow full screen projecting.
  - c. Moderator can assign which user to project in a specific quadrant by clicking on the screen numbers.
  - d. Moderator can “stop” the projecting or remove the user anytime.


6. Uncheck the "Allow Control from this page only", and the centralized control will be disabled. User can project their screen to WiPG-2000 freely.
7. Moderator can log out from the conference control mode by clicking on the "Logout" on the upper right corner.

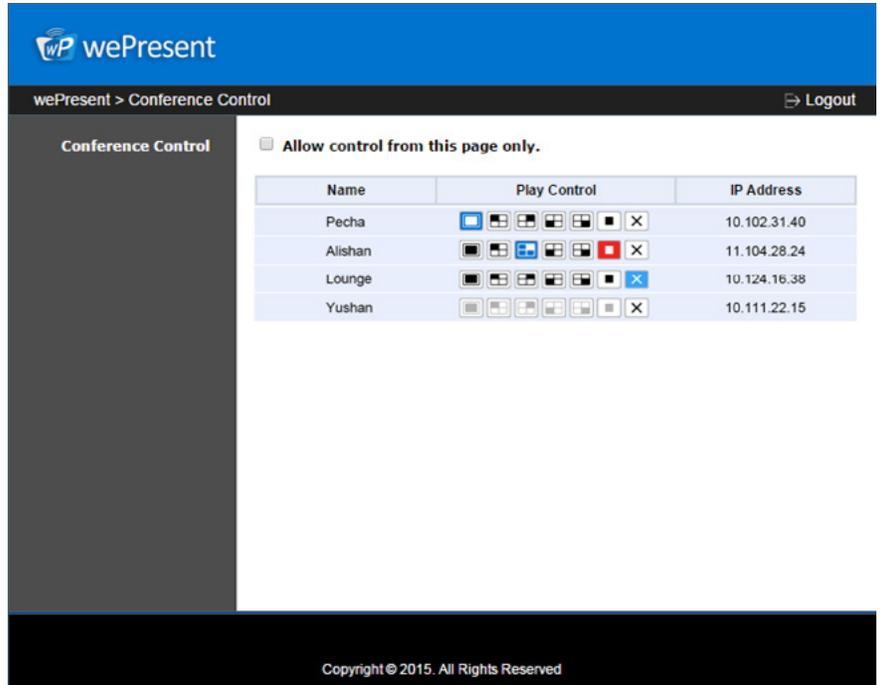

Name	Play Control	IP Address
Pecha		10.102.31.40
Alishan		11.104.28.24
Lounge		10.124.16.38
Yushan		10.111.22.15

## 8.3 Admin

Click on "Admin" and then enter the password to login to the web admin page.  
(Default Password: admin)

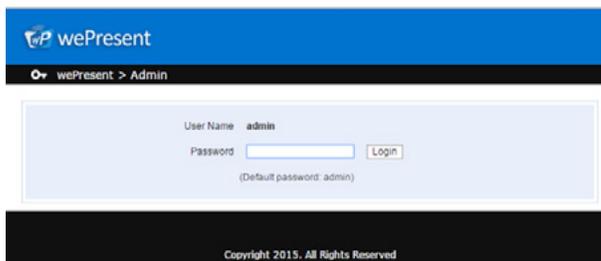

## 8.4 System Status

Click on “System Status” option, it will show current system status.

**Model Name:** Product model name

**Versions:**

- **Firmware version no.:** Product firmware version number

**Device Information:**

- **Resolution:** Device output resolution
- **Host Name:** Device network hostname

**Network Status:**

- **IP address:** IP address of WiPG-2000S device
- **Subnet Mask:** subnet mask
- **Default Gateway:** default gateway
- **Wireless MAC address:** wireless MAC address
- **Wire MAC address:** wire MAC address

**WiFi Information**


- **WiFi Mode:** Access Point/WiFi Station/Concurrent AP-Station Mode
- **SSID:** Current SSID or the connected WiFi AP name

**Connection Status:**

- **Projecting status:** “Waiting for projecting” or “Projecting”
- **Total Users:** shows how many users login to wePresent WiPG-2000S
- **Code:** shows current Code

**Date and Time:**

- **Date:** Current date
- **Time:** Current time
- **Time Zone:** Current Time zone

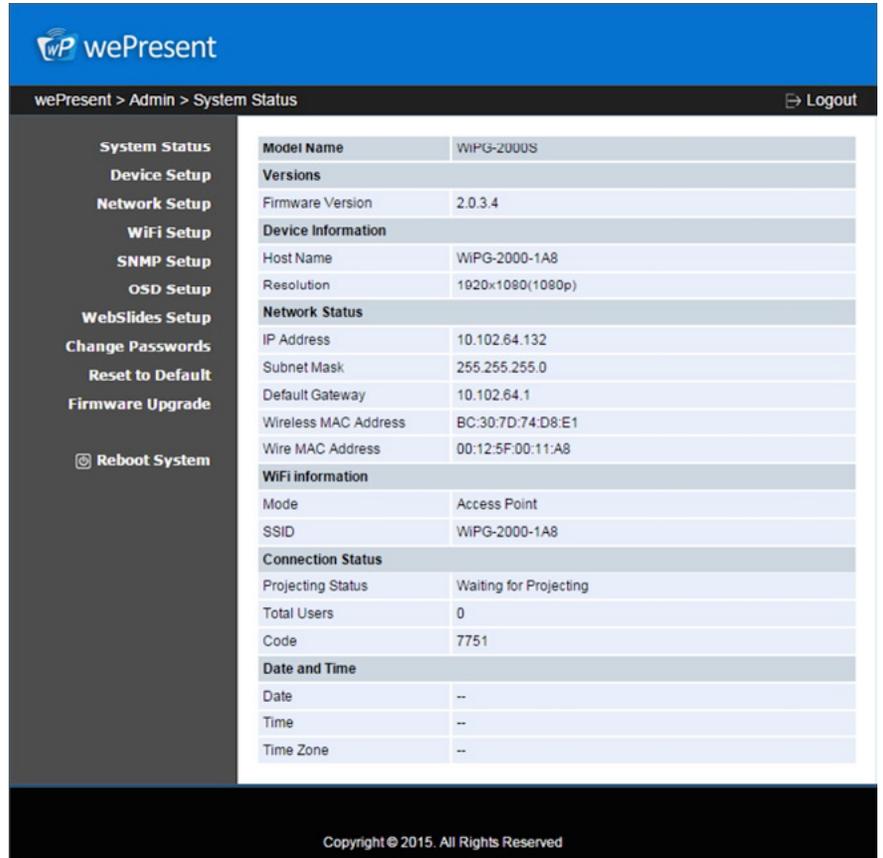

wePresent > Admin > System Status Logout

<b>System Status</b>	<b>Model Name</b>	WIPG-2000S
<b>Device Setup</b>	<b>Versions</b>	
<b>Network Setup</b>	Firmware Version	2.0.3.4
<b>WiFi Setup</b>	<b>Device Information</b>	
<b>SNMP Setup</b>	Host Name	WIPG-2000-1A8
<b>OSD Setup</b>	Resolution	1920x1080(1080p)
<b>WebSlides Setup</b>	<b>Network Status</b>	
<b>Change Passwords</b>	IP Address	10.102.64.132
<b>Reset to Default</b>	Subnet Mask	255.255.255.0
<b>Firmware Upgrade</b>	Default Gateway	10.102.64.1
<b>Reboot System</b>	Wireless MAC Address	BC:30:7D:74:D8:E1
	Wire MAC Address	00:12:5F:00:11:A8
	<b>WiFi information</b>	
	Mode	Access Point
	SSID	WIPG-2000-1A8
	<b>Connection Status</b>	
	Projecting Status	Waiting for Projecting
	Total Users	0
	Code	7751
	<b>Date and Time</b>	
	Date	--
	Time	--
	Time Zone	--

Copyright © 2015. All Rights Reserved


## 8.5 Device Setup

### 1. "Device Setup" option will show the device settings:

- **<Resolution>**: 720p, 1080i, 1080p, UXGA(1600\*1200), WXGA+(1440\*900), WXGA(1360\*768, 1280x768, 1280x800), XGA(1024\*768) and HDMI Auto Detect
- **<Code>**: You can select "Disable", "Random", or "Use the following code" to set a specified 4-character Number

### 2. "Date and Time Settings" option will show the time setting options:

- Choose **<SNTP/NTP Server Synchronization>** or **<Disable>** to specify the time server or disable this feature
- **<Time Zone>**: Specify the time zone

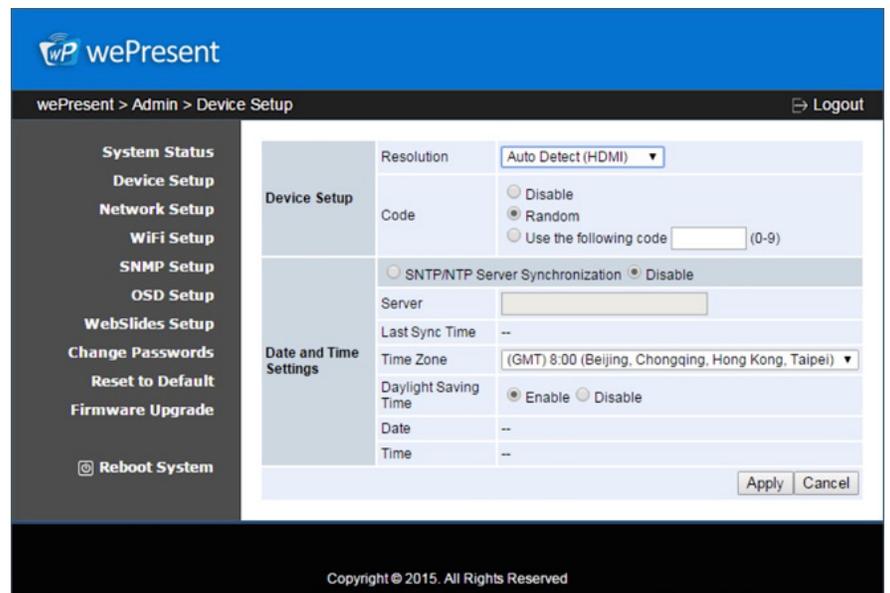

## 8.6 Network Setup

“Network Setup” option shows network settings:

### <Host Name and Domain Name>

- Host Name: Enter the hostname of this device. Note: You can enable the “use the same name as network name”, it will use the same name as SSID for the device host name.
- Domain Name: If DNS server is available, the domain name can be entered here.

### < IP Setup>

- Select “obtain IP address automatically” or “Use the following IP address” to enter the IP address

The default setting is as following:

- IP Address: 192.168.100.10
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.100.10
- DNS Server: 192.168.100.10

**<DHCP Server Setup>****<Note: Auto-Configuration Network Setup on WiPG-2000S>**

The default setting of the wePresent WiPG-2000 as DHCP server. When the wePresent WiPG-2000 is connected to a LAN that already has a DHCP server, the wePresent WiPG-2000 uses an IP address assigned by the server. When the wePresent WiPG-2000 is connected to a LAN that does not have a DHCP server, the wePresent WiPG-2000 becomes the DHCP server in the network.

- If "auto" option is selected, the WiPG-2000 will auto disable the DHCP server setup when the existing DHCP server is detected. "Disable" option can also be selected. When "Auto" option is chosen, the below information can be entered or kept as default setting.

Start IP: 192.168.100.11

End IP: 192.168.100.254

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.100.10

DNS Server: 192.168.100.10


**< Gatekeeper>**

Gatekeeper function is designed for ensuring the enterprise network security within wePresent WiPG-2000.

- "All Block" can block Guest Users (through wireless) from accessing all office network (LAN)
- "All Pass" can allow Guest Users (through wireless) access all of office network
- "Internet Only" can block Guest Users (through wireless) from office network (LAN) but still reserve internet connection capability

**<Apply >**: Press "Apply" button after configuration, and follow the reboot instruction when applicable.

**<Cancel>**: Press button to abort action.

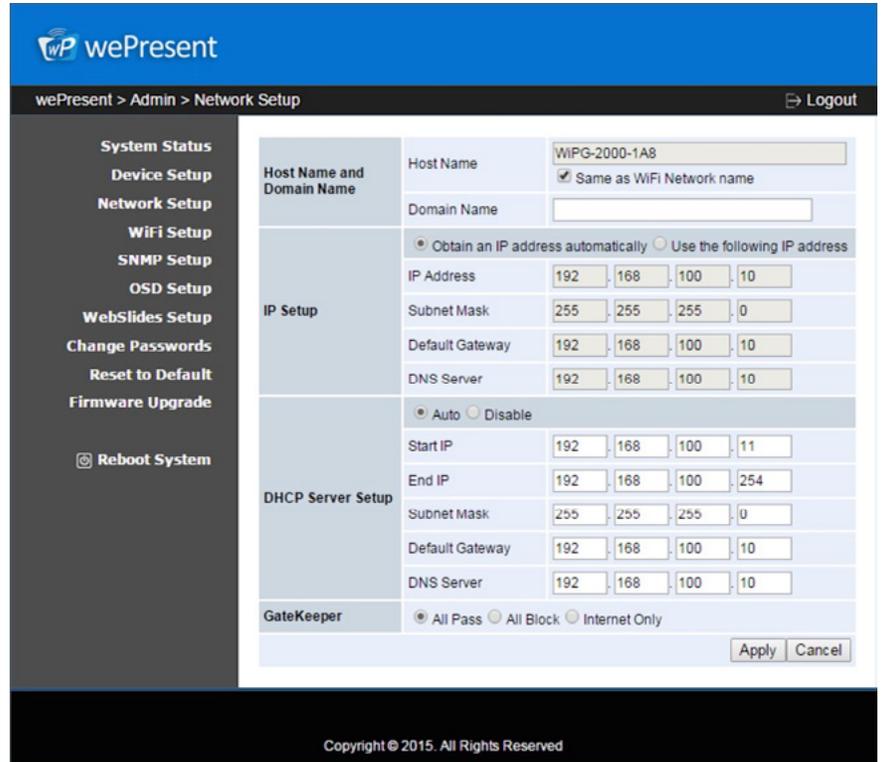

wePresent > Admin > Network Setup Logout

**Host Name and Domain Name**

Host Name:   
 Same as WiFi Network name  
 Domain Name:

**IP Setup**

Obtain an IP address automatically  Use the following IP address

IP Address:      
 Subnet Mask:      
 Default Gateway:      
 DNS Server:

**DHCP Server Setup**

Auto  Disable

Start IP:      
 End IP:      
 Subnet Mask:      
 Default Gateway:      
 DNS Server:

**GateKeeper**

All Pass  All Block  Internet Only

Copyright © 2015. All Rights Reserved

## 8.7 WiFi Setup


- Wireless LAN: The default setting is "Enable"
- Mode: Specify the WiFi Access Point mode, WiFi Station mode and Concurrent AP and Station Mode

### < Access Point Mode >

- SSID: Change the default SSID (maximum length is 32 bytes)
- SSID Broadcast: The default value is "Enable"
- Band: 5G or 2.4G
- Channel: Set a fixed channel or allow auto selection. The "Auto" selection means after powering on the WiPG-2000, it will scan all of wireless channels and select one clear channel automatically.
- Encryption: Select "Disable" or one of WEP/WPA PSK/WPA2 PSK/ WPA Enterprise/ WPA2 Enterprise

## 8 Web Management

- Key: If Encryption is enabled, a key must be entered according to the encryption mode selected. (If the length of the key entered is not sufficient or too long, a warning message will pop up.)
- Channel Bandwidth: select from 20M or Auto (20M/40M)

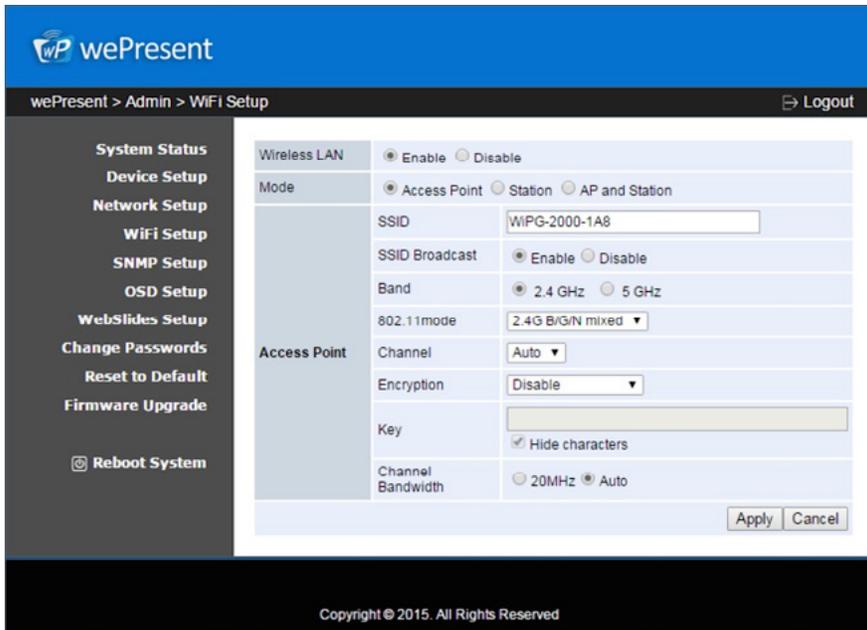

### < Station Mode >

Connect to Existing AP: The default setting is "Disable". If "Enable" is chosen, enter the existing AP SSID that you want to connect. When "Enable" option is selected, the following information needs to be entered accordingly to the existing AP setting:

**Encryption:** Select "Disable" or one of WEP/WPA PSK/WPA2 PSK/ WPA Enterprise/ WPA2 Enterprise.

**Key:** If Encryption is enabled, enter a key according to the encryption mode selected. (If the length of the key entered is not sufficient or too long, a warning message will pop up.)

**Note:** The Encryption and Key information must be consistent to the existing AP configuration.

### < Concurrent AP and Station Mode >

#### Access Point

- SSID: The default SSID can be changed, and the maximum Length is 32 bytes
- SSID Broadcast: The default value is "Enable"
- Channel: A fixed channel or auto selection can be selected. The "Auto" selection means after powering on the WiPG-2000, all wireless channels will be scanned and one clear channel automatically selected
- Encryption: Select "Disable" or one of WEP/WPA PSK/WPA2 PSK/ WPA Enterprise/ WPA2 Enterprise
- Key: If Encryption is enabled, a key must be entered according to the encryption mode selected. (If the length of the key entered is not sufficient or too long, a warning message will appear.)
- Channel Bandwidth: select from 20M or Auto (20M/40M)

#### WiFi Station:

- Connect to Existing AP: The default setting is "Disable". If "Enable" is selected, existing AP SSID must be entered, and the following information must be entered accordingly to the existing AP setting:


**Encryption:** Select "Disable" or one of WEP/WPA PSK/WPA2 PSK/ WPA Enterprise/ WPA2 Enterprise.

**Key:** If Encryption is enabled, a key must be entered according to the encryption mode selected. (If the length of the key entered is not sufficient or too long, a warning message will appear.)

**Note:** The Encryption and Key information must be consistent to the exiting AP configuration.

**<Apply >:** Press "Apply" button after configuration, and follow the reboot instruction when applicable.

**<Cancel>:** Press button to abort action.

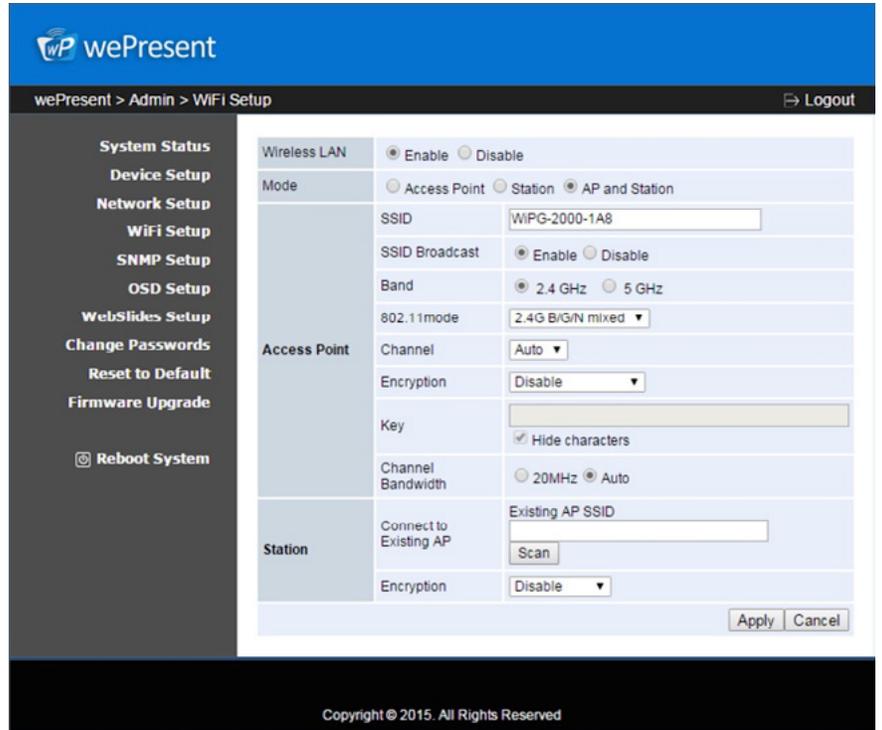

wePresent > Admin > WiFi Setup Logout

**System Status**  
**Device Setup**  
**Network Setup**  
**WiFi Setup**  
**SNMP Setup**  
**OSD Setup**  
**WebSlides Setup**  
**Change Passwords**  
**Reset to Default**  
**Firmware Upgrade**  
 Reboot System

**Wireless LAN**  Enable  Disable

**Mode**  Access Point  Station  AP and Station

**Access Point**

SSID

SSID Broadcast  Enable  Disable

Band  2.4 GHz  5 GHz

802.11 mode

Channel

Encryption

Key   
 Hide characters

Channel Bandwidth  20MHz  Auto

**Station**

Connect to Existing AP

Encryption

Copyright © 2015. All Rights Reserved

**Note:**

1. WiFi 5G feature is only available on WiPG-2000 device.
2. The WiFi DFS band is not supported.
3. The Station mode, concurrent AP and Station mode can't support the advance authentication mechanism.


## 8.8 SNMP Setup

- Enable or disable SNMP V3 service
- User Name: configure the user name to manage this device through SNMP
- Auth Password: configure the Auth password
- Priv Password: configure the Priv password
- Trap Destination: configure the trap receiver IP

**<Apply >**: Press "Apply" button after configuration, and follow the reboot instruction when applicable.

**<Cancel>**: Press button to abort action.

**Note:** Please find the MIB file from wePresent token.

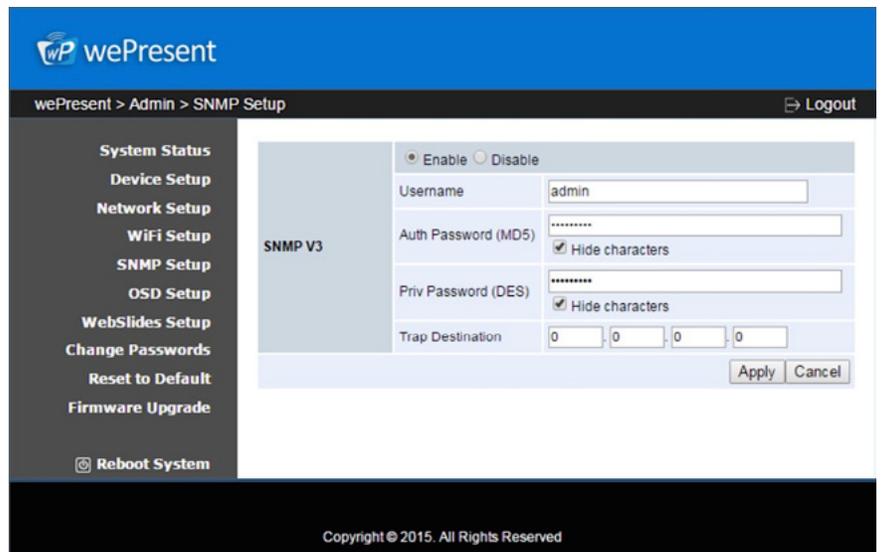

wePresent > Admin > SNMP Setup Logout

**SNMP V3**

Enable  Disable

Username:

Auth Password (MD5):   Hide characters

Priv Password (DES):   Hide characters

Trap Destination:

Copyright © 2015. All Rights Reserved

## 8.9 OSD Setup

OSD Setup option

### Change Standby Image

- **<Reset to default>**: Restore to default logo image.
- **<Image File Upload>**: Enter or browse the file name and upload the customized image. Please refer to remark on screen when selecting the file.

The following "Display Option" can be adjusted:

- **Device Information**: Show or hide the device Info.
- **User List**: Show or hide the user list.
- **Connection Info**: Show or hide the overlay connection info.
- **Font Color**: Adjust the font color of system information.
- **Screen Saver Settings**: Enable or disable the screen saver and configure the idle time(Minutes) (default is 5 mins).

**<Apply >**: Press "Apply" button after configuration, and follow the reboot instruction when applicable.

**<Cancel>**: Press button to abort action.




## 8.10 Weblides Setup

“WebSlides Setup” option:

- Adjust Auto Refresh Interval or activate “Access Password Control”
- Please pay attention to the note for information

<Apply >: Press “Apply” button after configuration, and follow the reboot instructions when applicable.


<Cancel>: Press button to abort action.

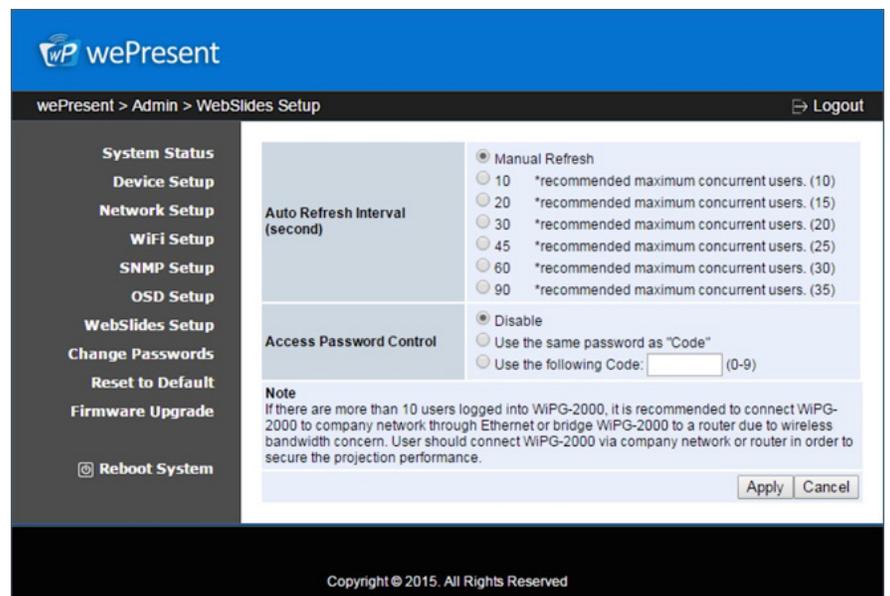

## 8.11 Change Passwords

Click on “Change Password” option to change the password setting for “conference control” and “Admin”. (Length: up to 8 characters)

- <Enter New Password>
- <Confirm New Password>
- <Apply>: Confirm and save modifications

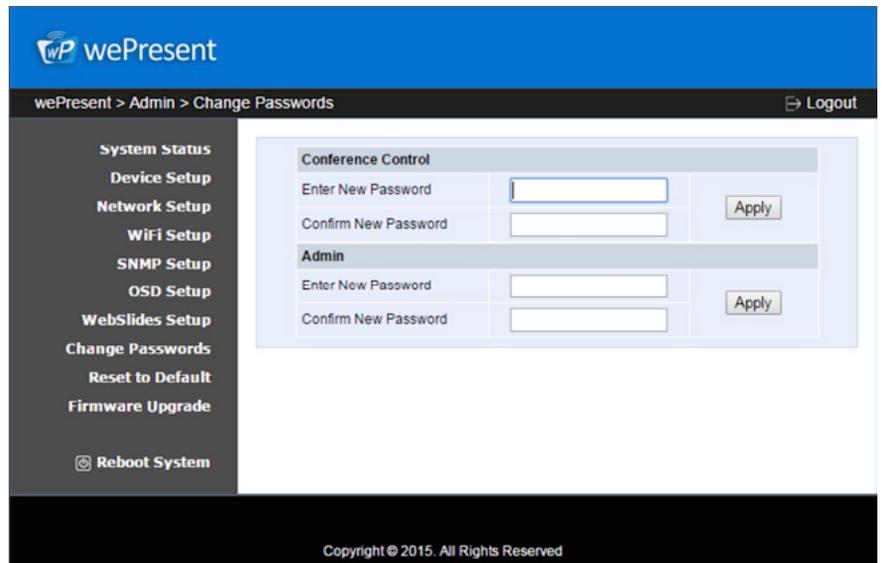


## 8.12 Reset to Default

“Reset to Default”: restores factory default settings.

<Apply>: Confirm and take action.

\*\*\* You can also restore factory default setting from WiPG-2000 reset button. The reset button can be found underneath the box. Please follow below procedures.


1. Press [Reset] button and hold.
2. Turn on wePresent WiPG-2000 box.
3. Press more than 10 seconds and release[Reset] button.
4. It will take effect to restore factory default settings.

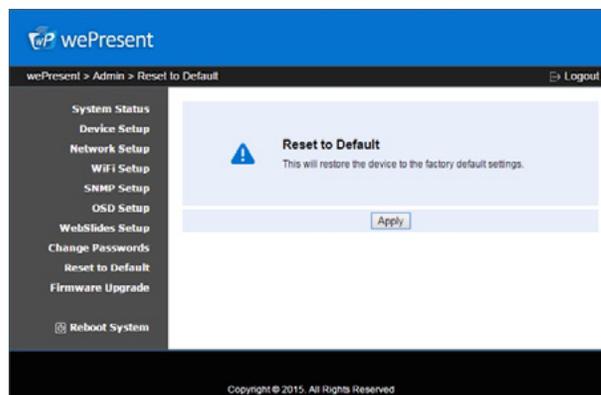

## 8.13 Firmware Upgrade

1. Click on "Firmware Upgrade" option to "import/export" system configuration and upgrade firmware.
2. System Configuration Import and Export:
  - **Export:** Export the system configuration to a configuration file
  - **Import:** Import the system configuration file to WiPG-2000
3. You can find the firmware version and release date here
4. Firmware Upgrade:
  1. Download current firmware file from [www.wepresentwifi.com/downloads.html](http://www.wepresentwifi.com/downloads.html)
  2. Click **<Browse>** to select the downloaded firmware file.
  3. Click **<Upgrade>** to start.
  4. A warning message and count down counter will appear on the screen.
  5. After a few minutes, a "complete" message will appear on the screen.
  6. Restart the wePresent WiPG-2000 to take effect.



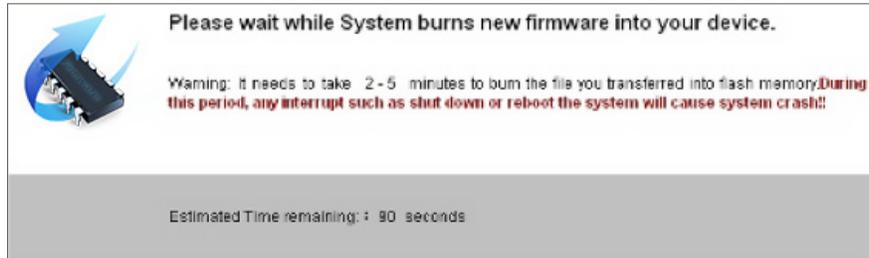

Please wait while System burns new firmware into your device.

Warning: It needs to take 2-5 minutes to burn the file you transferred into flash memory. During this period, any interrupt such as shut down or reboot the system will cause system crash!!

Estimated Time remaining: 90 seconds




**WARNING:** Do not power off the wePresent WiPG-2000 while firmware upgrade is in progress, otherwise the unit will be damaged and must be returned to the vendor for repair.

## 8.14 Reboot System

Click on "Reboot System" option and restart the system.

- Click on <Reboot >button: reboot system automatically.

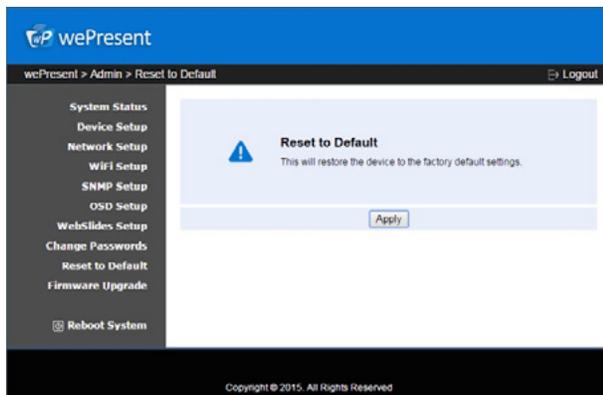

wePresent > Admin > Reset to Default Logout

System Status  
Device Setup  
Network Setup  
WiFi Setup  
SNMP Setup  
OSD Setup  
WebSlides Setup  
Change Passwords  
Reset to Default  
Firmware Upgrade  
Reboot System


**Reset to Default**  
This will restore the device to the factory default settings.

Apply

Copyright © 2015. All Rights Reserved


## 8.15 Logout

Click on “logout” on the upper right corner to logout of the administration webpage and return back to the web management front page.

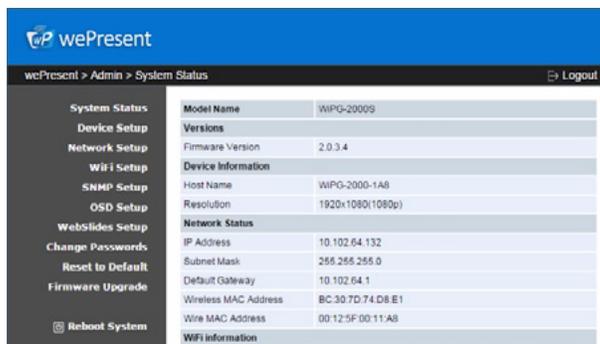


## 8.16 Webslides

1. Select the “WebSlides” button to enter the WebSlides page.
2. If presenter has enabled the webslides feature, their presentation will then appear in the browser.

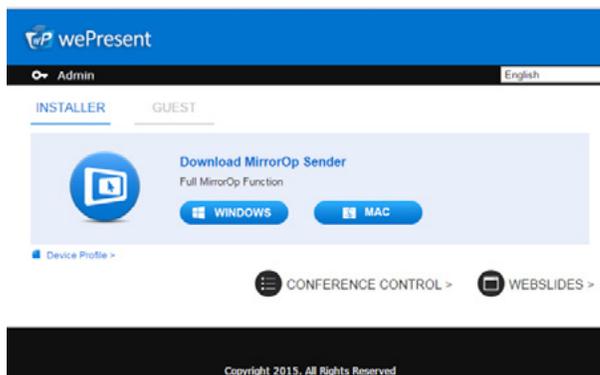


The USB Player can playback the files stored in the attached USB drive, it can support photo/video/music/office files.

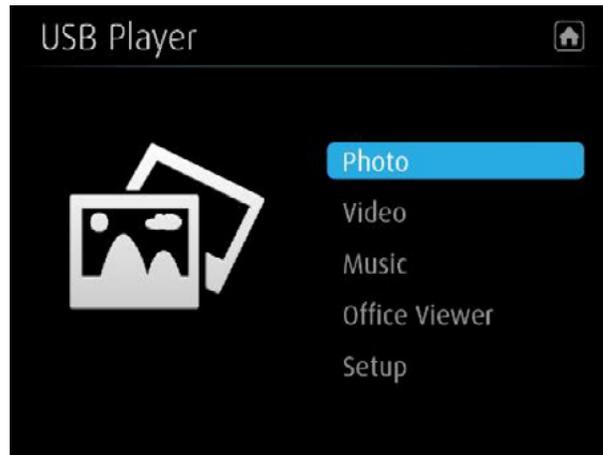

BUTTON	DESCRIPTION
	Switch to Projection mode
Photo	Enter photo viewer function
Video	Enter video player function
Music	Enter music player function
Office Viewer	Enter office viewer function
Setup	Enter Setup page

## 9.1 Photo Viewer



The USB Player can playback the files stored in the attached USB drive, it can support photo/video/music/office files.

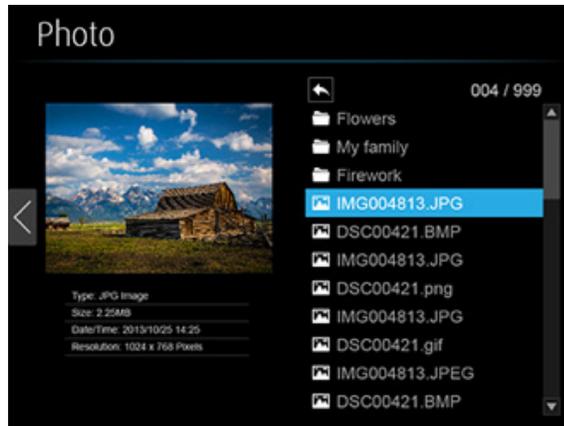

BUTTON	DESCRIPTION
	Exit this file
	Go to previous file
	Start/Pause Slideshow
	Go to next file
	Rotate

## 9.2 Video Player



Open the folder and find the video file to play on the local display.

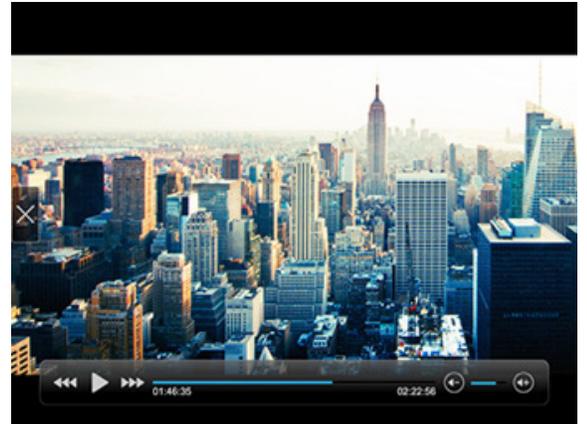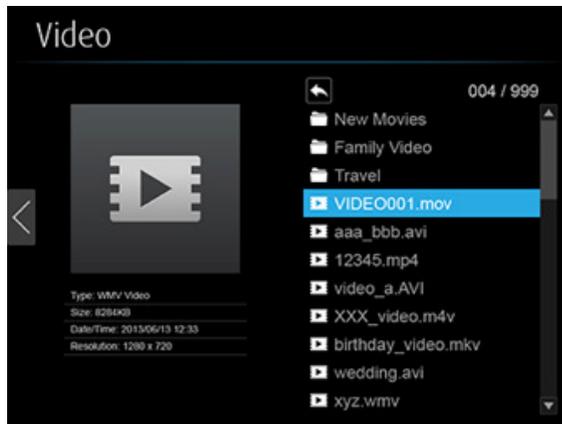

BUTTON	DESCRIPTION
	Exit this file
	Fast-rewind
	Play/pause
	Fast-forward (2x/4x/8x)
	Volume level increase/decrease

### 9.3 Music Player


Open the folder and find the music file to play on the local display.

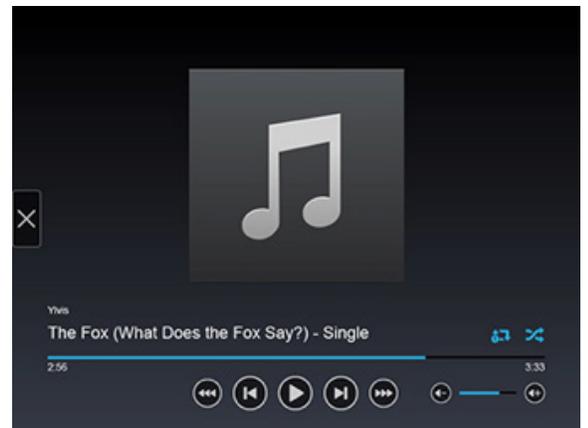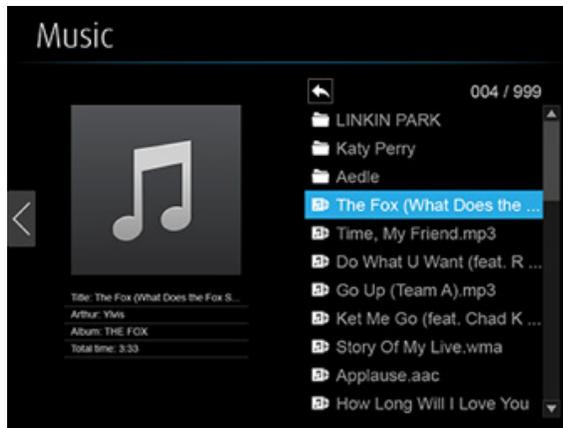

BUTTON	DESCRIPTION
	Exit this file
	Fast-rewind (2x/4x/8x)
	Go to previous file
	Play/pause
	Go to next file
	Fast-forward (2x/4x/8x)
	Volume level increase/decrease
	Repeat all files/repeat single file
	Shuffle


## 9.4 Office Viewer

Open the folder and find the document file to play on the local display.

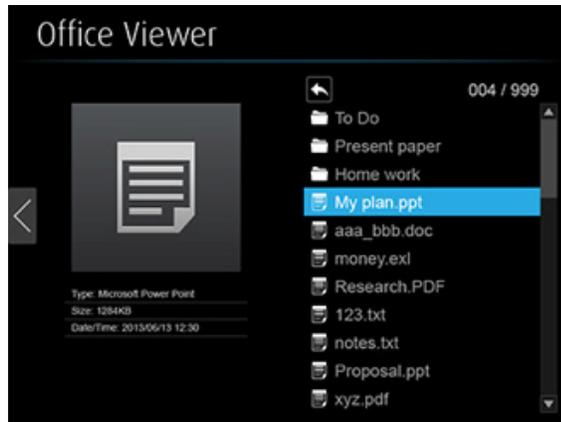

BUTTON	DESCRIPTION
	Exit this file
	Go to previous page
	Go to next page

## 9.5 Setup

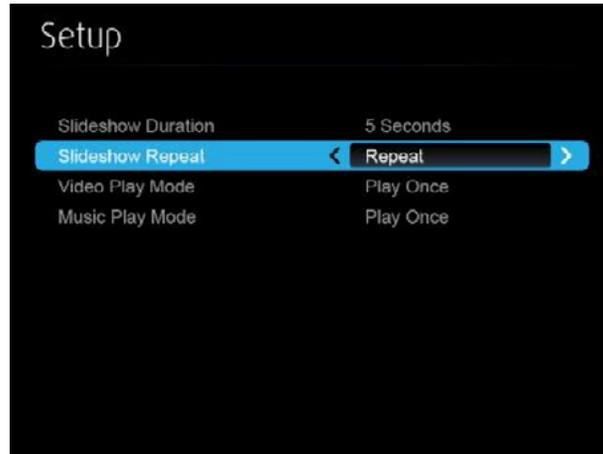

ITEMS	DESCRIPTION
Sideshow Duration	5/10/20/30 seconds
Slideshow Repeat	Repeat on/off
Video Play mode	Repeat on/off
Music play mode	Repeat single file, Repeat all files


ITEM	VALUE
Supported File Format	MPEG-1 / MPEG-2 / MPEG-2 TS / MPEG-4 / MWV9 / MOV / Motion JPEG / MKV / ASF / DVR-M5
Supported Video Codec	MPEG-1 / MPEG-2 / MPEG-2 TS / MPEG-4* / WMV9** / QuickTime / Motion JPEG * Microsoft MPEG-4 v1-3 is not supported ** Only WMV3/WVC1 is supported
Supported Audio Codec	LPCM / AAC / MP3 / WMA
Supported Office File	Word, Excel, PowerPoint(up to Office 2010), Pdf. Details: <a href="http://www.awindinc.com/WiFi-Doc/format.html">http://www.awindinc.com/WiFi-Doc/format.html</a>

\* All formats support up to 1920x1080, 30fps, and 20Mbps

\* These file formats might include video and audio codecs which are not supported

## 10 Wall Mount

1. Remove the rubber from the bottom side
2. Insert the mounting screw on wePresent device
3. Attach the mounting bracket on the wall with the screw

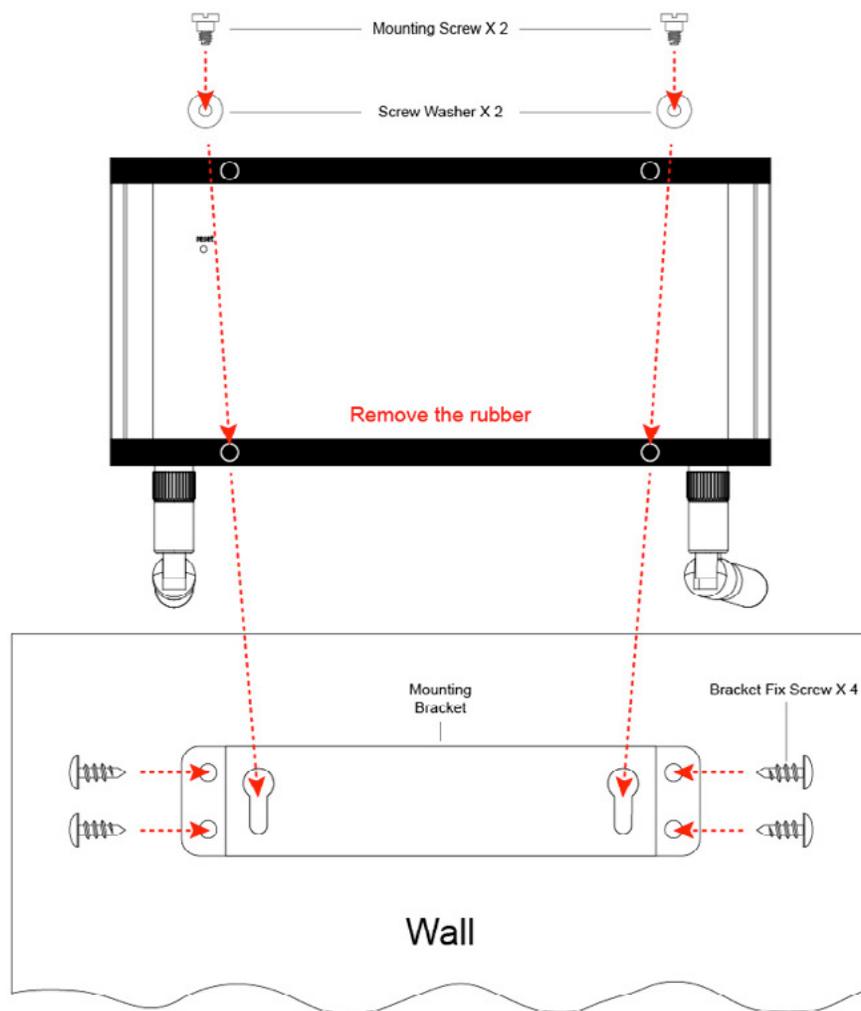

## FCC

### Federal Communications Commission (FCC) Statement 15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

#### 15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

**FCC RF Radiation Exposure Statement:**

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

**5150-5250MHz**

FCC RF Radiation Exposure Statement: This device is capable of operating in 802.11an mode. For 802.11an devices operating in the frequency range of 5.15 - 5.25 GHz, they are restricted for indoor operations to reduce any potential harmful interference for Mobile Satellite Services (MSS) in the US. WIFI Access Points that are capable of allowing your device to operate in 802.11an mode (5.15 - 5.25 GHz band) are optimized for indoor use only. If your WIFI network is capable of operating in this mode, please restrict your WIFI use indoors to not violate federal regulations to protect Mobile Satellite Services.

High-power radar is allocated as the primary user of the 5.25- to 5.35-GHz and 5.65- to 5.85-GHz bands.

These radar stations can cause interference with and/or damage to this device.