


DMX 512 + MIDI BEKABELING

DMX-KABEL 5-POL VOLLEDIG:

XLR 5-POL → XLR 5-POL


- PIN 1 → PIN 1: MASSA / SCHERM
- PIN 2 → PIN 2: DATA -1
- PIN 3 → PIN 3: DATA +1
- PIN 4 → PIN 4: DATA -2 (RETOURKANAAL)
- PIN 5 → PIN 5: DATA +2 (RETOURKANAAL)

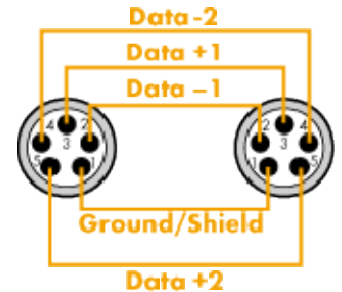

DMX-KABEL 5-POL GEDEELTELIJK:

XLR 5-POL → XLR 5-POL


- PIN 1 → PIN 1: MASSA / SCHERM
- PIN 2 → PIN 2: DATA-
- PIN 3 → PIN 3: DATA+
- PIN 4 → N.C.
- PIN 5 → N.C.

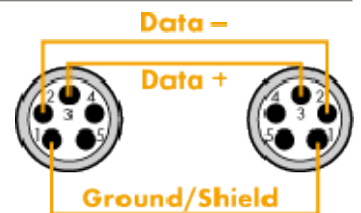

DMX-ADAPTERKABEL GEDEELTELIJK:

XLR 5-POL → XLR 3-POL


- PIN 1 → PIN 1: MASSA / SCHERM
- PIN 2 → PIN 2: DATA-
- PIN 3 → PIN 3: DATA+
- PIN 4 → N.C.
- PIN 5 → N.C.

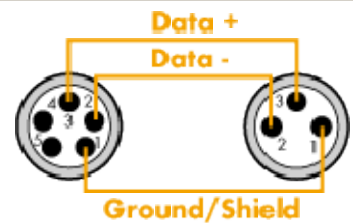

DMX-KABEL 3-POL GEDEELTELIJK:

XLR 3-POL → XLR 3-POL

- PIN 1 → PIN 1: MASSA / SCHERM
- PIN 2 → PIN 2: DATA-
- PIN 3 → PIN 3: DATA+

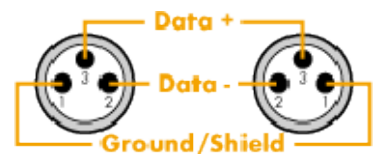

MIDI-KABEL

DIN 5-POL → DIN 5-POL

- PIN 1 → N.C.
- PIN 2 → MASSA / SCHERM
- PIN 3 → N.C.
- PIN 4 → DATA+
- PIN 5 → DATA-



AFSLUITWEERSTAND:

120 ohm tussen pin (2) DATA + en pin (3) DATA -