

BEAMZ MADE EAZY


150.622 V2


COB100W PAR QUICK START GUIDE

RIGGING

The unit may be set up on a stable and even surface. By means of the fixing facilities of the baseplate, the unit can also be mounted upside down to a truss, see below picture. For fixing, certified clamps with correct save working load are required. According to the figure, the quick lock bolts of the omega brackets are placed into the openings provided in the base plate and turned clockwise until they lock (to the stop). The mounting place must be of sufficient stability and be able to support a weight of 10 times of the unit's weight. Secure the unit with a safety cable so that it cannot fall down.


When carrying out any installation, always comply European and national guidelines concerning rigging, truss and all other safety issues. Always let the installation checked out by an authorized dealer!

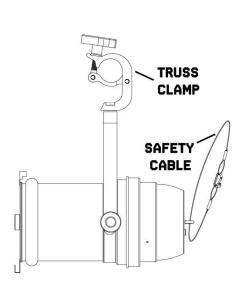

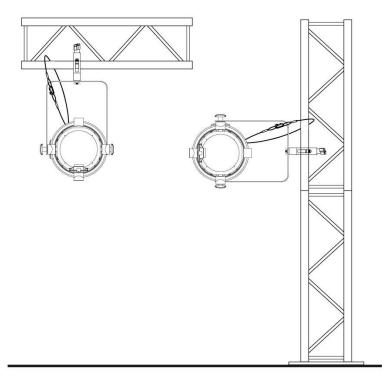


DMX512 CONTROL

If you are using a standard DMX controller, you can connect the DMX output of the controller directly to the DMX input of the first unit in a DMX chain. Always connect the output of one unit with the input of the next unit until all units are connected.

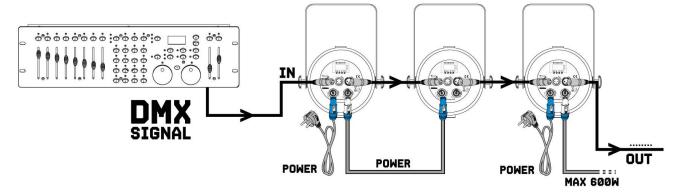



CAUTION! At the last unit, you must close the DMX line with a terminating resistor. Take an XLR connector and solder a 120 0hm resistor between signal (-) and signal (+) and connect it to the DMX output of the last unit in the line.





CONTROL MENU

MENU		DESCRIPTION	
DMX ADDR	A001-Axxx	DMX address setting	
CHMD	1 CH	1 Channels DMX mode	
	2 CH	2 Channels DMX mode	
COLO	White		
	Strobe		
MORS	Mast	Master function	
	Slave	Slave function	
DISP	Yes/No	Reverse display	
DIMM	1-4	Select dimming curve	
TEST		Test program	
TEMP		Show temperature	
VER		Software version	

DMX CHANNELS

1 CHANNEL

CHANNEL	FUNCTION	VALUE	DESCRIPTION	
1	Dimmer	000-255	Dimming 0-100%	

2 CHANNEL

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Dimmer	000-255	Dimming 0-100%
2	Strobe	000-009	No strobe
		010-255	Strobe from slow to fast
	<u> </u>		·



YOUR FUTURE YOUR SKILLS YOUR PLATFORM YOUR PARTY YOUR EUENT

≥beamZ

is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.