

ME-I/ME-IA (DCMI Accessories)





US Version

General Description

The ME-I input connector plate provides two balanced microphone inputs, and is useful in multi-purpose areas where mics are sometimes needed. The ME-I has adjustable mic level and EQ per input, and connects to one of the DCM-I's four dedicated Mic Inputs with single screened CAT-5 cable. The ME-I's two inputs are mixed together at the plate, and the summed mic signal applied to the DCM-I.

Any of the DCM-I's mic inputs can be routed to any zone without restriction. Inputs on the ME-I are via latching 3-pin female XLR connectors. 12v phantom power is available on either input if required (set via a jumper accessible from the rear plate).

Dimensional Drawings

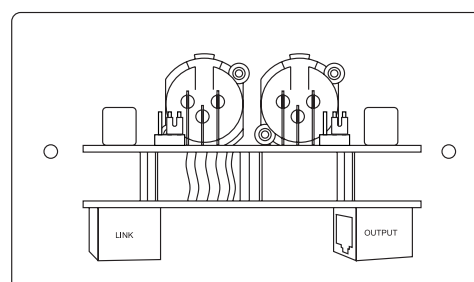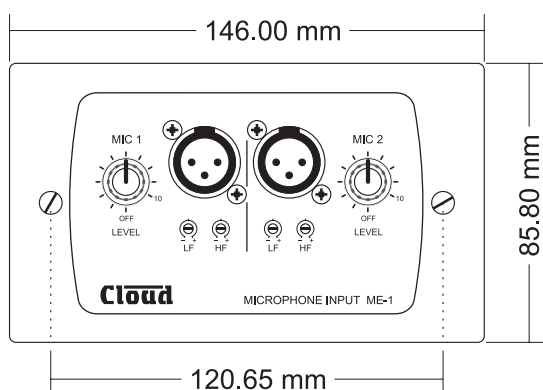

Graph

