

RC 8

RIGID AND COATED WEATHERPROOF LOUDSPEAKER

RC 8 is a weather-resistant outdoor loudspeaker with a durable, rigid enclosure and IP55-rated weather-proof coating, suitable for demanding environments such as stadiums, parking lots, pools, and outdoor public venues. It features an 8"/1" coaxial speaker capable of delivering high sound pressure levels with wide horizontal and vertical dispersion. The unit includes an internal 100V transformer and a passive crossover, making it ideal for public address and music applications in all-weather conditions.




Technical Specifications	RC 8
Rated power	180 W
Sensitivity	99 dB (1 W / 1 M)
Maximum SPL	126 dB
Impedance	8 Ω
Driver size	8" (203 mm) woofer, 1" (25 mm) tweeter
Crossover	Passive
Frequency response	75 Hz - 20 KHz
Transformer power taps	100 V: 120 W - 60 W - 30 W - 8 Ω 70 V: 120 W - 60 W - 30 W - 15 W - 8 Ω
Dispersion	110° (H) x 110° (V)
Protection	IP55
Dimensions	299 mm x 310 mm x 299 mm
Weight	11.5 kg
Material	Body: water-resistant polyvinyl board with texture coating Grill: steel, hydrophobically treated
Colour	Agate grey (RAL 7038)

RC 8




RIGID AND COATED WEATHERPROOF LOUDSPEAKER



Frequency response

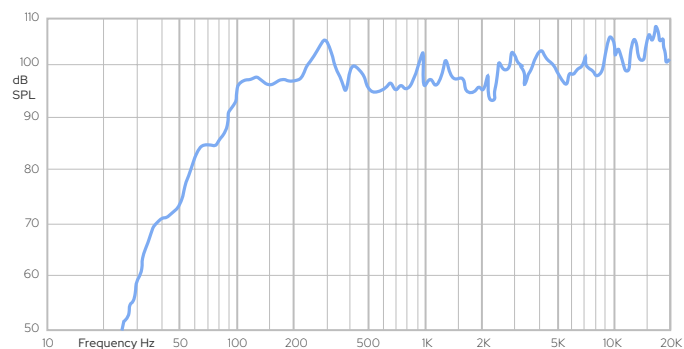

Horizontal/vertical polar diagrams

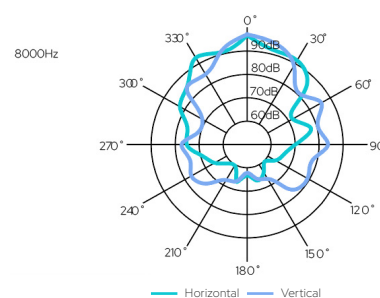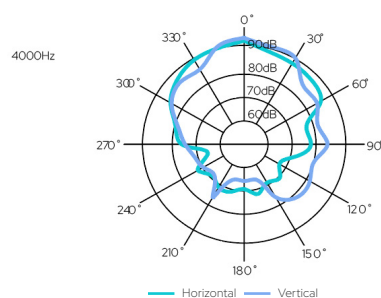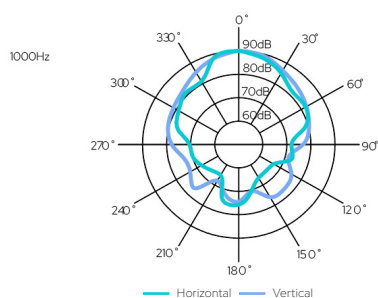

Dimensions

