

ShowTime SK10

full-range passive loudspeaker

Product Overview

ShowTime SK10 is a 10-inch full-range passive loudspeaker built for indoor entertainment venues where music needs impact and vocals need clarity, in a more compact form factor. Designed for bars, lounges, restaurants, private rooms, KTV/karaoke spaces, and small live-music applications, SK10 combines high-output performance with the practical details integrators need for everyday installations. A 10-inch woofer, Bose Professional EMB2S compression driver, and rear-ported design deliver punchy bass response, clear vocal presence, and smooth, balanced sound. Neutrik® speakON® input and loop-through connectors, M8 threaded inserts, rotatable 90° × 60° coverage, and an available pole-mount adapter or pan-and-tilt bracket support flexible system designs.



Key Features

High-output 10-inch performance delivers the power and impact needed for music-forward entertainment spaces in a compact form factor

Bose Professional EMB2S compression driver supports clear vocal presence and tonal consistency for music, live performance, announcements, and KTV/karaoke applications

Rear-ported enclosure design extends low-frequency response for punchy, balanced sound in indoor entertainment environments

90° × 60° rotatable coverage supports flexible horizontal or vertical placement to suit room layouts and system designs

Neutrik® speakON® input and loop-through connectors support secure amplifier connection and simple daisy-chaining across distributed loudspeaker systems

M8 threaded inserts and available pole-mount adapter or pan-and-tilt bracket give integrators options for permanent installation or flexible entertainment setups

Professional-grade materials and components support dependable performance in demanding commercial environments

Applications

Bars and lounges

Clubs

Restaurants

Private rooms

KTV and karaoke

Live music venues

DJ entertainment

Sports bars

Houses of worship

ShowTime SK10

full-range passive loudspeaker

Technical Specifications

SINGLE-LOUDSPEAKER PERFORMANCE	
System Type	Passive 2-way bass-reflex system, rear-ported
Frequency Response (-3 dB) ¹	85 Hz – 16,000 Hz
Frequency Range (-10 dB) ¹	50 Hz – 20,000 Hz
Nominal Coverage Pattern	90° horizontal × 60° vertical, rotatable
Audio Performance	
Power Handling, Long-term Continuous ²	500 W
Power Handling, Peak ²	2000 W
Sensitivity (SPL / 1 W @ 1 m) ³	96 dB
Calculated Maximum SPL @ 1 m, Continuous ⁴	123 dB
Calculated Maximum SPL @ 1 m, Peak	129 dB
Crossover	1.9 kHz, passive internal crossover
Loudspeaker EQ	None required. Bose Professional EQ preset available.
TRANSDUCERS	
Low Frequency	1 × 10-in (254 mm) ferrite woofer
High Frequency	1 × Bose Professional EMB2S titanium-diaphragm, neodymium compression driver with 2-in (51 mm) voice coil
Nominal Impedance	8 Ω
PHYSICAL	
Enclosure Material	15 mm plywood, hexagonal enclosure
Finish	Polyurethane coating
Grille	Perforated steel, powder-coated finish, black
Color	Black
Environmental	Indoors only
Connectors	(2) Neutrik® speakON® NL4MP
Suspension / Mounting	(3) M8 threaded inserts (bottom panel, for optional external pole mount adapter) (3) M8 threaded inserts (top panel, for eyebolt suspension) (4) M8 threaded inserts (side panel, for eyebolt suspension) (4) M8 threaded inserts (rear panel, for optional pan-and-tilt bracket)
Product Dimensions (height × width × depth)	533 mm × 300 mm × 380 mm (21.0 in × 11.8 in × 15.0 in)
Net Weight	18.7 kg (41.3 lb)
Shipping Weight	21.6 kg (47.6 lb)
Package Contents	(1) ShowTime SK10, (1) installation guide
Optional Accessories	AMUPOLEAT external pole adapter, UPTB50 pan-and-tilt bracket
PRODUCT CODES	
ShowTime SK10 loudspeaker	A02195-0100 SPKR,SHOWTIME SK10,BLK
AMUPOLEAT external pole adapter	893630-0100 KIT,AMU POLE CUP,BLK
UPTB50 pan-and-tilt bracket, black	A02221-0100 UPTB50,PAN&TILT WALL BRKT,BLK

Footnotes


1. Full space (4m) conditions.
2. Test using pink noise filtered to meet IEC 268-5, 6-dB crest factor, 500 W for 2 hours.
3. Sensitivity measured in anechoic environment with recommended loudspeaker processing.
4. Maximum SPL calculated using sensitivity and power ratings, exclusive of power compression.

For additional specifications and application information, visit BoseProfessional.com. Specifications are subject to change. 08/2026


ShowTime SK10

full-range passive loudspeaker

Frequency Response

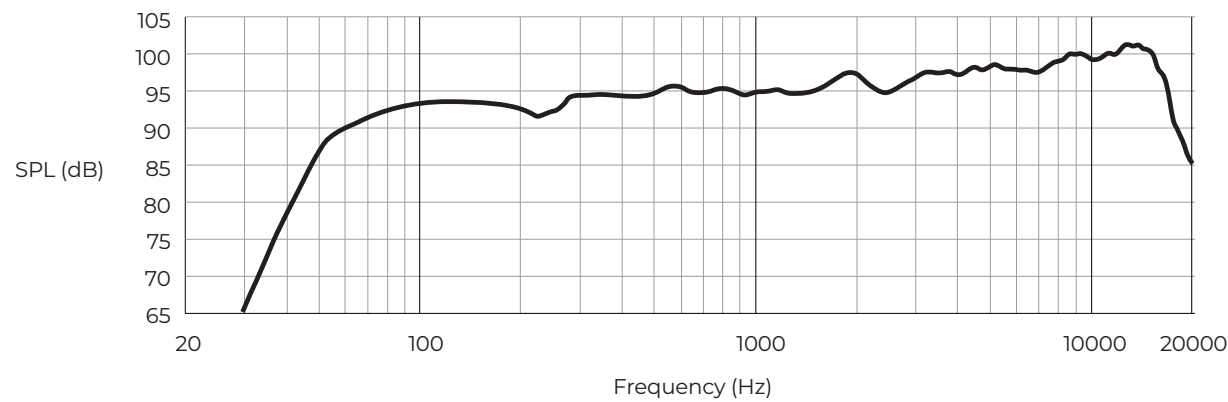


Beamwidth

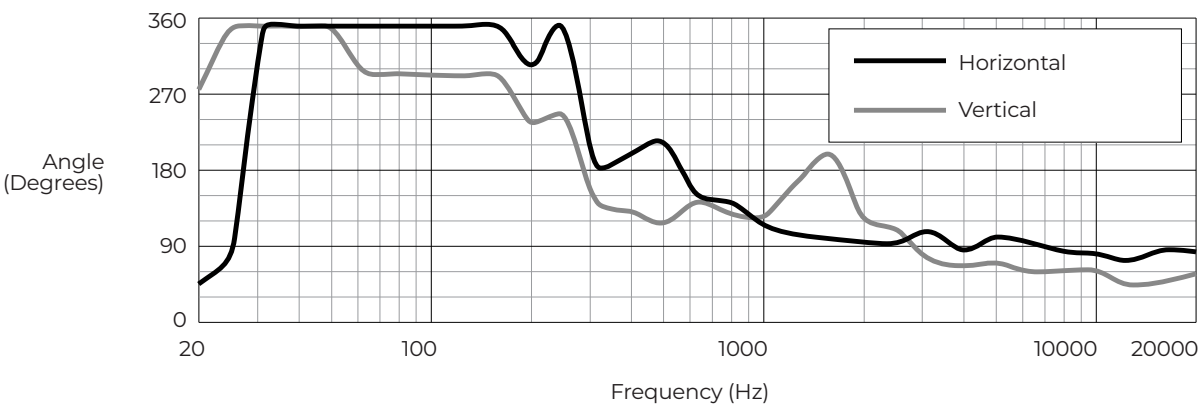


ShowTime SK10

full-range passive loudspeaker


Dimensions ⁵

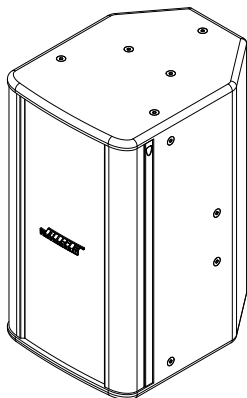


Right View ⁶

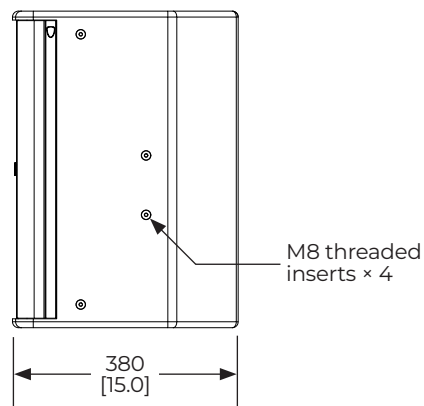


Front View

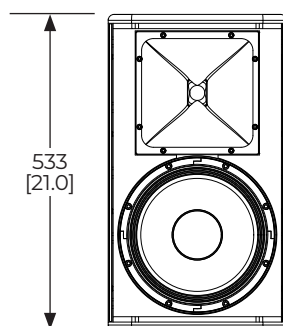


Rear View

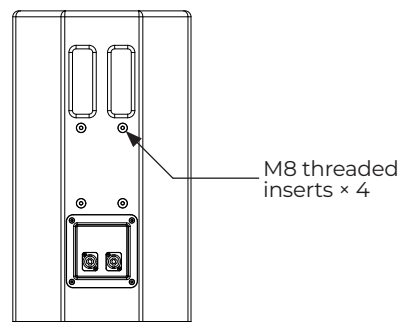

Bottom View

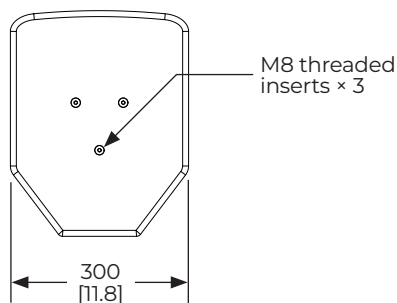

Top View

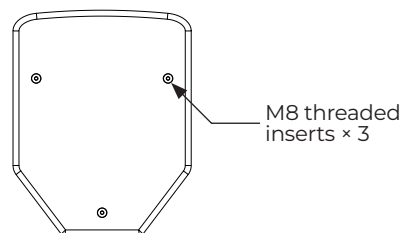

5. Dimensions are shown in millimeters over inches.

6. Dimensions also apply to opposite side.