

# ACT-24HC Rechargeable Handheld Transmitter

## Key Features

- Bright LEDs for battery status.
- Patented design of the integrated grille and battery housing makes it easy to unscrew the grille to open the battery compartment to exchange the lithium battery or simply charge the transmitter in the charger.
- The unique multi-layered metal grille protects the capsule against impact, rolling and pop noise and ensures sound clarity.
- Proprietary capsule suspension design eliminates vibrations and touch noises for a true natural sound reproduction.
- Interchangeable capsule module with premium condenser or dynamic options for easy and fast changeovers.
- World's first ACT™ function provides precise and rapid frequency sync to the receiver.
- Transmitter has high-efficiency circuitry design. The included single rechargeable lithium battery can be easily removed or interchanged for charging. The intelligent battery charger maintains a high charge capacity for up to 600 charge cycles for cost saving and is environmentally friendly.



## Microphone Capsules


<b>MU-39</b>	Dynamic Capsule
<b>MU-59</b>	Professional Dynamic Capsule
<b>MU-70</b>	Condenser Capsule
<b>MU-80</b>	Condenser Capsule
<b>MU-90</b>	Condenser Capsule

## Accessories

<b>MS-20</b>	Desktop Microphone Tripod
<b>MD-20</b>	Handheld Transmitter Microphone Holder
<b>MP-80</b>	3-in-1 Transmitter Charger Station
<b>SW-20</b>	Foam Windscreens
<b>TC-18</b>	Transmitter Shielding Case

## Technical Specifications

Frequency Range	2.4 - 2.4835 GHz
Channel Set-Up	ACT Sync
RF Output Power	2 mW / 10 mW switchable (country dependent)
Transmitting Mode	Frequency hopping
Max. Audio Input	6.5 dBV
Battery Meter	4-level green / red LED display
Battery Type	ICR 18500 rechargeable lithium battery × 1
Current Consumption	Approx. 138 mA
Operating Time	A 25-minute fast charge provides up to 1 hour operation. Minimum 10 hours of operation per 4-hour full charge (depending on the battery quality).
Dimensions (Ø × L)	50 × 248 mm / 2.0 × 9.8 "
Weight	Approx. 255 g / 9 oz, excluding batteries

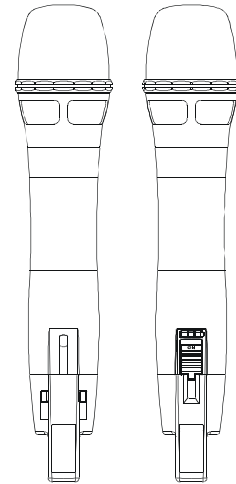

MIPRO Electronics Co., Ltd

Headquarters: 814 Pei-kang Road, Chiayi, 60096, Taiwan  
Tel: +886.5.238.0809 | Fax: +886.5.238.0803  
www.mipro.com.tw | mipro@mipro.com.tw

Specifications subject to change without notice. SS015/05