

# ACT-24TC Rechargeable Bodypack Transmitter


## Key Features

- Miniature, sturdy plastic compact design.
- 3 LEDs indicate battery status and turn to red to indicate low battery.
- Unique battery cover design provides easy access to operational controls and protects against accidental change of settings.
- LED in the mute/AF button is lit or off to indicate AF status.
- Connector for optional MJ-70 remote mute switch cable.
- One-touch ACT syncs the transmitter and receiver frequency automatically.
- Selectable impedance for microphone or guitar/line inputs.
- Mini-XLR input with secure screw lock connector for lavalier / headworn mics and guitar.
- Transmitter has high-efficiency circuitry design. The included single rechargeable lithium battery can be easily removed or interchanged for charging. The intelligent battery charger maintains a high charge capacity for up to 600 charge cycles for cost saving and is environmentally friendly.



## Microphone Capsules

<b>MU-13</b>	Single-sided Earworn Microphone (beige)
<b>MU-23</b>	Omni-directional Headworn Microphone (beige, fixed connector)
<b>MU-23d</b>	Omni-directional Headworn Microphone (beige, detachable cont)
<b>MU-210</b>	Uni-directional Headworn Microphone (beige, fixed connector)
<b>MU-210d</b>	Uni-directional Headworn Microphone (beige, detachable cont.)
<b>MU-53L   MU-53LS</b>	Uni-directional Lavalier Microphone (black   beige)
<b>MU-55L   MU-55LS</b>	Omni-directional Lavalier Microphone (black   beige)
<b>MU-53HN   MU-53HNS</b>	Uni-directional Headworn Microphone (black   beige)
<b>MU-55HN   MU-55HNS</b>	Omni-directional Headworn Microphone (black   beige)

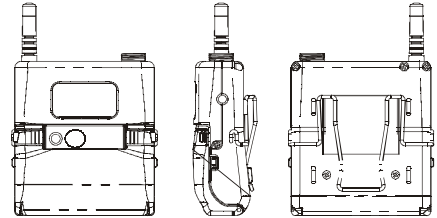

## Accessories

<b>ASP-30</b>	Neoprene Sports Pouch
<b>MJ-70</b>	Remote Mute Switch
<b>MU-40G</b>	Instrument Cable
<b>MP-20</b>	Battery Charger
<b>MP-80</b>	3-in-1 Transmitter Charging Station
<b>TC-18</b>	Transmitter Shielding Storage Case

## Technical Specifications

Frequency Range	2.4 - 2.4835 GHz
Channel Set-Up	ACT Sync
RF Output Power	2 mW / 10 mW switchable (country dependent)
Transmitting Mode	Frequency hopping
Max. Audio Input	6.5 dBV
Impedance	1.0M ?
Mute Connector	Optional MJ-70 remote mute switch
Battery Meter	4-level green / red LED display
Battery Type	1 ICR-18500 rechargeable lithium battery
Current Consumption	Approx. 138 mA
Operating Time	A 25-minute fast charge provides up to 1 hour operation. Minimum 10 hours of operation per 4-hour full charge (depending on the battery quality).
Dimensions (W x H x D)	63 x 70 x 25 mm / 2.5 x 2.8 x 1 "
Net Weight	Approx. 66 g / 2.3 oz



MIPRO Electronics Co., Ltd

Headquarters: 814 Pei-kang Road, Chiayi, 60096, Taiwan  
Tel: +886.5.238.0809 | Fax: +886.5.238.0803  
www.mipro.com.tw | mipro@mipro.com.tw