

BC-100DT Wireless Conference Microphone Base

Key Features



- The BC-T Series encloses the transmitter PCB for wireless transmission, and also retains the wired transmission circuit.
- Can be directly fitted with MIPRO MM-204 / 205 / 206 gooseneck microphones.
- For wired transmission, the output jack requires phantom power from the mixer.
- The operational controls are the same as the ACT-T Series bodypack transmitters.
- TALK / MUTE button provides easy speaking or mute option; a LED indicates status.
- Powered by an ICR 18500 rechargeable lithium battery, the BC-T Series has a built-in charging circuit for recharging the battery.

Microphones

MM-204	Gooseneck Microphone (385 mm / 15.1 ")
MM-205	Gooseneck Microphone (485 mm / 19.1 ")
MM-206	Gooseneck Microphone (585 mm / 23 ")

Technical Specifications

Built-in Transmitter	ACT-80TC (Digital)
Input Connector	4 pin XLR female
Output Connector	Balanced XLR male
Built-in Phantom Power	5 – 9 V DC
TALK / MUTE Button	Mechanical PUSH-HOLD switch, with a LED status indicator
Power Supply	One ICR 18500 rechargeable lithium battery and the charging circuit
Phantom Power	12 – 48 V DC phantom power is required (external cable)
Color	Black
Dimensions (W × H × D)	100 × 55 × 150 mm 4 × 2.2 × 6 "
Weight	Approx. 673 g 24 oz

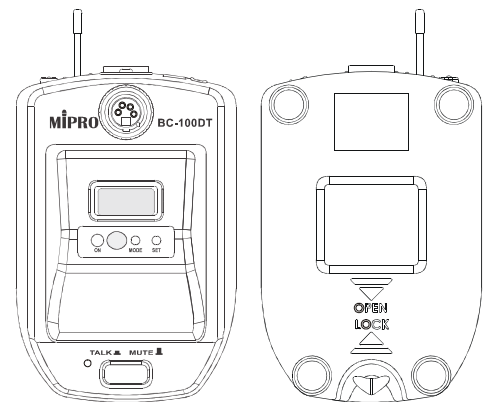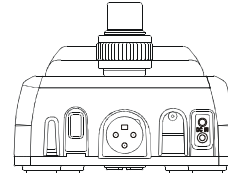

MIPRO Electronics Co., Ltd

Headquarters: 814 Pei-kang Road, Chiayi, 60096, Taiwan
Tel: +886.5.238.0809 | Fax: +886.5.238.0803
www.mipro.com.tw | mipro@mipro.com.tw