
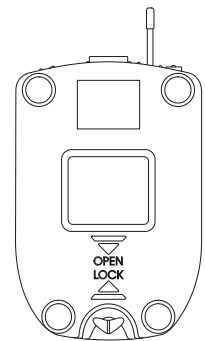
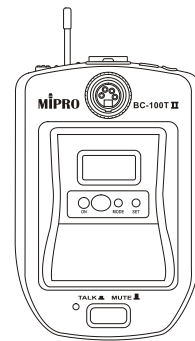


# BC-100T II UHF Wireless Conference Microphone Base

## Features

- BC-T Series encloses the transmitter PCB for wireless transmission and can also connect directly with MM-series 4-Pin gooseneck microphone for wired transmission.
- For wired transmission, the output jack requires phantom power from the mixer.
- For wireless transmission, the operational controls are the same as any ACT bodypack transmitter. A built-in ICR 18500 Li-ion battery can be charged by an external charger or simply replace with another spare battery.
- Feature a TALK / MUTE button. When pushing the button to talk, the green indicator on the base and LED ring indicator on MM-206L / 205L / 204L will light up indicating the system in the state of speaking. Push the button again to mute the system and all indicators are off.

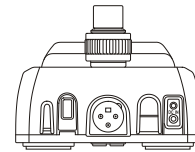

## Specifications

Built-in Transmitter	UHF Analog
Receiver	ACT-300 / 500 Series
Gooseneck Microphone	To use with MM-206L, MM-205L, MM-204L
Input Jack	4-Pin XLR female
Output Jack	Balanced XLR male
TALK / MUTE Button	Mechanical PUSH-HOLD switch, with a LED status indicator
Power Supply	One ICR 18500 Li-ion battery and the charging circuit
Phantom Power	DC 24 – 48 V phantom power is required (external cable)
Dimensions	100 × 78 × 150 mm (W × H × D)
Weight	Approx. 710 g
Note	Refer to the actual product in the event of product discrepancy