

## BC-100 Conference Microphone Base

### Key Features




- The BC-100 can be used as boundary microphone or connected with the gooseneck microphone to be a desktop conference microphone. Insert a MIPRO ACT Series bodypack transmitter into the BC-100 base as a wireless conference microphone.
- The back panel has a balanced XLR connector with a switch to select the audio source from either the inner boundary microphone or the optional gooseneck microphone.
- The housing is made of metal with a thicker bottom and anti-slip pad to give added stability.
- TALK / MUTE button provides easy speaking or mute option; a LED indicates status.

### Transmitters & Microphones

<b>ACT-T Series</b>	Bodypack Transmitters
<b>ACT-TC Series</b>	Bodypack Transmitters
<b>MM-204</b>	Gooseneck Microphone (385 mm / 15.1")
<b>MM-205</b>	Gooseneck Microphone (485 mm / 19.1")
<b>MM-206</b>	Gooseneck Microphone (585 mm / 23")

### Technical Specifications

Built-in Boundary Microphone	10 mm cardioid condenser microphone
Input Connector	4-pin XLR female
Output Connector	Balanced XLR male
TALK / MUTE Button	Mechanical PUSH-HOLD switch, with LED status indicator
Power Supply	12 – 48 V DC phantom power is required (external cable)
Color	Black
Dimensions (W×H×D)	100 × 58 × 150 mm / 4 × 2.3 × 6"
Weight	Approx. 618 g / 22 oz

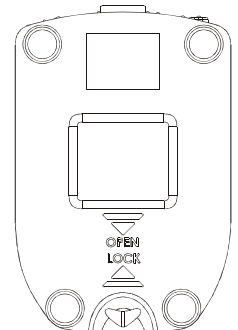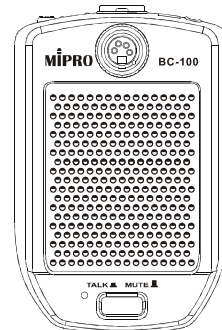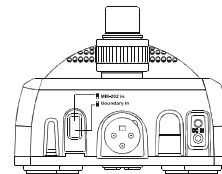

### MIPRO Electronics Co., Ltd

Headquarters: 814 Pei-kang Road, Chiayi, 60096, Taiwan  
Tel: +886.5.238.0809 | Fax: +886.5.238.0803  
www.mipro.com.tw | mipro@mipro.com.tw