
## **BC-100 II Boundary Microphone Base**

## **Features**

- BC-100 II has a built-in high-sensitivity condenser microphone capsule module that can be independently used as a boundary microphone.
- BC-100 II can connect with MM-series 4-Pin gooseneck microphone as a wired conference microphone.
- Accepts MIPRO ACT-TC series bodypack transmitter as a wireless conference microphone. It can be charged using the included adaptor, no need to remove the transmitter.
- A balanced XLR connector for any mixer supplying phantom power and a switch to select the audio source from either the inner boundary microphone or the optional gooseneck microphone.
- Press the button to TALK position, the green indicator on the base and LED ring indicator on the MM-206L / 205L / 204L will light up. Press it again to MUTE position, all indicators will turn off.
- The metal cover is equipped with anti-slip pads, ensuring the stability.



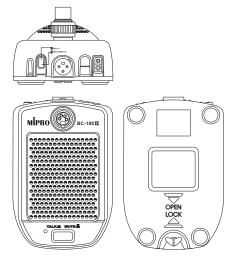

## **Specifications**

Boundary Microphone	10 mm cardioid condenser microphone capsule module
Output Jack	3-Pin XLR
Input Jack	MIPRO 4-Pin XLR, compatible with MM-206L / MM-205L / MM-204L gooseneck
	microphone
Control Button	TALK / MUTE button with LED indicator
Expansion Function	Insert an ACT-TC series bodypack transmitter for wireless transmission
Power Supply	Wired: DC 24 – 48 V phantom power
	Wireless: one 18500 Li-ion battery
Charging Voltage	DC 5 V / 1 A
Color	Black
Dimensions	100 × 78 × 150 mm (W × H × D)
Weight	Approx. 620 g

