




BC-UNIKAT

CAT6A U/FTP Video & LAN Cable – Low Smoke & Halogen Free

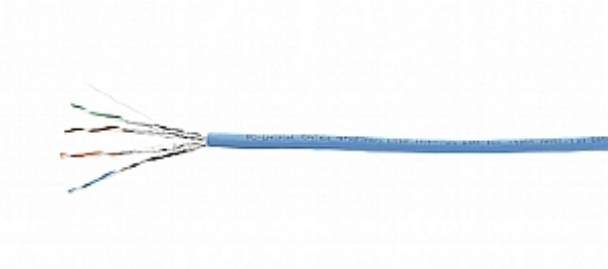

The Kramer UNIKat cable is a unified CAT6A cable that handles all the latest technology signals. Over four individually screened twisted pairs, this U/FTP CAT6A cable runs Kramer's DGKat™ technology, 4K UHD HDBaseT™ technology or LAN applications and ensures optimum signal performance.

FEATURES

- **Quality Construction** - 4 shielded twisted pairs (U/FTP) of 23AWG solid copper conductors are cabled together in an unshielded outer jacket.
- **Optimized for Kramer Hardware** - Use with any of Kramer's wide range of twisted pair digital transmitter-receiver sets. Terminate with shielded transmitter-receiver sets (DGKat™ and HDBaseT) and shielded RJ-45 connectors.
- **HDBaseT Recommended** - www.hdbaset.org/hdbaset-recommended-cables/
- **RJ-45 Connector** - The larger diameter 23AWG twisted pair cable requires a special RJ-45 connector. Use the K-LAN **CON-RJ45-3**.
- **Length** - Available in reel boxes of 100m (328ft) & wooden drums of 305/500m (1000/1640ft).