


MY206

Professional Microphone Cables

- ultra-low capacitance (60 pF/m)
- extremely flexible

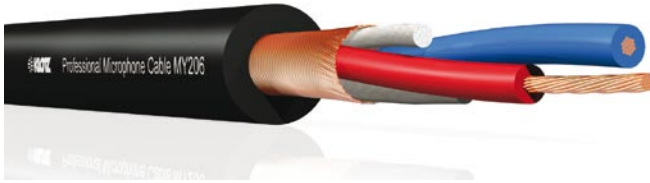

In developing this cable Klotz has paid special attention to the high demands of everyday use on stage and in the studio. A special rubber-like PVC material ensures flexibility at extreme temperatures (out-door recordings), additional cotton padding keeps the capacitance constant and avoids handling noise. Finally a particularly dense spiral shield provides maximum shielding even under large mechanical loads.

Dieses Kabel wurde in Hinblick auf die hohen Anforderungen im täglichen Bühnen- oder Studiobetrieb entwickelt. Ein gummiartiger Mantel aus speziellem PVC garantiert Flexibilität auch bei extremer Temperatur, zusätzliche Baumwollfäden halten die Kapazität unter wechselnden Belastungen konstant und vermeiden Störgeräusche. Ein besonders dichter Wendelschirm sorgt zudem für einen hohen Grad an Abschirmung.

	Conductor	stranded bare copper, 28 x 0.10 mm
	Cross Section	0.22 mm ²
	Insulation	PE
	Core Arrangement	2 cores + cotton tracers, twisted
	Shielding	bare copper spiral shield
	Outer Jacket	PVC, matt
	Overall Diameter	6.15 mm
	Min. Bending Radius	30 mm
	Working Temperature	-20 °C / +70 °C
	Conductor Resistance	< 85 Ω/km
	Capacitance	
	Cond./Cond.	60 pF/m
	Cond./Shield	110 pF/m
	Insulation Resistance	> 100 MΩ x km

	Leiteraufbau	blanke Cu-Litze, 28 x 0,10 mm
	Leiterquerschnitt	0.22 mm ²
	Isolation	PE
	Aderanordnung	2 Adern + Baumwollfäden verseilt
	Abschirmung	blanker Cu-Wendelschirm
	Außenmantel	PVC, matt
	Außendurchmesser	6,15 mm
	Min. Biegeradius	30 mm
	Betriebstemperatur	-20 °C / +70 °C
	Leiterwiderstand	< 85 Ω/km
	Kapazität	
	Ader/Ader	60 pF/m
	Ader/Schirm	110 pF/m
	Isolationswiderstand	> 100 MΩ x km

■ SW [black]

■ BL [blue]

■ RT [red]

■ GE [yellow]

■ GN [green]

■ GR [grey]

Order Code Bestell-Nr.	Colour Farbe	Weight Gewicht	Standard Length [m] Standard Längen [m]	Max. Length / Reel Max. Länge / Spule
MY206SV	black	45 g/m	100 / 500	3000 m
MY206BL	blue	45 g/m	100 / 500	3000 m
MY206RT	red	45 g/m	100 / 500	3000 m
MY206GE	yellow	45 g/m	100 / 500	3000 m
MY206GN	green	45 g/m	100 / 500	3000 m
MY206GR	grey	45 g/m	100 / 500	3000 m