


MA-707 Portable Sound System


Portable Public Address Solutions



MU-13

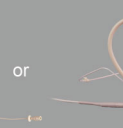

MU-23

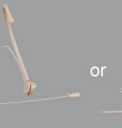

MU-210



MU-53L

Key Features

- Powerful 100 watts for speech and high quality music outdoors or indoors.
- Full-range high efficiency 8" loudspeaker.
- Retractable handle and sturdy wheels ensure portability over any distance.
- Suitable for tripod, floor or desk mount.
- Rechargeable built-in batteries provides up to 8 hours continuous use per charge.
- Built-in storage compartment for transmitters/ microphones.
- Accepts up to 2 wireless mic systems.
- Optional CD/USB player with remote control.
- Two corded mic inputs (XLR & jack).
- Line input for external iPod / MP3 / CD player; output for external recordings.
- Robust, heavy duty housing.
- 100-240V AC auto-switching power supply.
- Optional extension speaker.
- Hand-carry, table-top or integrated tripod stand mounting capability.
- For crowds up to 700.

Ideal applications include

- Seminars, conferences and trade shows.
- Schools & Hotels.
- Aerobics.
- Parades and fetes.
- Shopping centre presentations and promotions.
- Sporting functions.
- Church services, weddings and funerals.

Special Benefits for Teaching/Presenting Professionals:

- Reduces vocal fatigues and sore throats.
- Amplified sound increases attention span and improve comprehension.
- Simple to use!



CD/USB Player Module

- Select and search
- Tracks programmable
- Random & repeat playback
- USB port
- CD remote control included
- A>B zone memory programmable
- Plays standard 12cm(5-inch) audio CD



CDM-2P

16-channel Diversity Receiver Module

- Industry easiest channel set-up via AutoScan and ACT
- Detects and manages noise interference
- Long and reliable transmission




MRM-70

Accepts External iPod & other MP3 Players



Plug-in to Line-in of MA-707

Model shown with accessories

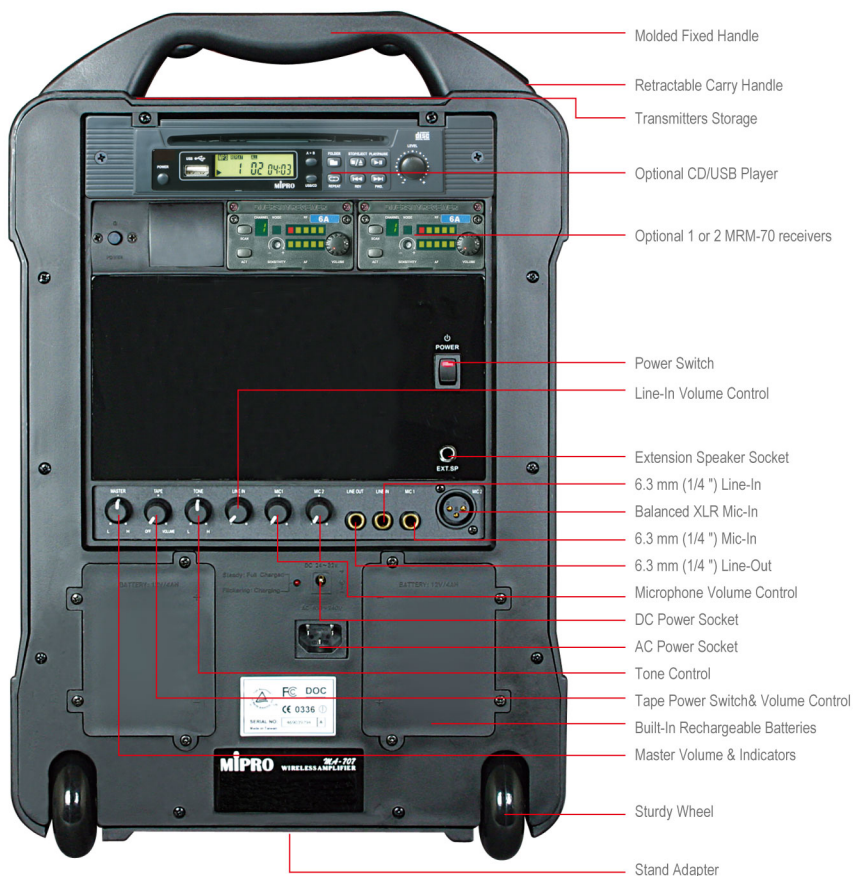

Molded Fixed Handle

Retractable Carry Handle

Transmitters Storage

Optional CD/USB Player

Optional 1 or 2 MRM-70 receivers

Power Switch

Line-In Volume Control

Extension Speaker Socket

6.3 mm (1/4 ") Line-In

Balanced XLR Mic-In

6.3 mm (1/4 ") Mic-In

6.3 mm (1/4 ") Line-Out

Microphone Volume Control

DC Power Socket

AC Power Socket

Tone Control

Tape Power Switch & Volume Control

Built-In Rechargeable Batteries

Master Volume & Indicators

Sturdy Wheel

Stand Adapter

Specifications

Portable PA	
Power Output / Amplifier	100W (Max), Class AB
T.H.D.	< 1%
Frequency Response	50 Hz~18 kHz
Loudspeaker	8 " full-range
Audio Inputs	Wired XLR × 1 & 6.3mm (1/4 ") × 1
	Wireless Up to 2 wireless microphones
	CD Player CD, USB port
	Line-In Unbalanced 6.3mm (1/4 ") jack
Audio Output	Unbalanced Line 6.3mm (1/4 ") jack
Extension Speaker	6.3 mm (1/4 ") Phone jack
Volume	Master and other individual controls
Controls	Tone Control on wireless mics
Storage	2 handheld or bodypack transmitters
Installation	Speaker stand, flat surface or retractable handle & wheels
Power Supply	AC Built-in 100~240V AC switching power supply
	DC & Battery 24~32 DC, 12V/4.5AH rechargeable gel cell battery

Charge Time	Up to 8 hours (automatic charging management)
Standby Time	Up to 8 hours
Battery Indicator	Single LED indicator
Dimensions (W × H × D)	310 × 445 × 240 mm (12.2 × 17.5 × 9.4 ")
Weight	Approx. 14.8 kg (32.5 lbs), loaded
Wireless System (optional)	
Receiver	MRM-70
Max. Receiver	Up to 2
Transmitter / Microphone	ACT-30H Handheld / ACT-30T Bodypack MM-107 Wired Dynamic Microphone
Installation	Plug-in Module
Antenna	Built-in
Audio Player (optional)	
Model	CDM-2P
Installation	Plug-in Module
Patents & Approvals	Patented. Telecom and safety regulations approved.
Notes	Refer to actual product in the event of product discrepancy. Frequency range and maximum deviation comply with the regulations of different countries.

