

MTG-100Ta Digital Portable Transmitter

Introduction

MTG-100 is an innovative digital wireless tour guide & language interpretation systems.

It is ultra compact, lightweight and easy to use. Digital design provides crystal-clear audio quality, secured and reliable transmission, and insensitive to interference attributes that are unmatched by the deficiency of simple analog design systems.

It operates in the license-free 865 & 928 MHz ISM band. ISM band requires no user licensing; thus, no worries about changing groups and channels when operating in multiple countries. Each band is preset with 16 switchable frequencies and ensures several different tours or groups can be operated at the same venue without interfering with each other.

Disposable battery system comprises of MTG-100Ra receiver and MTG-100Ta, MTG-100Ha transmitters. 2 AA batteries are used for convenient personal usage.

This system is ideal for small to large, indoor or outdoor applications for guides, interpreters or presenters to communicate effectively to a group of people, rejecting irritating surrounding noise.



Key Features

- AA batteries for personal convenient use. Easy to carry and replace.
- PC controllable Channel-Lock to prevent accidental change.
- Ethernet interface allows system setting and management.
- Operates on user license-free ISM bands: EU 863 – 865 MHz and USA 926 – 928 MHz.
- Up to 100 m (330 ft) line-of-sight reception range.
- Interference-free from Bluetooth, Wi-Fi and 2.4 GHz wireless transmission.
- Digital technology enables secure audio transmission, preventing unauthorized listening.
- Digital technology ensures crystal-clear audio quality and listeners have the best tour experience.
- Industry's only true diversity technology for exceptional reception quality.
- Durable, ultra-lightweight and pocket-sized portable receiver and transmitter. Incredibly easy to set-up and use.
- Industry's only auto shut-off timer for saving power consumption to extend the operation time.
- Backlit LCD screen displays all relevant parameters.

Receivers


MTG-100Ra	Digital Portable Transmitter
-----------	------------------------------

Accessories

MM-10	Mini-gooseneck Microphone
MM-202P	Mini-gooseneck Microphone
MU-101P	Headworn Microphone
MU-23P	Headworn Microphone
MU-53HNP	Headworn Microphone

Technical Specifications

Frequency Range	CEPT/EU: 863 – 865 MHz USA: 926 – 928 MHz
Modulation	Digital modulation
Preset Channels	16
Switching Bandwidth	2 MHz
Channel Grid	125 kHz
RF Output Power	<10 mW (Low/Mid/High, switchable)
Operating Range	Up to 100 meters 330 feet (line-of-sight)
Frequency Response	50 Hz – 10 kHz
Power Supply	2 AA alkaline
Operating Time	> 12 hours
Automatic Shut-off Time	6 hours
Dimensions (W × H × D)	45 × 84 × 28 mm / 1.8 × 3.3 × 1.1 "
Weight	Approx. 48 g / 1.7 oz (excluding AA batteries)

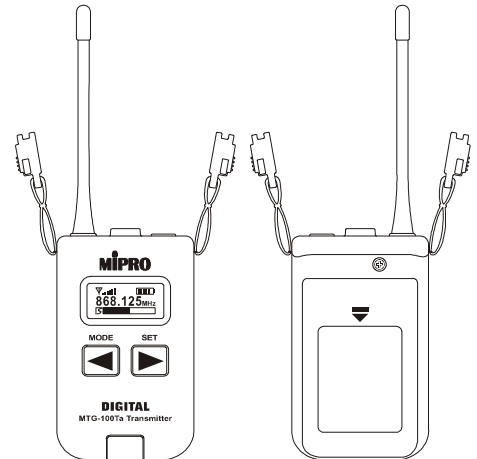

MIPRO Electronics Co., Ltd

Headquarters: 814 Pei-kang Road, Chiayi, 60096, Taiwan
Tel: +886.5.238.0809 | Fax: +886.5.238.0803
www.mipro.com.tw | mipro@mipro.com.tw