

ST-24 Digital Wireless Saxophone Set

Introduction

The ST-24 digital wireless saxophone transmitter is a SM-24 integrated with a MT-24 digital transmitter for wireless transmission to the ACT-2400 Series receivers or a MRM-24 receiver module hooked up to a portable PA. Simply clamp the ST-24 transmitter module snugly with SH-32 clip to a saxophone or other wind instrument. The compact, lightweight ST-24 is easy to install and remove. Strategically placed in flexible positions, it will not interfere during performances.

Microphone Modules


MU-10	Ø 10 mm Cardioid Capsule Module
MU-16	Ø 16 mm Semi-supercardioid Capsule Module
MU-20	Ø 20 mm Supercardioid Capsule Module

Accessories

MP-20	Battery Charger
MP-24	One-slot Charging Station
MP-80	3-in-1 Transmitter Charger Station
MPA-24	Charger Adaptor
SH-32	Saxophone Microphone Clip

Technical Specifications

Frequency Range	2.4 GHz - ISM
Bandwidth	83 MHz
Oscillation Mode	PLL Synthesized
Channel Set-up	ACT Sync
RF Output Power	2 mW / 10 mW switchable (country dependent)
Battery Type	ICR 18500 rechargeable lithium battery
Operating Time	A 25-minute fast charge provides up to 1 hour operation. Minimum 10 hours of operation per 4-hour full charge (depending on the battery quality).
Dimensions (W × H × D)	68 × 287 × 47 mm / 2.7 × 11.3 × 1.9 "
Weight	Approx. 104 g / 3.7 oz, excluding battery and microphone modules

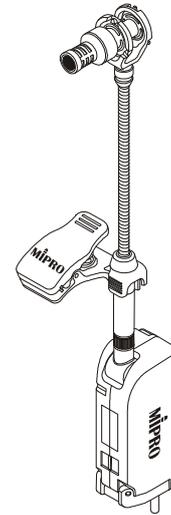

MIPRO Electronics Co., Ltd

Headquarters: 814 Pei-kang Road, Chiayi, 60096, Taiwan
Tel: +886.5.238.0809 | Fax: +886.5.238.0803
www.mipro.com.tw | mipro@mipro.com.tw