

Style in your place

WorkPRO presents a new ceiling speaker, a characteristic pendant speaker designed with style and made for reproduce high fidelity perfomance and deep bass thanks to its coaxial transducer.

WPS 310 provides a clarity sound even under high power, bringing the necessary power for every application as restaurants, lounges, rooms or bars.

APPLICATIONS

- ► Airports, bars and restaurants
- Exhibit halls and convention centers
- ► Retail enviroments and shopping malls
- ► Corporate meeting rooms and worship
- ► Health and fitness clubs
- ► Casinos, hotels and ballrooms

FEATURES

- ► Terminal weather boot
- Stylish pendant design
- ► High intelligibility and uniform coverage
- Coaxial speaker with HF compression drivers
- Integrated up cover hiding wires and hanger
- ▶ 8 Ohm or 100V Line operation

Pendant Mount LoudSpeaker System Full-Range, Two-Way, 10"

The WPS 310 includes a single-point mounting system for easy and secure suspension in ceiling aplications.

Also is possible mount it with the PBU 31 handle that allows inclinate it in any position to get installed everywhere.



PBU 31

WORK

PBU 31 is the aditional handle of the WPS 310. It incorporates a screw to fix the speaker in any position.



WPS 310

The WPS 310 provides the necessary cables to be connected to any installation, even 100V line. Its design, the materials and componentes offer high quality sound, power and directivity of the waves as shown in the frecuency polar pattern.

Technical Data:

Transducer:

Frequency response:

Sensitivity:

Nominal impedance:

Power:

Nominal Beamwidth:

Dimensions:

Weight:

10" Woofer + 1" C. Driver 70Hz - 19 kHz (-10dB) 95 dB (1W/1m)


8 Ohms


250 W AES / 50W (100V)


90° (500Hz - 4 kHz) @ -6 dB


Ø 386 x 413 mm

9.2 Kg

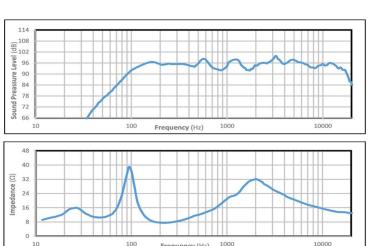

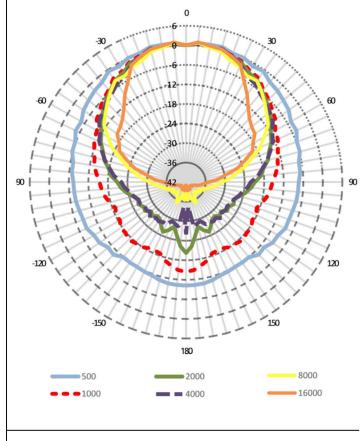

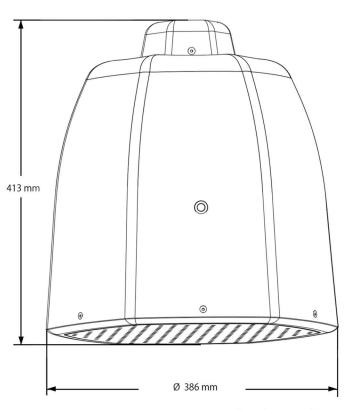

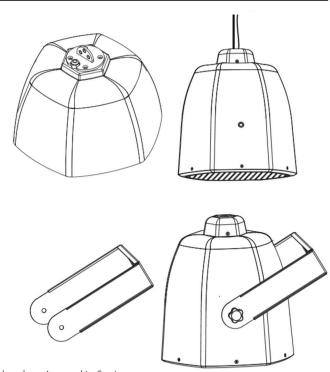

All WorkPRO products are designed and engineered in Spain