




RF H6B Horizontal Mounting Bracket

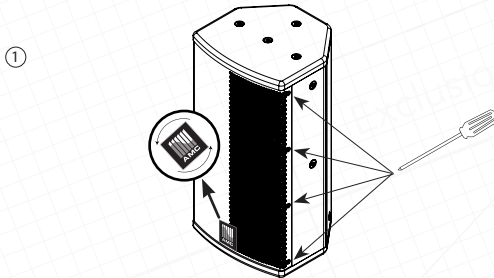


When mounting RF 6 horizontally, AMC logo and horn (tweeter) can be rotated sideways. Unscrew loudspeaker grill and loosen the screw holding the logo plate. Unscrew the horn to rotate it.

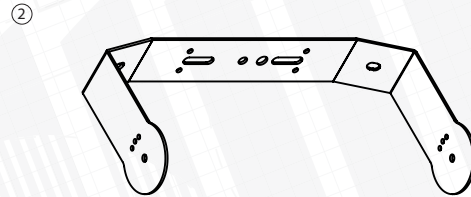

Attach mounting bracket to the surface. Please leave required space from all sides for cables and loudspeaker angle adjustment.

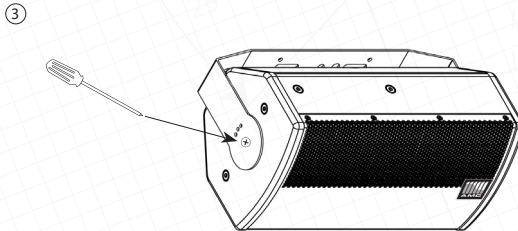

Place loudspeaker into the bracket and tighten the screws on both sides. Plug audio cables and make final angle loudspeaker adjustments.

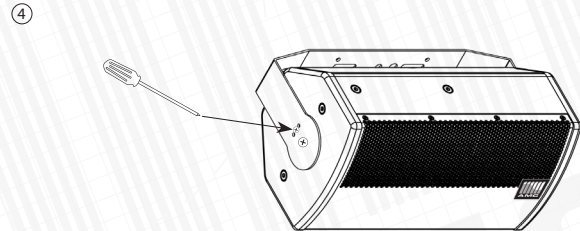

Fix loudspeaker angle with self-driving screws on both sides of the bracket. It is necessary to use these screws to keep loudspeaker from shifting angle due to weight and vibration.

Please pay attention: Mount loudspeaker on the reliable base only.