


# MANUAL



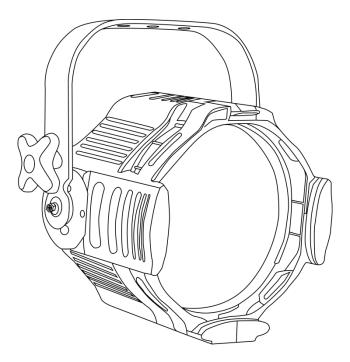

# Studio Beam 575

## Table of contents

| Warning                                      | 2  |
|--|----|
| Safety Instructions                          |    |
| Operating Determinations                     | 4  |
| Rigging                                      |    |
| Connection with the mains                    |    |
| Return Procedure                             |    |
| Claims                                       |    |
|  |    |
| Description of the device                    | 7  |
| Optional accessories                         | 7  |
| Overview                                     | 7  |
| Lamp housing                                 |    |
|  |    |
| Installation                                 |    |
| Installing the Lamp                          |    |
| Set Up and Operation                         |    |
| Filter frame retaining clip                  |    |
| Included lenses                              |    |
| Changing the lens                            |    |
| Removing the lens                            |    |
|  |    |
| Maintenance                                  |    |
| Changing the Lamp                            |    |
| Cleaning VNSP, NSP, MFL and WFL glass lenses | 12 |
| Troubleshooting                              |    |
| No Light                                     |    |
| 5  |    |
| Product Specifications                       | 13 |
| Dimensions                                   | 14 |
|  |    |



## Warning



For your own safety, please read this user manual carefully before your initial start-up!



## **Unpacking Instructions**

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear to be damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that the fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

## Your shipment includes:

- Showtec Studio Beam 575 with 0,9m power cable
- 1x Filter frame
- 4 lenses: VNSP/NSP/MFL/WFL
- User manual



| 0            | 0 |
|--------------|---|
| $\backslash$ |   |



CAUTION! Keep this device away from rain and moisture! Unplug mains lead before opening the housing!

## Safety Instructions

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



CAUTION! Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!



Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.



## **IMPORTANT:**

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power cord come into contact with other cables! Handle the power cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never lift the fixture holding it by the projector-head, as the mechanics may be damaged. Always hold the fixture by the transport handles.
- Never place any material over the lens.
- Never look directly into the light source.
- Never leave any cables lying around.
- Do not insert objects into air vents.
- Do not switch the device on and off in short intervals, as this would reduce the device's lifespan.
- Do not touch the device's housing bare-handed during its operation. Allow the fixture to cool for at least 5 minutes before handling.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always keep case closed while operating.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power cord is never crimped or damaged. Check the device and the power cord from time to time.
- If the lens is obviously damaged, it has to be replaced to prevent its functions from being impaired, due to cracks or deep scratches.
- If device was dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. Device must be installed out of reach of children. Never leave the unit running unattended.
- Never attempt to bypass the thermostatic switch or fuses.
- For replacement, use fuses of same type and rating only.
- The user is responsible for correct positioning and operating of the Studio Beam 575.
- The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- During the initial start-up, some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.
- Repairs, servicing and electrical connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.





## CAUTION! Eyedamages!!! Avoid looking directly into the lightsource!!! (meant especially for epileptics)!!!



## **Operating Determinations**

- This device is not designed for permanent operation. Regular operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light-output and the illuminated surface must be bigger than 0,5 meter.
- The maximum ambient temperature ta = 40°C must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 40° C.
- If this device is operated in any other way than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash etc.

You endanger your own safety and the safety of others!

## Rigging

Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.


## Do not attempt the installation yourself !

Always let the installation be carried out by an authorized dealer !

## **Procedure:**

- If the Studio Beam is lowered from the ceiling or high joists, professional trussing systems can be used.
- Use a clamp to mount the Studio Beam, with the mounting-bracket, to the trussing system.
- The Studio Beam must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the Studio Beam, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.



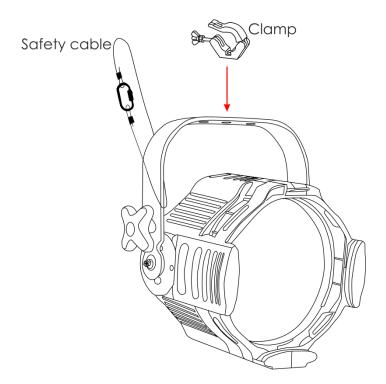

Improper installation can cause serious injuries and/or damage of property!

#### Connection with the mains

Connect the device to the mains with the power plug. Always check if the right color cable is connected to the right place.

| International | EU Cable     | UK Cable | US Cable      | Pin               |
|---------------|--------------|----------|---------------|-------------------|
| L             | BROWN        | RED      | YELLOW/COPPER | PHASE             |
| Ν             | BLUE         | BLACK    | SILVER        | NEUTRAL           |
|               | YELLOW/GREEN | GREEN    | GREEN         | PROTECTIVE GROUND |

Make sure that the device is always connected properly to the earth!

Improper installation can cause serious damage to people and property!









Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail <u>aftersales@highlite.nl</u> and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause of the return. Be sure to properly pack fixture as any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

# Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:

- 01) Your name.
- 02) Your address.
- 03) Your phone number.
- 04) A brief description of the symptoms.

## Claims

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that the fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless agreed otherwise in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period, complaints will not be handled anymore.

Complaints will only be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.



## Description of the device

## Features


The Showtec Studio Beam 575 is a parcan with high output and great effects.

- Lamp: HPL-575
- Lamp socket: G9,5
- Capacity: max 600W
- Input voltage: 230V, 50Hz
- Power cable 0,9m
- Filter frame: Included
- Housing: Metal & flame retardant plastic
- Reflector: aluminum
- IP rating: IP20
- Included 4 lenses: VNSP/NSP/MFL/WFL
- Dimensions: 260 x 220 x 290 mm (LxWxH)
- Weight: 2,90 kg

## Optional accessories

30696 Filter frame for Studio Beam 30698 Barndoor for Studio Beam 80812G HPL-575 GE 80812O HPL-575 Osram

#### Overview

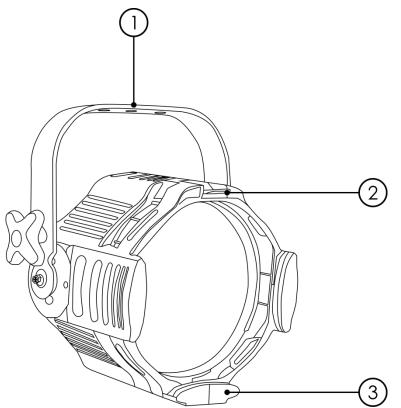


- 01) Mountingbracket with inclination screw
- 02) Filter frame retaining clip
- 03) Filter frame holder





Fig. 01

## Lamp housing

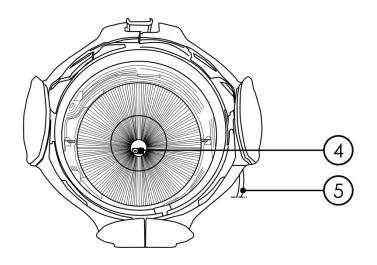

04) Lamp socket G9,5

05) Power cable 0,9m

Side

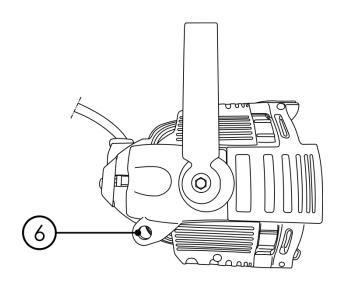


Fig. 03

Fig. 02

#### 06) Safety Eye

## Installation

Remove all packing materials from the Studio Beam 575. Check that all foam and plastic padding is removed. Connect all cables.

Do not supply power before the whole system is set up and connected properly. Always disconnect from electric mains power supply before cleaning or servicing.

Damages caused by non-observance are not subject to warranty.

## Installing the Lamp

The Showtec Studio Beam 575 uses the HPL-575 (ordercode <u>80812G</u> /<u>80812O</u>) as manufactured by all popular manufacturers. Use only the appropriate lamp for your unit.

Note that, product versions that use other lamps, may be offered in the future. Check your product specification label for information.

## Always disconnect from electric mains power supply before changing lamps.


The lamp has to be replaced when it is damaged or deformed due to the heat.

**Do not install lamps with a higher wattage**! Lamps with a higher wattage generate temperatures the device was not designed for.

#### Damages caused by non-observance are not subject to warranty.

#### Procedure:

- 01) Disconnect the Studio Beam 575 from power before installing the lamp.
- 02) Loosen the knurled bolt and remove the lamp housing (Fig.04).
- 03) Remove the lamp from the box and hold it **by the base**. Read lamp instructions. **Do not touch the lamp bulb glass**. Oil on hands shortens the lamp's lifespan. If you touch the bulb glass, wipe it off with a clean, lint free towel and rubbing alcohol.
- 04) Insert the lamp and fit it firmly within the lamp brackets (Fig.05).
- 05) Replace the lamp housing (Fig.06).
- 06) The Studio Beam 575 is now ready to use.

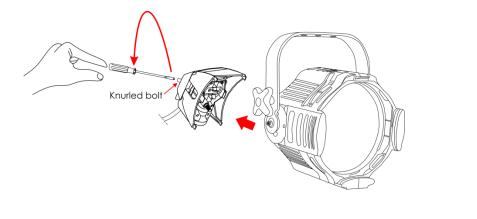

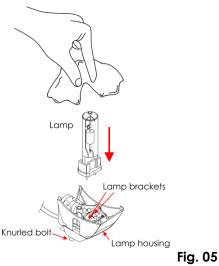


Fig. 04

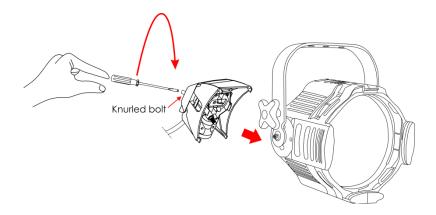


Fig. 06



## Set Up and Operation


Follow the directions below, as they pertain to your preferred operation mode.

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa. Always disconnect from electric mains power supply before cleaning or servicing. Damages caused by non-observance are not subject to warranty.

#### Filter frame retaining clip

- 01) Release the retaining clip by pushing it sideways. The clip will open.
- 02) Insert the filter frame into the bracket.
- 03) Press the retaining clip down to lock in order to secure the filter frame in position.
- 04) Make sure the filter frame is locked in position with the retaining clip before hanging the Studio Beam.

Retaining clip in the locked position

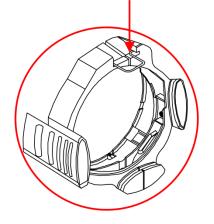


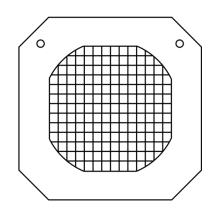


Fig. 07


## **Included** lenses



Very narrow spot Clear glass 15° round-shaped beam




Medium flood Fewer facets, 6 x 22 mm 21° x 34° oblong-shaped beam



Narrow spot Stipple glass 19° round-shaped beam

WFL



Wide flood More facets, 6 x 12 mm 30° x 51° oblong-shaped beam


Fig. 08



## Studio Beam 575

#### Changing the lens

- 01) Place the fixture with the front facing you. Tilt the fixture slightly.
- 02) Position the rotation ring with the spring at the top of the fixture, below the retaining clip.
- 03) Hold the lens by the edge, so that the convex side faces the back side of the device (Fig.09).
- 04) Slide the lens behind the lens catchers and place its base behind the tabs on the bottom of the rotation ring.
- 05) Gently push the lens until it is positioned properly.

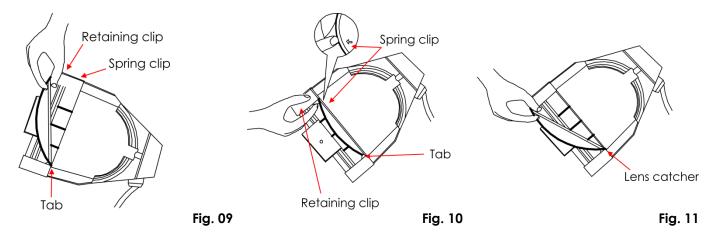

#### **Removing the lens**



#### The CDM lenses become hot, while operating the device. Let the device cool down before removing a lens.



- 01) Place the fixture on a flat surface.
- 02) Position the lens rotating ring in the way that its spring clip is situated at the top of the unit.
- 03) Tilt the front of the fixture down by at least 45°.
- 04) Press the spring clip to release the lens (Fig.10).
- 05) Allow the lens to slide forward and rest upon the lens catchers (Fig.11).
- 06) Carefully remove the lens.

## Maintenance

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by an expert after every four years in the course of an acceptance test. The operator has to make sure that safety-relating and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

- 01) All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
- 02) There may not be any deformations on housings, fixations and installation spots.
- 03) Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
- 04) The electric power supply cables must not show any damages or material fatigue.

The Studio Beam 575 requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe lens clean with glass cleaner and a soft cloth. Do not use alcohol or solvents.

The front lens will require weekly cleaning, as smoke-fluid tends to build up residues, reducing the lightoutput very quickly.

## Changing the Lamp

- 01) Disconnect mains power supply. Allow the fixture to cool for at least 15 minutes before handling and replacing lamp.
- 02) Read lamp instructions.
- 03) Follow directions for installing a new lamp page 9.

## Cleaning VNSP, NSP, MFL and WFL glass lenses

- 01) Place the fixture with the front facing you. Tilt the fixture slightly (Fig.10).
- 02) Position the rotation ring with the spring at the top of the fixture, below the retaining clip.
- 03) Hold the lens by the edge, so that the convex side faces the back side of the device (Fig.09).
- 04) Dampen a clean lint-free cloth with vinegar or household ammonia. You may also use water, but it will leave spots that can be removed by gently polishing the lens with a clean and dry cloth.
- 05) Starting from the center, gently wipe the lens.
- 06) Gently push the lens until it is positioned properly.

## Troubleshooting

## No Light

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, follow the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out the following steps.

If the light effect does not operate properly, refer servicing to a technician.

- Response: Suspect two potential problem areas: the power supply and the lamp.
- 01) Power supply. Check that the unit is plugged into an appropriate power supply.
- 02) The lamp. Replace the old lamp with a new one with the same specifications. See page 12 for replacing the lamp.
- 03) If all of the above appears to be O.K., plug the unit in again.
- 04) If you are unable to determine the cause of the problem, do not modify the Studio Beam 575, as this may damage the unit and the warranty will become void.
- 05) Return the device to your Showtec dealer.

| Problem   | Probable cause(s)   | Solution  |  |
|---|---|---|--|
| One or more<br>fixtures do not<br>function at all | No power to the fixture   | Check if power is switched on and cables are plugged in                               |  |
|   | Fixture is too hot  | <ul><li>Allow the fixture to cool down</li><li>Turn up the air conditioning</li></ul> |  |
| No light or lamp                                  | lamp damaged  | Disconnect the fixture and replace the lamp   |  |
| cuts out<br>intermittently                        | The power supply settings do not<br>match local AC voltage and<br>frequency | Disconnect fixture. Check settings and correct if necessary                           |  |



# **Product Specifications**

| P   |                                 |  |
|---|---------------------------------|--|
| Model:                                    | Showtec Studio Beam 575         |  |
| Input voltage:                            | 230V, 50Hz                      |  |
| Capacity:                                 | max 600W                        |  |
| Lamp socket:                              | G9,5                            |  |
| Housing:                                  | Metal & flame retardant plastic |  |
| Reflector:                                | aluminum                        |  |
| IP rating:                                | IP20                            |  |
| Power cable 0,9m                          |                                 |  |
| Filter frame:                             | Included                        |  |
| Included 4 lenses:                        | VNSP/NSP/MFL/WFL                |  |
| Dimensions:                               | 260 x 220 x 290 mm (LxWxH)      |  |
| Weight:                                   | 2,90 kg                         |  |
| 1   |                                 |  |
| Lamp                                      |                                 |  |
| 80812G GE HPL/575 (240V; 575W)*           |                                 |  |
| 808120 Osram HPL/575 (240V; 575W)*        |                                 |  |
| Max. ambient temperature $t_a$ :          | 40°C                            |  |
| Max. housing temperature t <sub>B</sub> : | 80°C                            |  |
|   |                                 |  |
| Minimum distance:                         |                                 |  |
| Minimum distance from flammable surfaces: | 0,5 m                           |  |
| Minimum distance to lighted object: 1 m   |                                 |  |


\*: Versions for other lamps may be produced. Please check the specification label on your product.


Design and product specifications are subject to change without prior notice.

CE

Website: <u>www.Showtec.info</u> Email: <u>service@highlite.nl</u>

# Dimensions

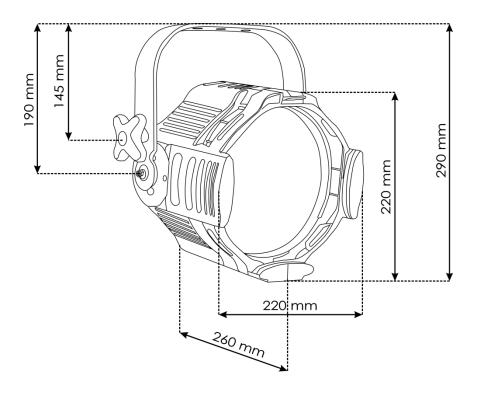

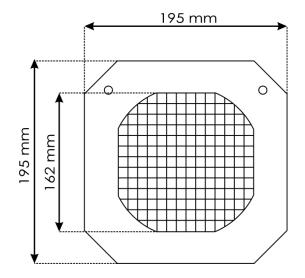





©2016 Showtec