

CT-4010T


OPERATION MANUAL

CT-4010T IS A 4-CHANNEL CONTROLLER, POWER SUPPLY INPUT EITHER AC 120V OR 230V IS AVAILABLE.

IT FEATURES 16 AVAILABLE PRESET PATTERNS, MUSIC SYNCHRONIZATION AND AUTO/MANUAL MANIPULATION WITH FULL ON, STANDBY, SPEED CONTROL AND MUSIC SENSITIVITY CONTROL.

FEATURE:

FRONT PANEL:

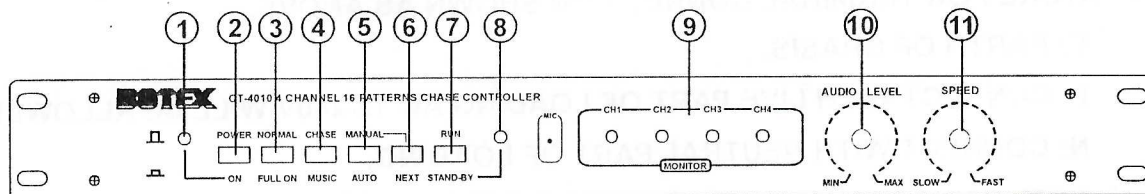

1. POWER INDICATOR

INDICATOR FOR POWER.

2. POWER ON SWITCH

TURN ON MAIN POWER AND NEAR-BY INDICATOR WILL BE ILLUMINATED.

3. FULL ON BUTTON

AT NORMAL, AUTOMATICALLY CONTROL UNLESS PRESSING.

4. MUSIC/CHASE BUTTON

AT NORMAL CONTROLLED BY MUSIC:

5. MANUAL/AUTO BUTTON

IT HAS 16 AVAILABLE PROGRAM PRESET PATTERNS, AT AUTOMATICALLY WITH SEQUENCE CHANGE WHEN PRESSING.

6. NEXT

STEP BY STEP TO CHOOSE THE 16 PROGRAM PATTERNS AT EACH PRESSING.

7,8. STAND BY LED INDICATOR

AFTER PRESSING, IT IS NOT AFFECTED BY EXTERNAL CONTROL.

9. INDICATOR OF MONITOR

INDICATOR FOR CHANNEL.

10. AUDIO LEVEL KNOB


ADJUSTS THE RANGE OF MUSIC SENSITIVITY FROM LOW TO HIGH WITH CLOCKWISE

11. SPEED CONTROL KNOB

CONTROL SPEED AND ADJUST THE RANGE OF SPEED FROM SLOW TO FAST.



REAR COVER

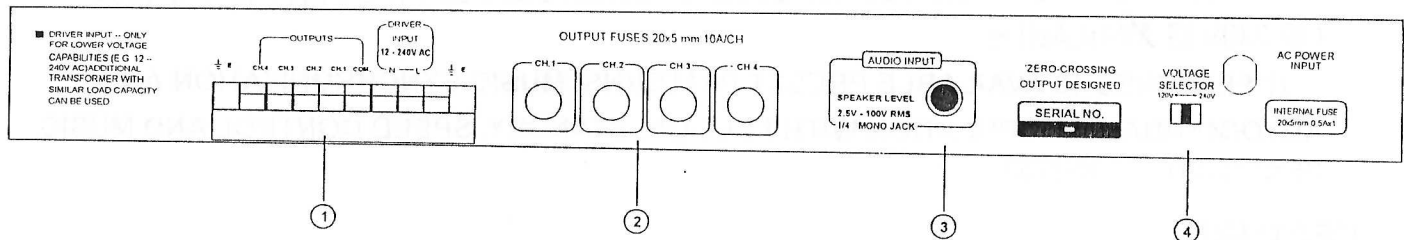

1. OUTPUTS

FEATURE FOR TERMINAL CONNECTION SHOWN AS ABOVE.

E: EARTH OF CHASIS.

L: CONNECT WITH LIVE PART OF LOADING AC 12-240V WILL BE ALLOWED.

N: CONNECT WITH NEUTRAL PART OF LOADING.

COM: ZERO COMMON CONNECT WITH LOADING.

CH1-CH4: CHANNEL OF LOADING.

2. OUTPUT FUSES

INSTALL WITH 20x5 mm 250V 10A FUSE, REPLACE THE FUSE WITH ANTI-CLOCKWISE RELEASE.

3. AUDIO INPUT

SIGNAL INPUT 2.5V-100V WITH 0.25 INCH PLUG.

4. AC 120V/240V SELECTOR

POWER INPUT 120VAC 50/60Hz OR 230VAC $\pm 10\%$ 50Hz BY SELECTOR.

5. AC POWER INPUT

AC POWER INPUT CABLE TO BE SELECT REFER TO INPUT CURRENT AND TYPE OF VOLTAGE INPUT.

NOT ALLOWED TO BE INSERTED AT UNSUITABLE POWER SUPPLY SOCKET WITH UNPROPER WAY.

END